# Sample bathroom

Groutgrid project summary · 23 November 2026

| Total cost | Boxes to buy | Tiled area |
|---|---|---|
| **A$758.60** | **14** | **10.08 m²** |

## Shopping list

Includes 10 % spares, rounded up to whole boxes

| Tile | Boxes | Per box | Tiles | Covers | Cost |
|---|---|---|---|---|---|
| Forest porcelain 300 × 300 | 6 | 10 | 60 | 5.40 m² | A$359.40 |
| Slate rectangle 300 × 148.5 | 8 | 20 | 160 | 7.13 m² | A$399.20 |
| **Total** | **14** | | | **12.53 m²** | **A$758.60** |

## Rooms

4.32 m² floors · 5.76 m² walls

| Surface | Tile | Area | Whole | Cut | Reused |
|---|---|---|---|---|---|
| Sample bathroom / Floor | Forest porcelain 300 × 300 | 4.32 m² | 35 | 21 | 0 |
| Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 5.76 m² | 98 | 38 | 0 |

## Leftover offcuts

Full list on the next page

| Tile | Kept for later | Already reused | Kept area |
|---|---|---|---|
| Forest porcelain 300 × 300 | 13 | 0 | 0.06 m² |
| Slate rectangle 300 × 148.5 | 16 | 0 | 0.07 m² |

# Offcut inventory

Leftovers from rooms marked planning complete, with where each came from and whether a later room used it.

| ID | From | Tile | Size (mm) | Status |
|---|---|---|---|---|
| F1 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 18 × 300 | Kept |
| F2 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 18 × 300 | Kept |
| F3 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 18 × 300 | Kept |
| F4 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 18 × 300 | Kept |
| F5 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 18 × 300 | Kept |
| F6 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 300 × 156 | Kept |
| F7 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 300 × 156 | Kept |
| F8 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 300 × 12 | Kept |
| F9 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 300 × 12 | Kept |
| F10 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 300 × 12 | Kept |
| F11 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 300 × 12 | Kept |
| F12 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 300 × 12 | Kept |
| F13 | Sample bathroom / Floor | Forest porcelain 300 × 300 | 300 × 12 | Kept |
| F14 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 300 × 18 | Kept |
| F15 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 300 × 18 | Kept |
| F16 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 300 × 18 | Kept |
| F17 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 300 × 18 | Kept |
| F18 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 300 × 18 | Kept |
| F19 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 300 × 18 | Kept |
| F20 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 300 × 148.5 | Kept |
| F21 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 300 × 148.5 | Kept |
| F22 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 18 × 148.5 | Kept |
| F23 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 18 × 148.5 | Kept |
| F24 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 18 × 148.5 | Kept |
| F25 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 18 × 148.5 | Kept |
| F26 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 18 × 148.5 | Kept |
| F27 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 18 × 148.5 | Kept |
| F28 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 18 × 148.5 | Kept |
| F29 | Sample bathroom / Wall 1 | Slate rectangle 300 × 148.5 | 18 × 148.5 | Kept |

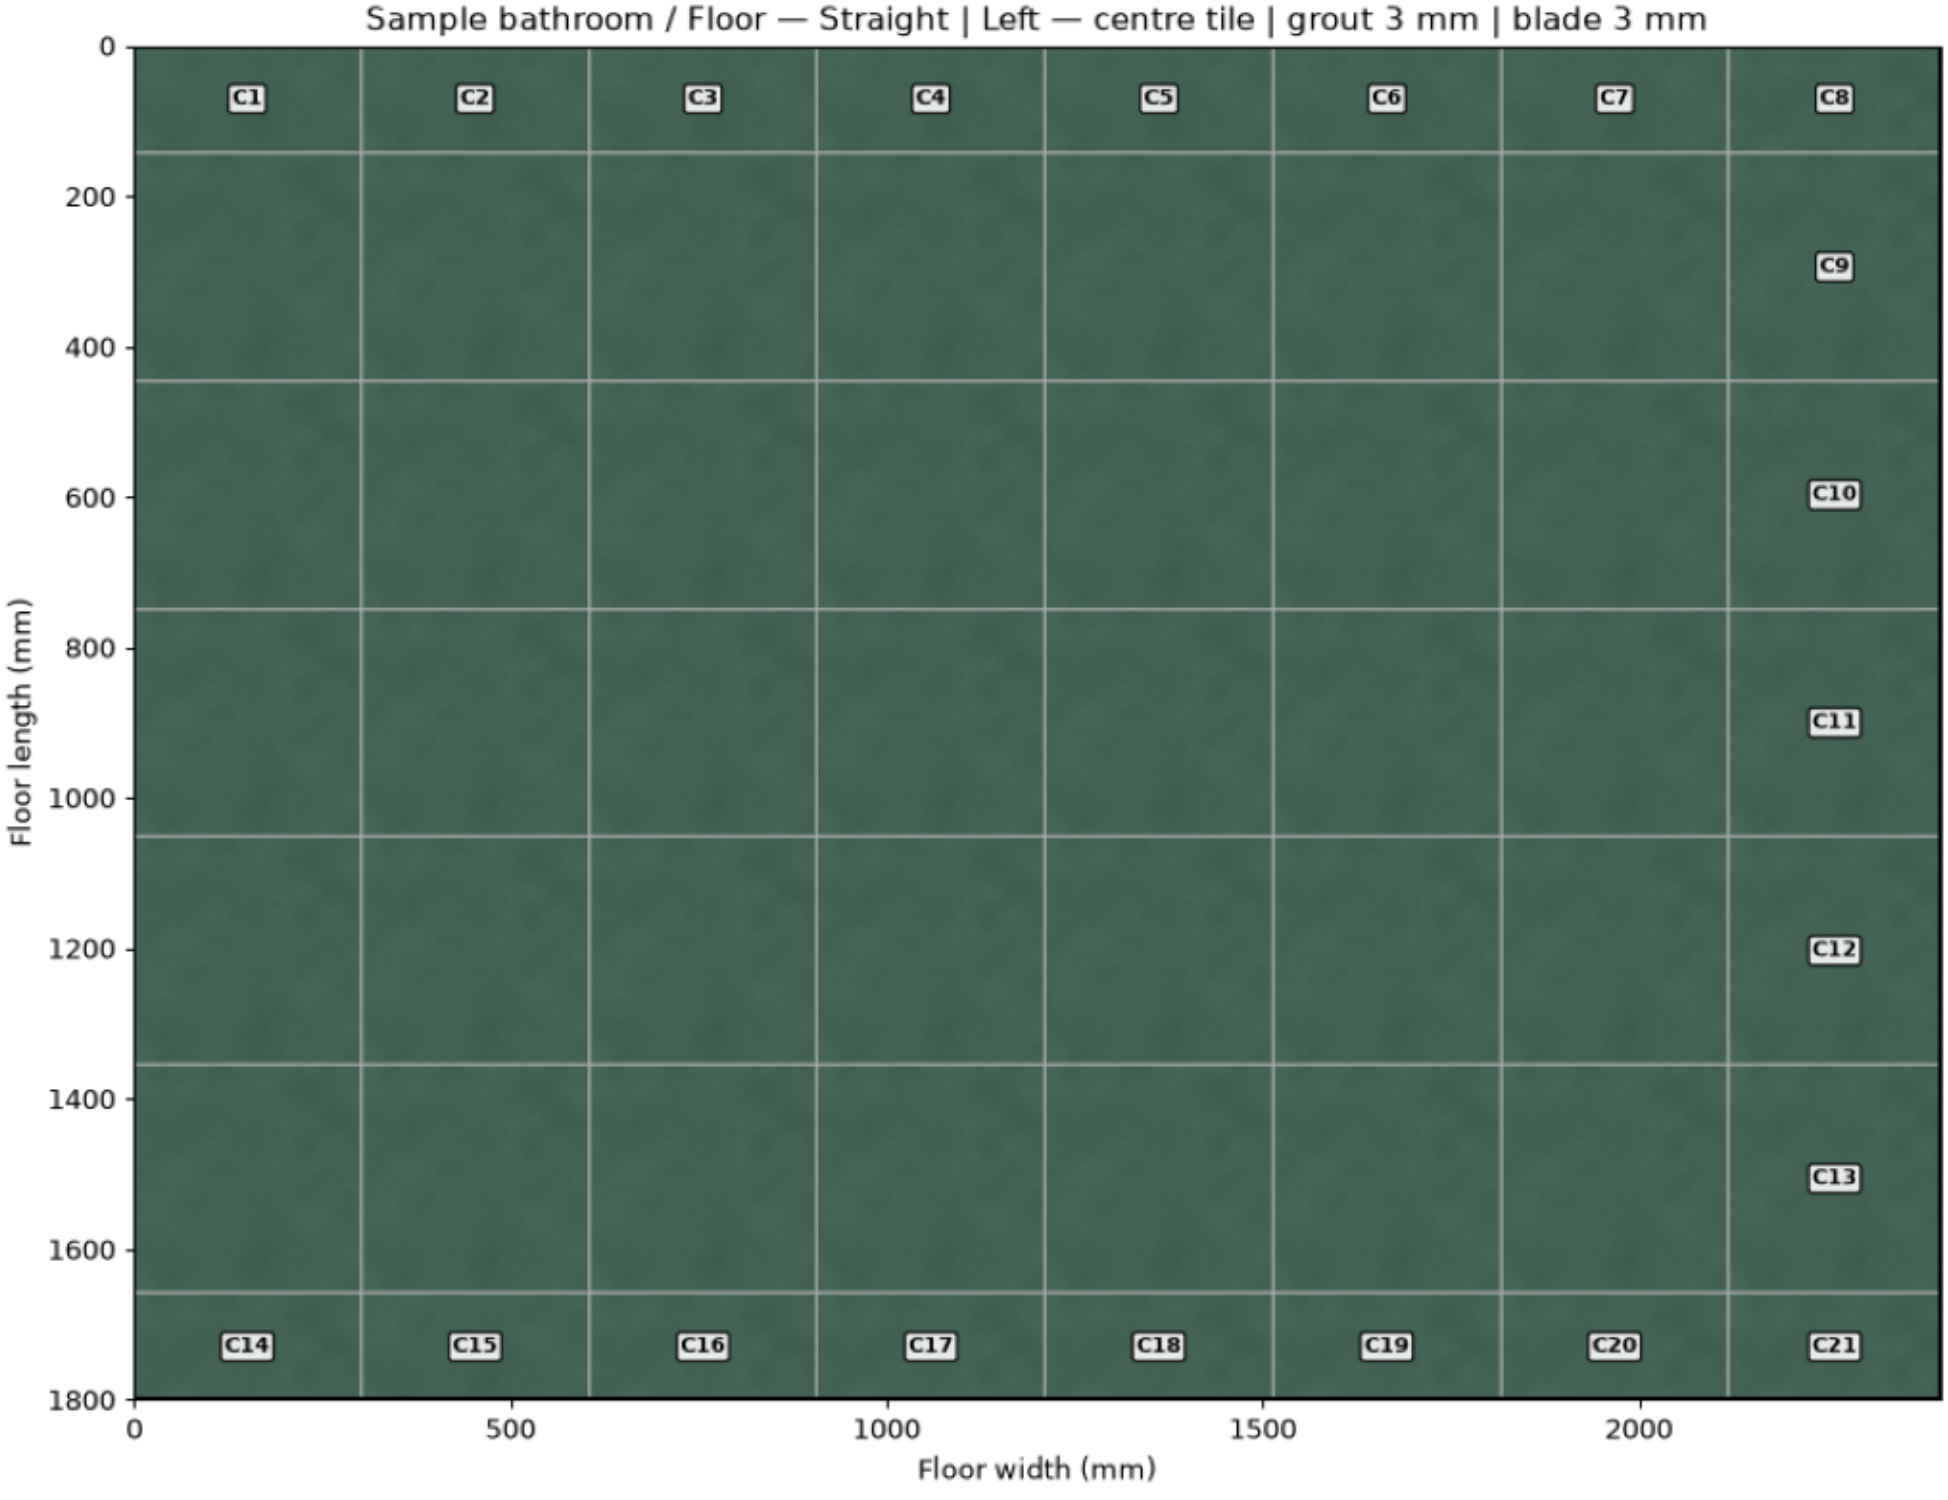
Sample bathroom / Floor — Straight | Left — centre tile | grout 3 mm | blade 3 mm
Floor length (mm)
Floor width (mm)
0
200
400
600
800
1000
1200
1400
1600
1800
0
500
1000
1500
2000
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
C16
C17
C18
C19
C20
C21

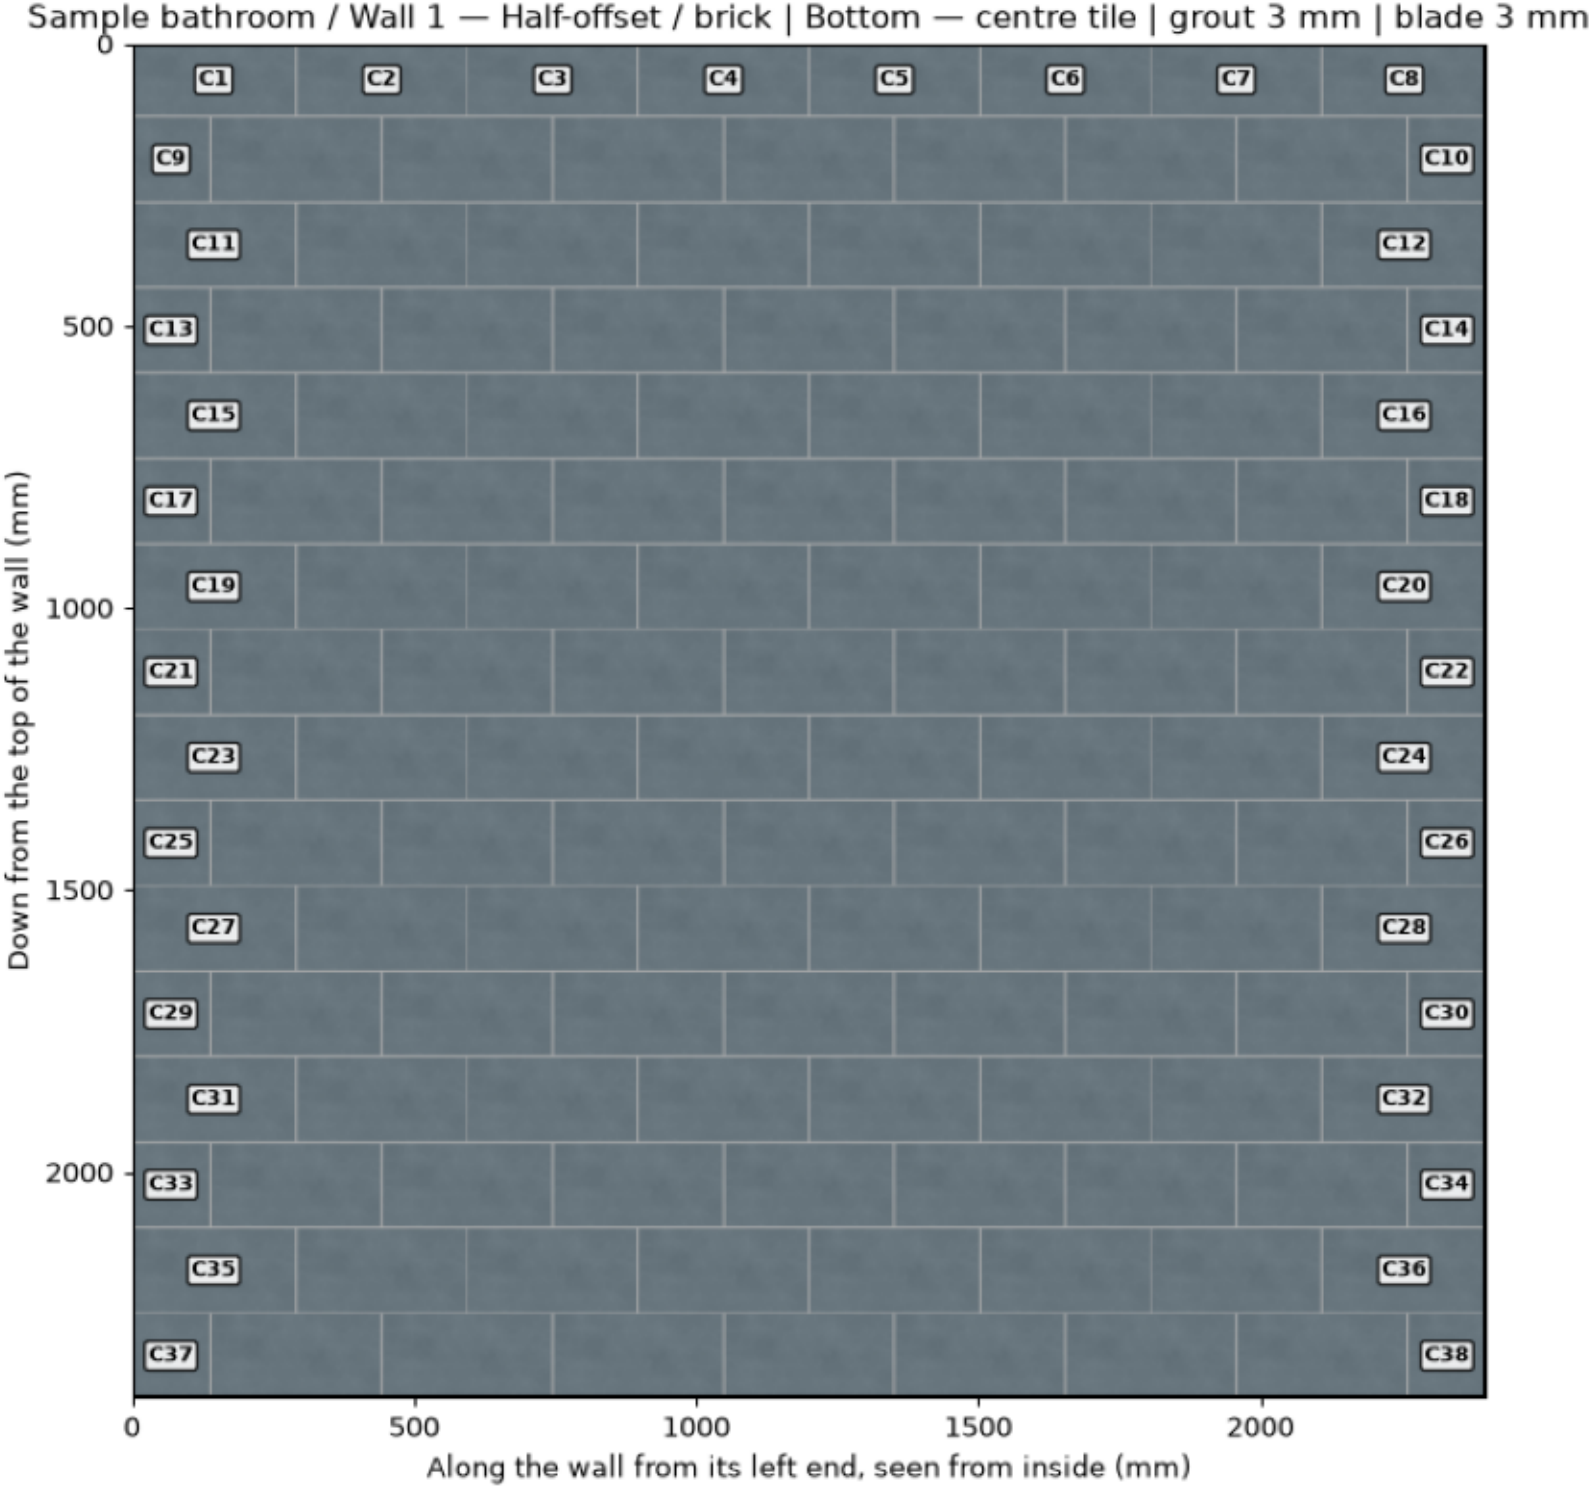
Sample bathroom / Wall 1 — Half-offset / brick | Bottom — centre tile | grout 3 mm | blade 3 mm
Down from the top of the wall (mm)
Along the wall from its left end, seen from inside (mm)
0
500
1000
1500
2000
C1
C2
C3
C4
C5
C6
C7
C8
C9
C10
C11
C12
C13
C14
C15
C16
C17
C18
C19
C20
C21
C22
C23
C24
C25
C26
C27
C28
C29
C30
C31
C32
C33
C34
C35
C36
C37
C38

# Cut list

One line per cut piece. Each piece also has a cut card with a drawing; shaped and curved cuts are detailed in the written instructions.

| Piece | Surface | Cut from | Mark at | Size (mm) | Rotate | Install at | Notes |
|---|---|---|---|---|---|---|---|
| C1 | Sample bathroom / Flo | New T6 | 0, 159 | 300 × 141 | 0° | 0, 0 | |
| C2 | Sample bathroom / Flo | New T7 | 0, 159 | 300 × 141 | 0° | 303, 0 | |
| C3 | Sample bathroom / Flo | New T8 | 0, 159 | 300 × 141 | 0° | 606, 0 | |
| C4 | Sample bathroom / Flo | New T9 | 0, 159 | 300 × 141 | 0° | 909, 0 | |
| C5 | Sample bathroom / Flo | New T10 | 0, 159 | 300 × 141 | 0° | 1212, 0 | |
| C6 | Sample bathroom / Flo | New T11 | 0, 159 | 300 × 141 | 0° | 1515, 0 | |
| C7 | Sample bathroom / Flo | New T12 | 0, 159 | 300 × 141 | 0° | 1818, 0 | |
| C8 | Sample bathroom / Flo | New T7 | 0, 0 | 279 × 141 | 0° | 2121, 0 | |
| C9 | Sample bathroom / Flo | New T1 | 0, 0 | 279 × 300 | 0° | 2121, 144 | |
| C10 | Sample bathroom / Flo | New T2 | 0, 0 | 279 × 300 | 0° | 2121, 447 | |
| C11 | Sample bathroom / Flo | New T3 | 0, 0 | 279 × 300 | 0° | 2121, 750 | |
| C12 | Sample bathroom / Flo | New T4 | 0, 0 | 279 × 300 | 0° | 2121, 1053 | |
| C13 | Sample bathroom / Flo | New T5 | 0, 0 | 279 × 300 | 0° | 2121, 1356 | |
| C14 | Sample bathroom / Flo | New T13 | 0, 0 | 300 × 141 | 0° | 0, 1659 | |
| C15 | Sample bathroom / Flo | New T13 | 0, 144 | 300 × 141 | 0° | 303, 1659 | |
| C16 | Sample bathroom / Flo | New T12 | 0, 0 | 300 × 141 | 0° | 606, 1659 | |
| C17 | Sample bathroom / Flo | New T11 | 0, 0 | 300 × 141 | 0° | 909, 1659 | |
| C18 | Sample bathroom / Flo | New T10 | 0, 0 | 300 × 141 | 0° | 1212, 1659 | |
| C19 | Sample bathroom / Flo | New T9 | 0, 0 | 300 × 141 | 0° | 1515, 1659 | |
| C20 | Sample bathroom / Flo | New T8 | 0, 0 | 300 × 141 | 0° | 1818, 1659 | |
| C21 | Sample bathroom / Flo | New T6 | 0, 0 | 279 × 141 | 0° | 2121, 1659 | |
| C1 | Sample bathroom / Wa | New T34 | 10.5, 21 | 289.5 × 127.5 | 0° | 0, 0 | |
| C2 | Sample bathroom / Wa | New T28 | 0, 21 | 300 × 127.5 | 0° | 292.5, 0 | |
| C3 | Sample bathroom / Wa | New T29 | 0, 21 | 300 × 127.5 | 0° | 595.5, 0 | |
| C4 | Sample bathroom / Wa | New T30 | 0, 21 | 300 × 127.5 | 0° | 898.5, 0 | |
| C5 | Sample bathroom / Wa | New T31 | 0, 21 | 300 × 127.5 | 0° | 1201.5, 0 | |
| C6 | Sample bathroom / Wa | New T32 | 0, 21 | 300 × 127.5 | 0° | 1504.5, 0 | |
| C7 | Sample bathroom / Wa | New T33 | 0, 21 | 300 × 127.5 | 0° | 1807.5, 0 | |
| C8 | Sample bathroom / Wa | New T35 | 0, 21 | 289.5 × 127.5 | 0° | 2110.5, 0 | |
| C9 | Sample bathroom / Wa | New T36 | 162, 0 | 138 × 148.5 | 0° | 0, 130.5 | |
| C10 | Sample bathroom / Wa | New T37 | 0, 0 | 138 × 148.5 | 0° | 2262, 130.5 | |
| C11 | Sample bathroom / Wa | New T14 | 10.5, 0 | 289.5 × 148.5 | 0° | 0, 282 | |
| C12 | Sample bathroom / Wa | New T15 | 0, 0 | 289.5 × 148.5 | 0° | 2110.5, 282 | |
| C13 | Sample bathroom / Wa | New T38 | 162, 0 | 138 × 148.5 | 0° | 0, 433.5 | |
| C14 | Sample bathroom / Wa | New T39 | 0, 0 | 138 × 148.5 | 0° | 2262, 433.5 | |
| C15 | Sample bathroom / Wa | New T16 | 10.5, 0 | 289.5 × 148.5 | 0° | 0, 585 | |

# Cut list (continued)

One line per cut piece. Each piece also has a cut card with a drawing; shaped and curved cuts are detailed in the written instructions.

| Piece | Surface | Cut from | Mark at | Size (mm) | Rotate | Install at | Notes |
|---|---|---|---|---|---|---|---|
| C16 | Sample bathroom / Wa | New T17 | 0, 0 | 289.5 × 148.5 | 0° | 2110.5, 585 | |
| C17 | Sample bathroom / Wa | New T40 | 162, 0 | 138 × 148.5 | 0° | 0, 736.5 | |
| C18 | Sample bathroom / Wa | New T41 | 0, 0 | 138 × 148.5 | 0° | 2262, 736.5 | |
| C19 | Sample bathroom / Wa | New T18 | 10.5, 0 | 289.5 × 148.5 | 0° | 0, 888 | |
| C20 | Sample bathroom / Wa | New T19 | 0, 0 | 289.5 × 148.5 | 0° | 2110.5, 888 | |
| C21 | Sample bathroom / Wa | New T42 | 162, 0 | 138 × 148.5 | 0° | 0, 1039.5 | |
| C22 | Sample bathroom / Wa | New T43 | 0, 0 | 138 × 148.5 | 0° | 2262, 1039.5 | |
| C23 | Sample bathroom / Wa | New T20 | 10.5, 0 | 289.5 × 148.5 | 0° | 0, 1191 | |
| C24 | Sample bathroom / Wa | New T21 | 0, 0 | 289.5 × 148.5 | 0° | 2110.5, 1191 | |
| C25 | Sample bathroom / Wa | New T43 | 141, 0 | 138 × 148.5 | 0° | 0, 1342.5 | |
| C26 | Sample bathroom / Wa | New T42 | 0, 0 | 138 × 148.5 | 0° | 2262, 1342.5 | |
| C27 | Sample bathroom / Wa | New T22 | 10.5, 0 | 289.5 × 148.5 | 0° | 0, 1494 | |
| C28 | Sample bathroom / Wa | New T23 | 0, 0 | 289.5 × 148.5 | 0° | 2110.5, 1494 | |
| C29 | Sample bathroom / Wa | New T41 | 141, 0 | 138 × 148.5 | 0° | 0, 1645.5 | |
| C30 | Sample bathroom / Wa | New T40 | 0, 0 | 138 × 148.5 | 0° | 2262, 1645.5 | |
| C31 | Sample bathroom / Wa | New T24 | 10.5, 0 | 289.5 × 148.5 | 0° | 0, 1797 | |
| C32 | Sample bathroom / Wa | New T25 | 0, 0 | 289.5 × 148.5 | 0° | 2110.5, 1797 | |
| C33 | Sample bathroom / Wa | New T39 | 141, 0 | 138 × 148.5 | 0° | 0, 1948.5 | |
| C34 | Sample bathroom / Wa | New T38 | 0, 0 | 138 × 148.5 | 0° | 2262, 1948.5 | |
| C35 | Sample bathroom / Wa | New T26 | 10.5, 0 | 289.5 × 148.5 | 0° | 0, 2100 | |
| C36 | Sample bathroom / Wa | New T27 | 0, 0 | 289.5 × 148.5 | 0° | 2110.5, 2100 | |
| C37 | Sample bathroom / Wa | New T37 | 141, 0 | 138 × 148.5 | 0° | 0, 2251.5 | |
| C38 | Sample bathroom / Wa | New T36 | 0, 0 | 138 × 148.5 | 0° | 2262, 2251.5 | |

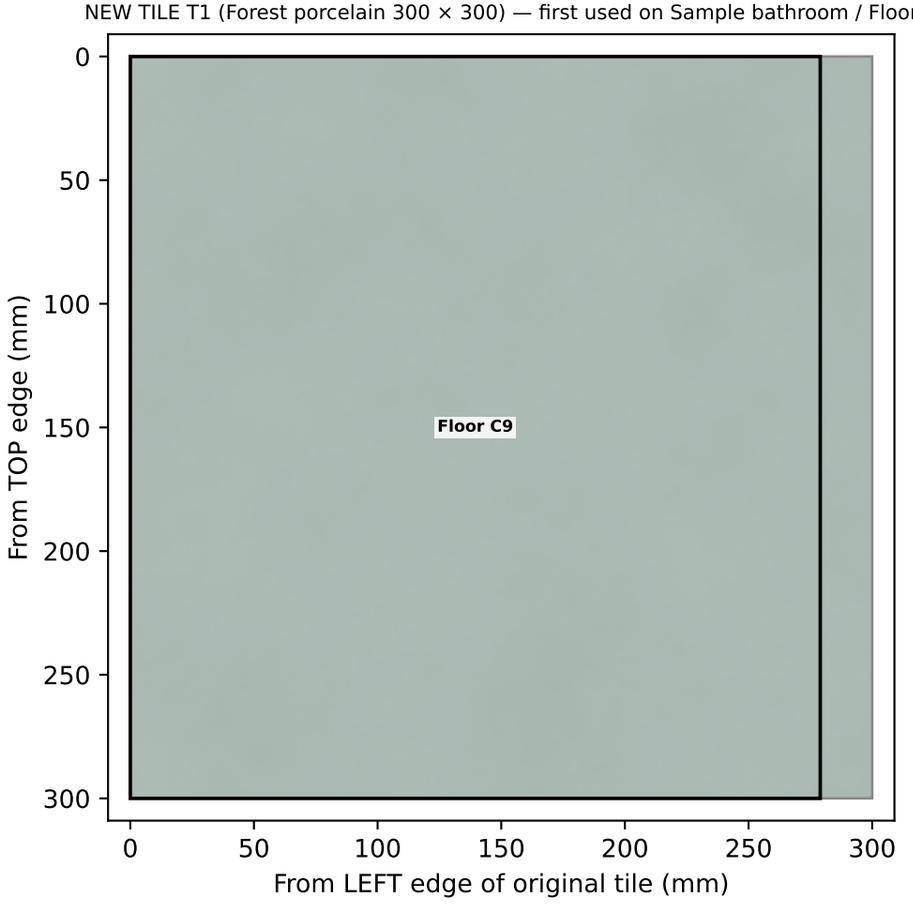
NEW TILE T1 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C9
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

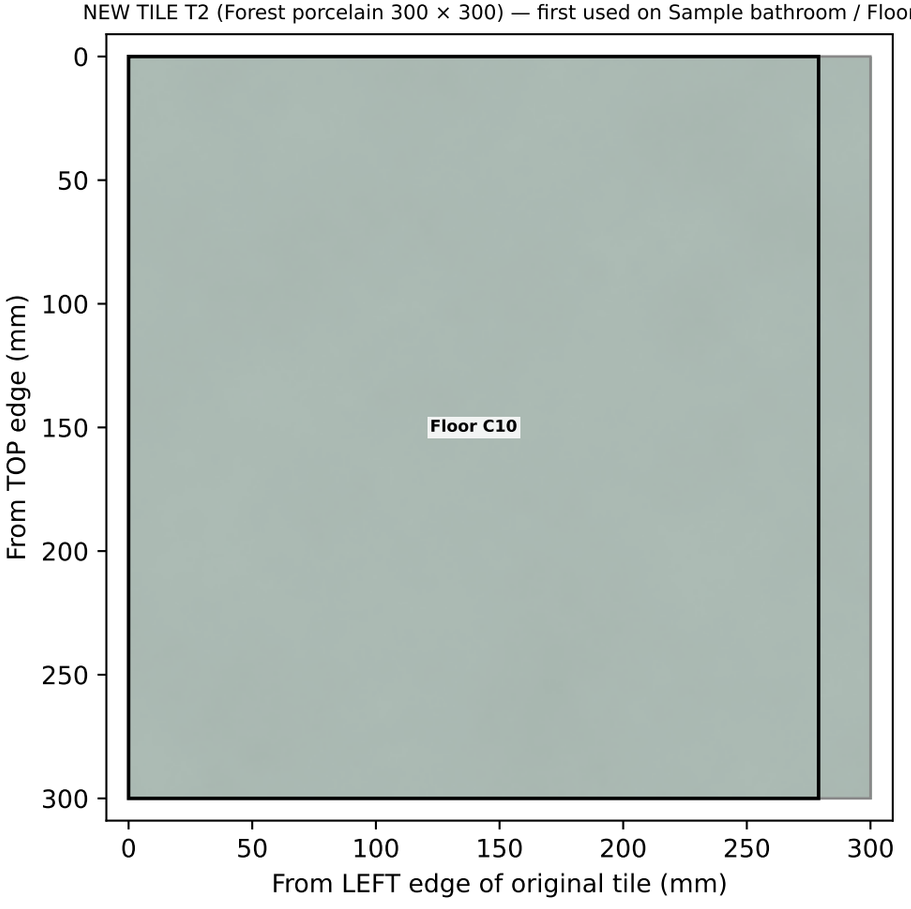
NEW TILE T2 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C10
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

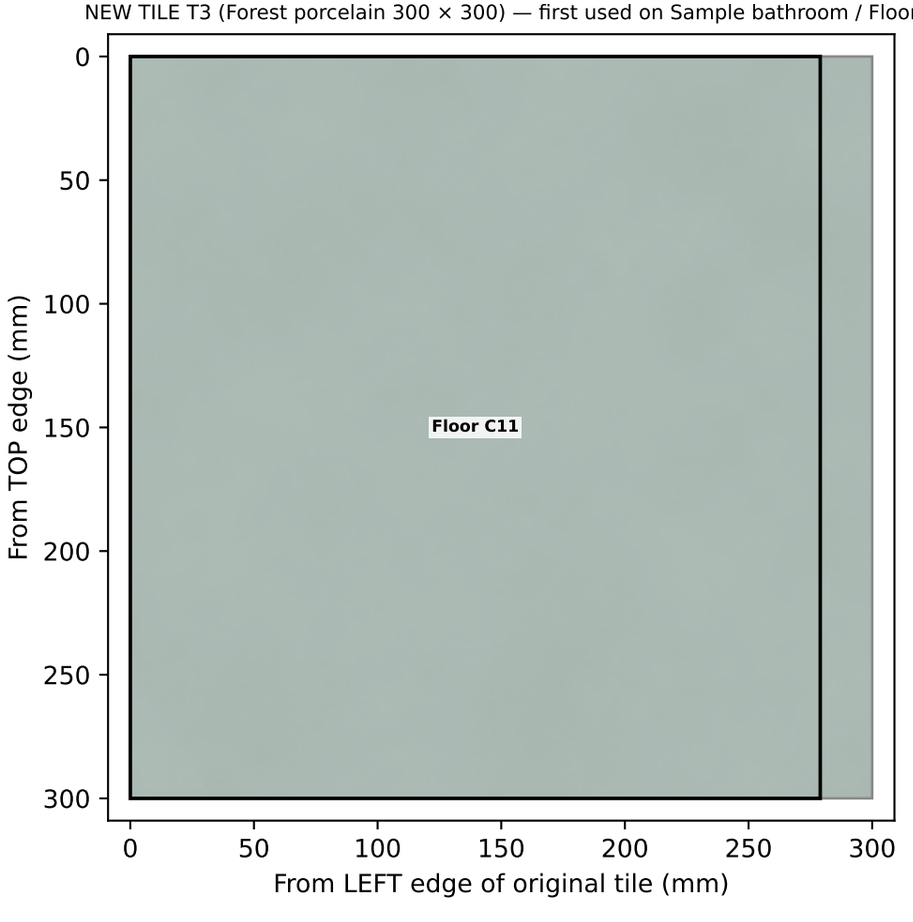
NEW TILE T3 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C11
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

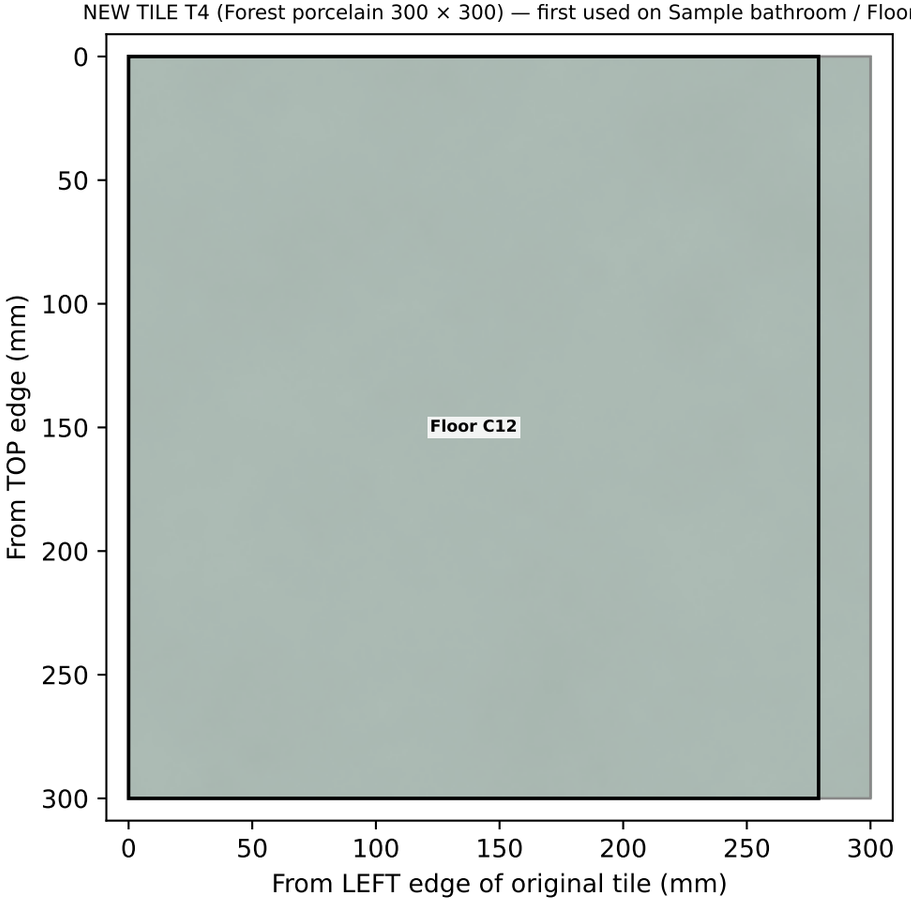
NEW TILE T4 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C12
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

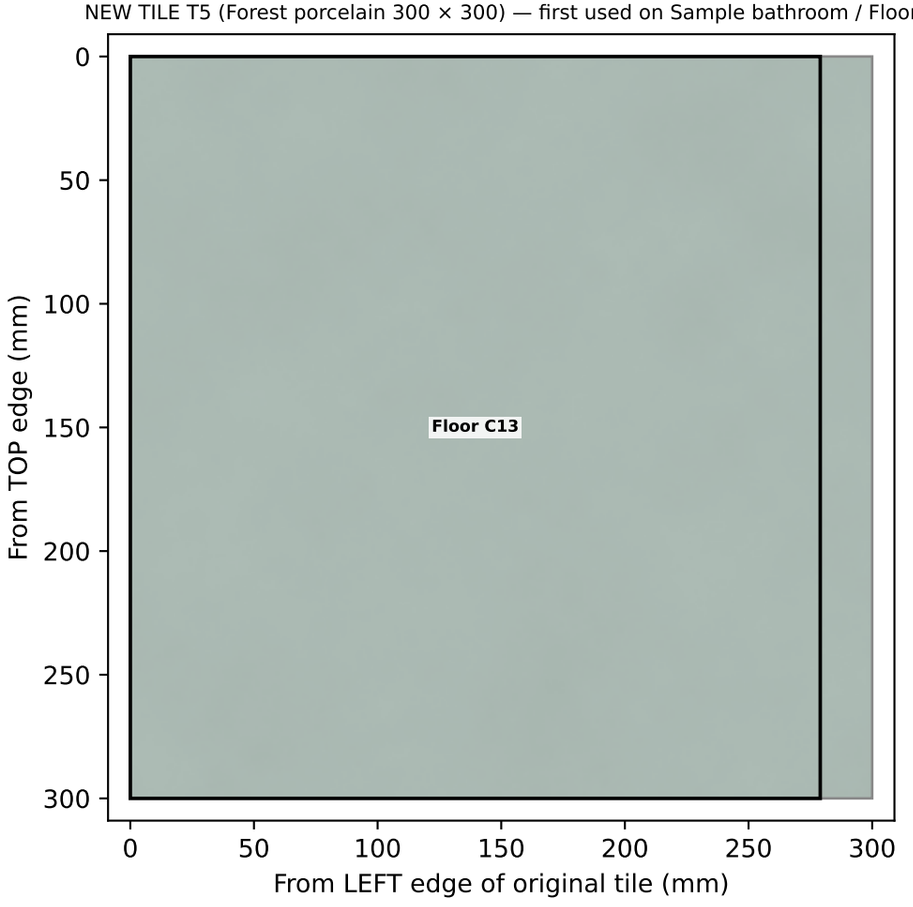
NEW TILE T5 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C13
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

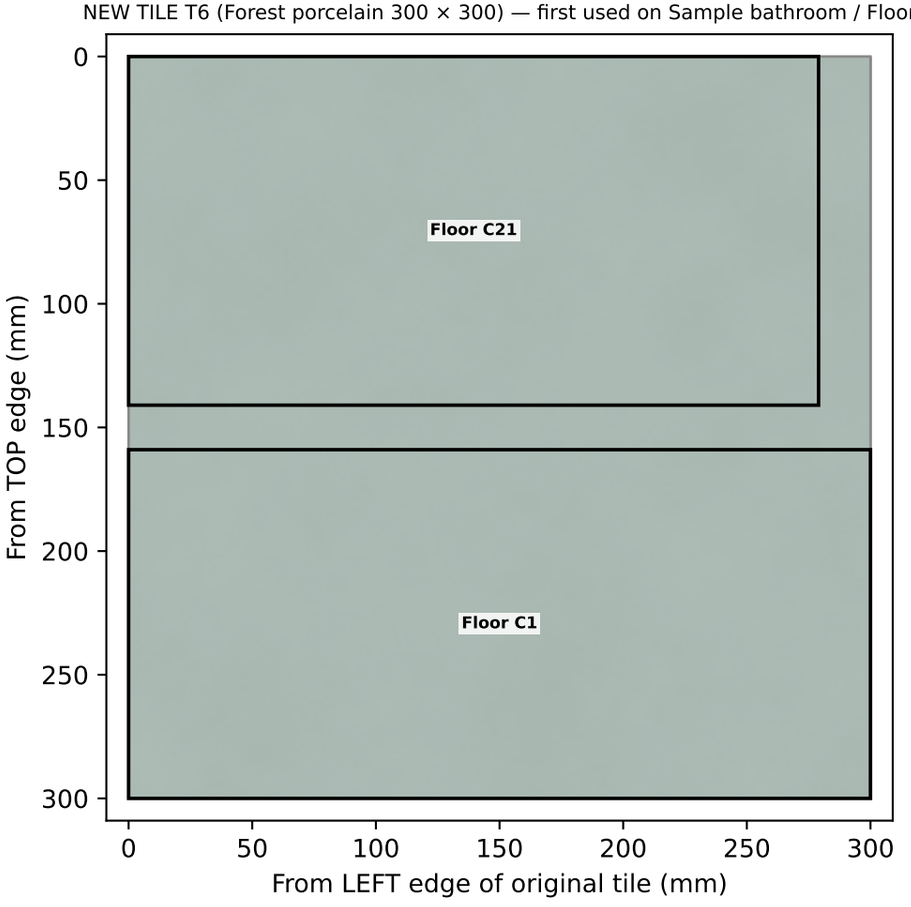
NEW TILE T6 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C21
Floor C1
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

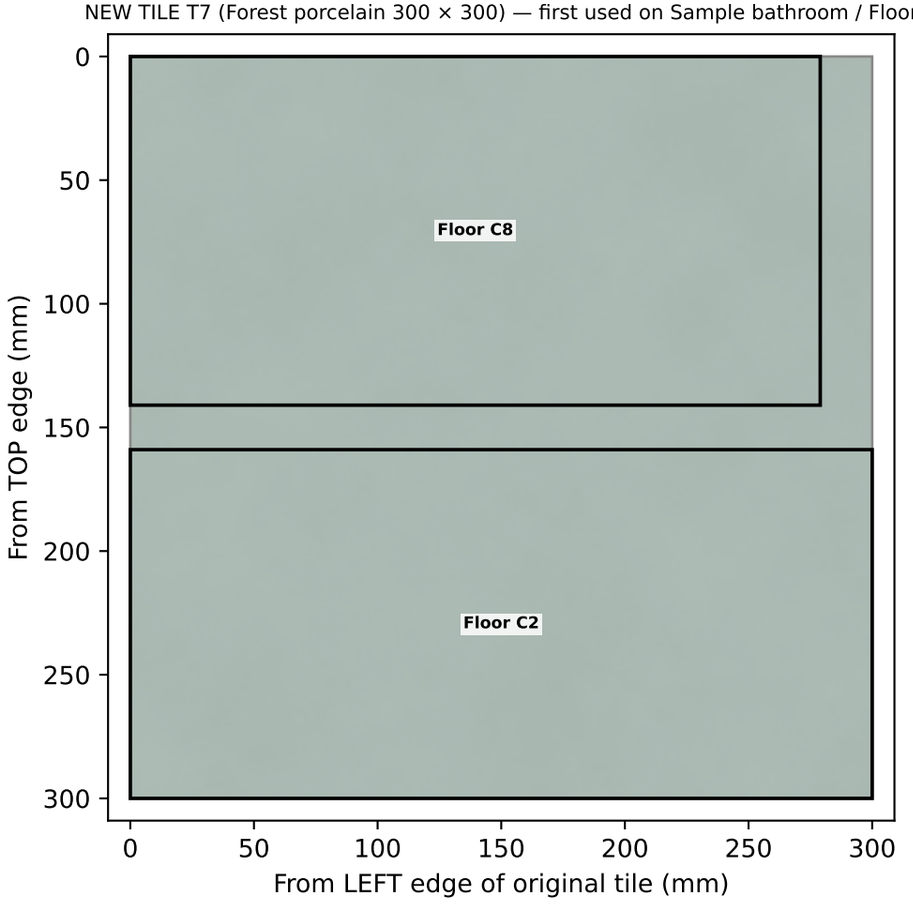
NEW TILE T7 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C8
Floor C2
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

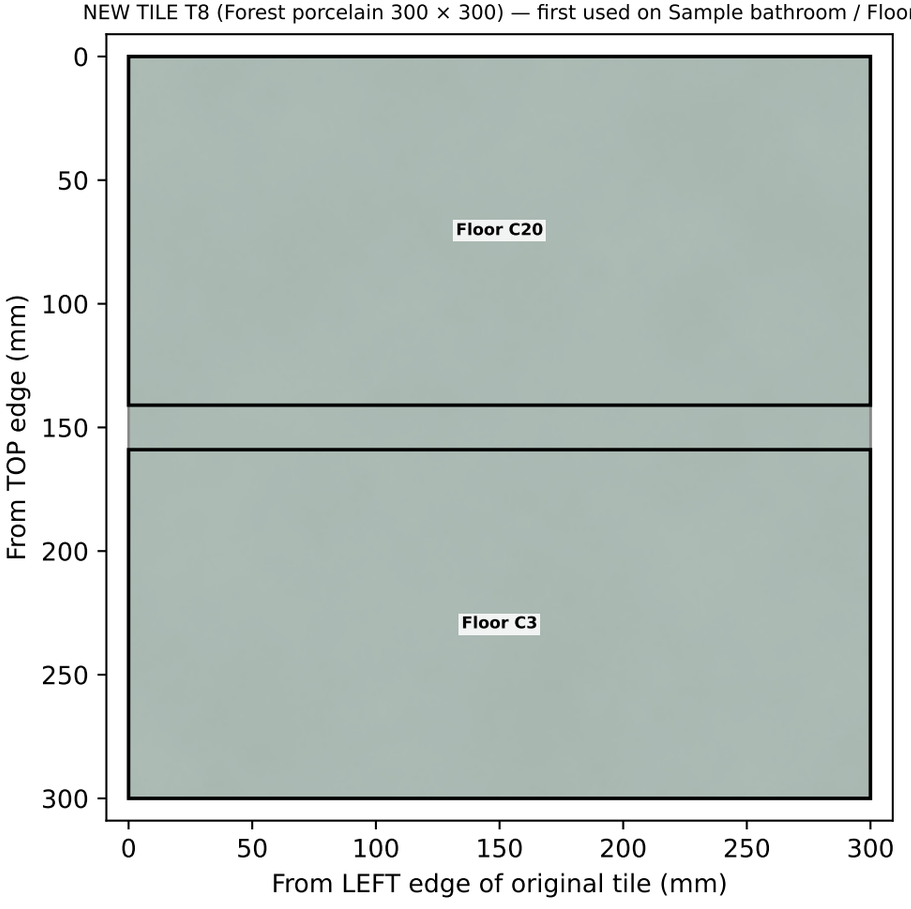
NEW TILE T8 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C20
Floor C3
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

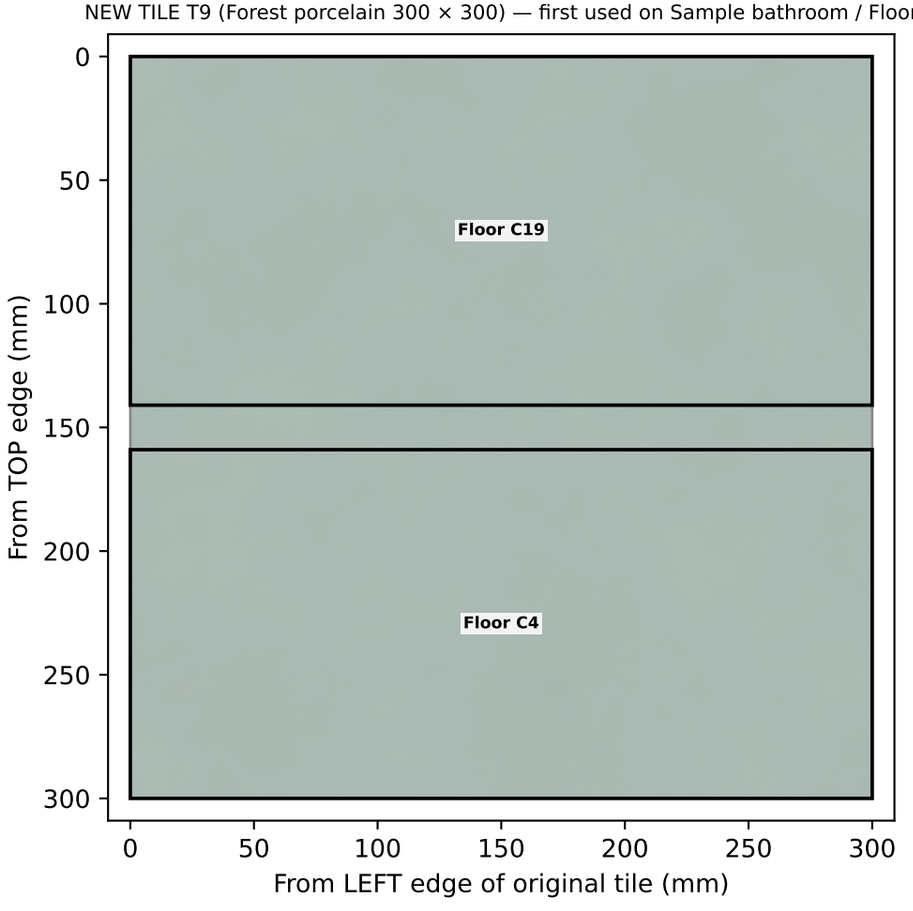
NEW TILE T9 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C19
Floor C4
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

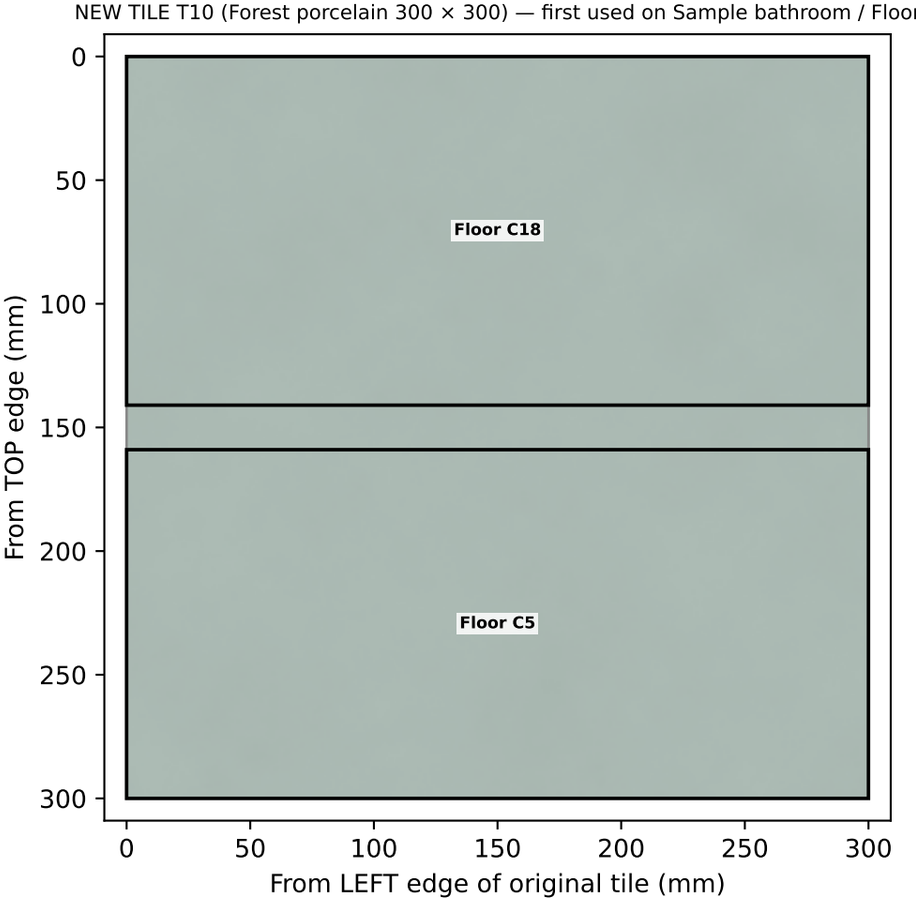
NEW TILE T10 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C18
Floor C5
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

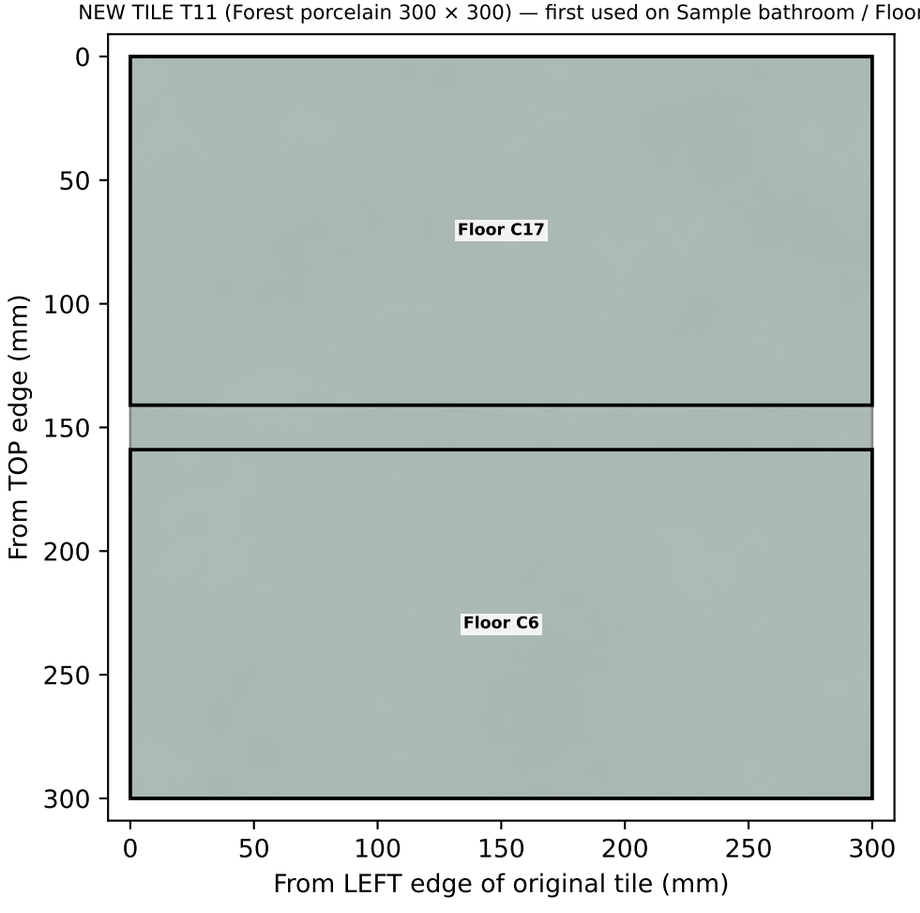
NEW TILE T11 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C17
Floor C6
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

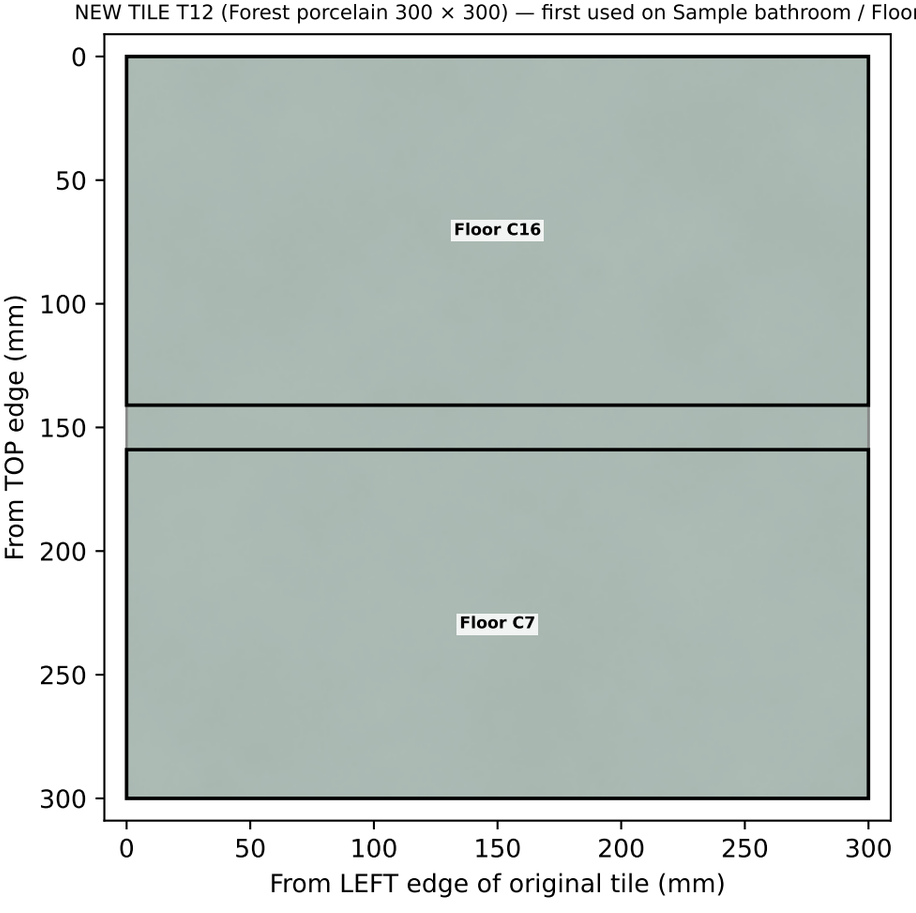
NEW TILE T12 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C16
Floor C7
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

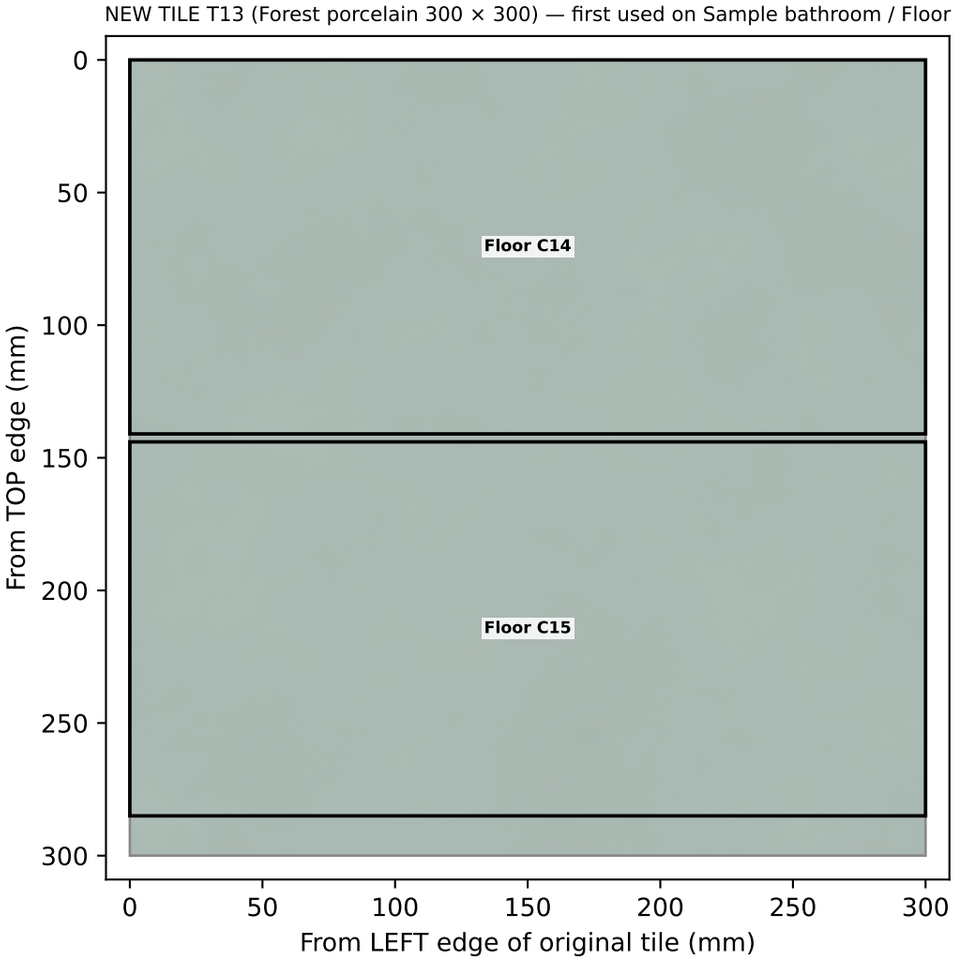
NEW TILE T13 (Forest porcelain 300 × 300) — first used on Sample bathroom / Floor
Floor C14
Floor C15
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
50
100
150
200
250
300

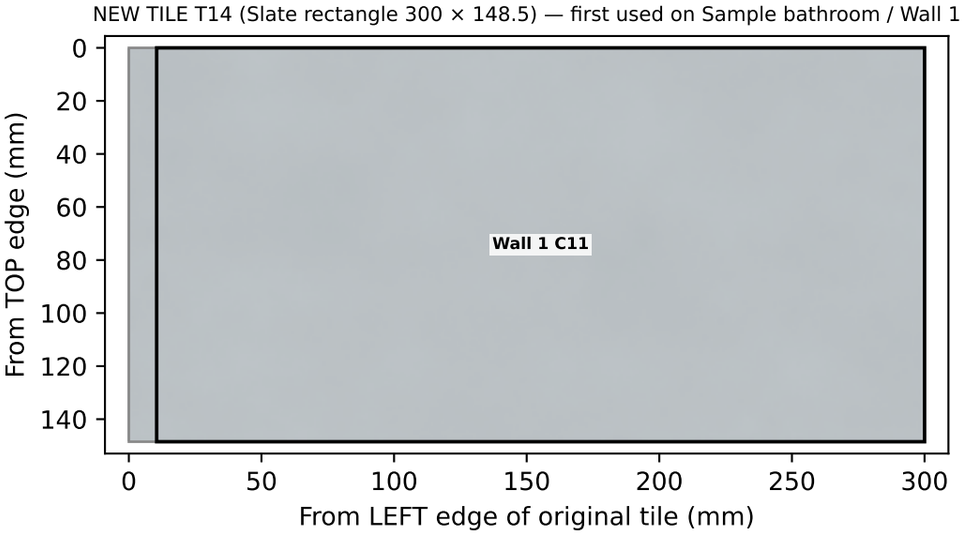
NEW TILE T14 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C11
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

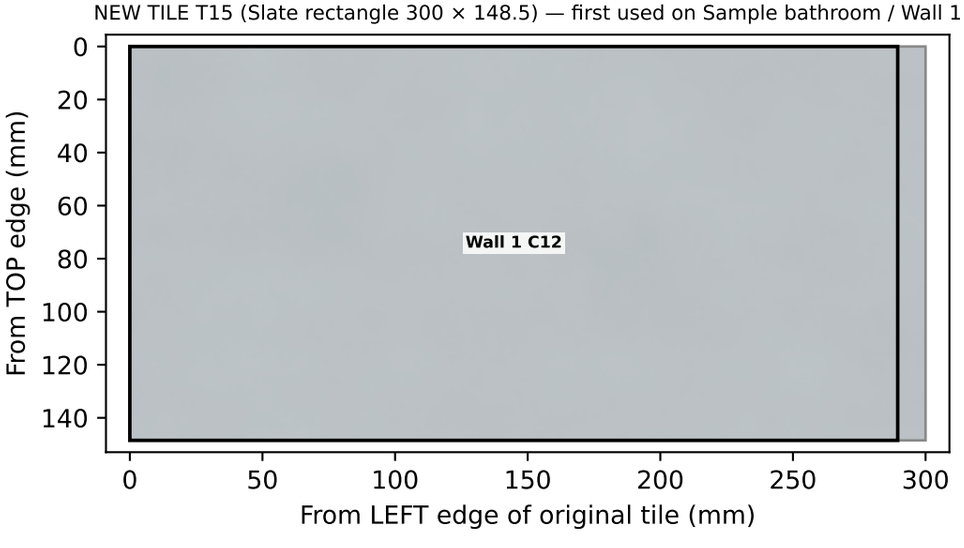
NEW TILE T15 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C12
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

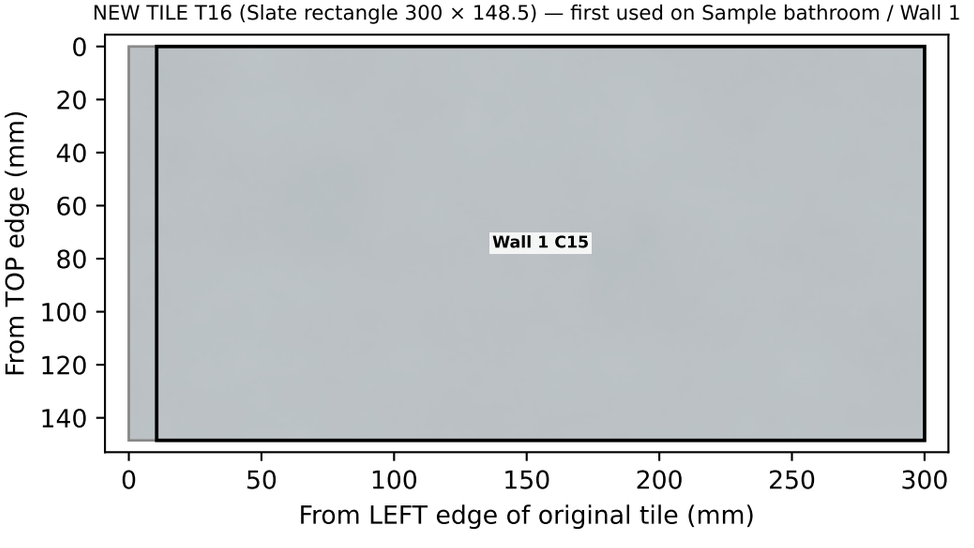
NEW TILE T16 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C15
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

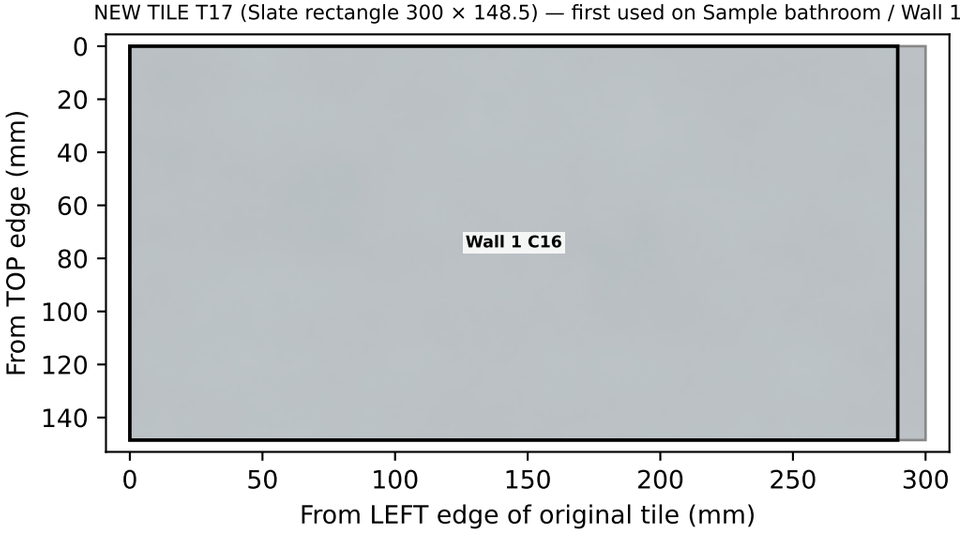
NEW TILE T17 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C16
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

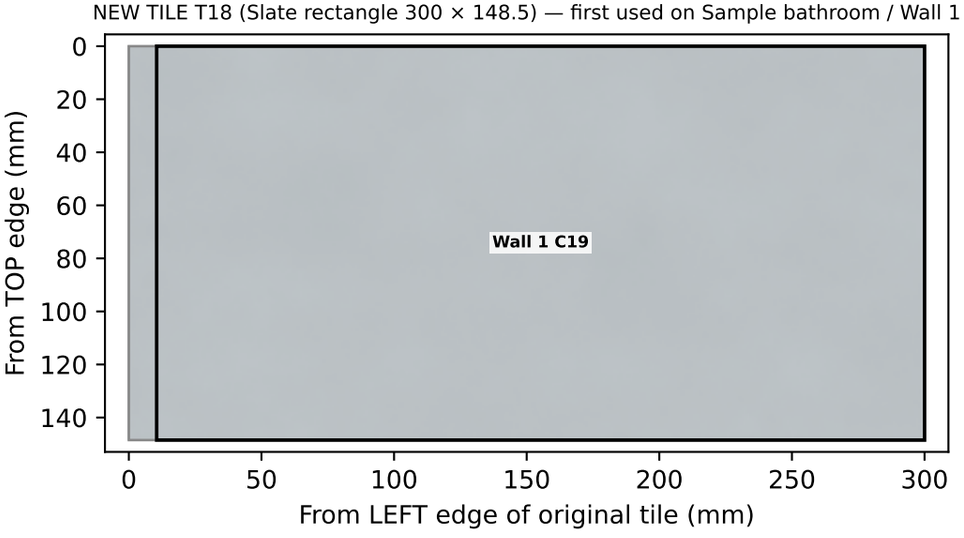
NEW TILE T18 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C19
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

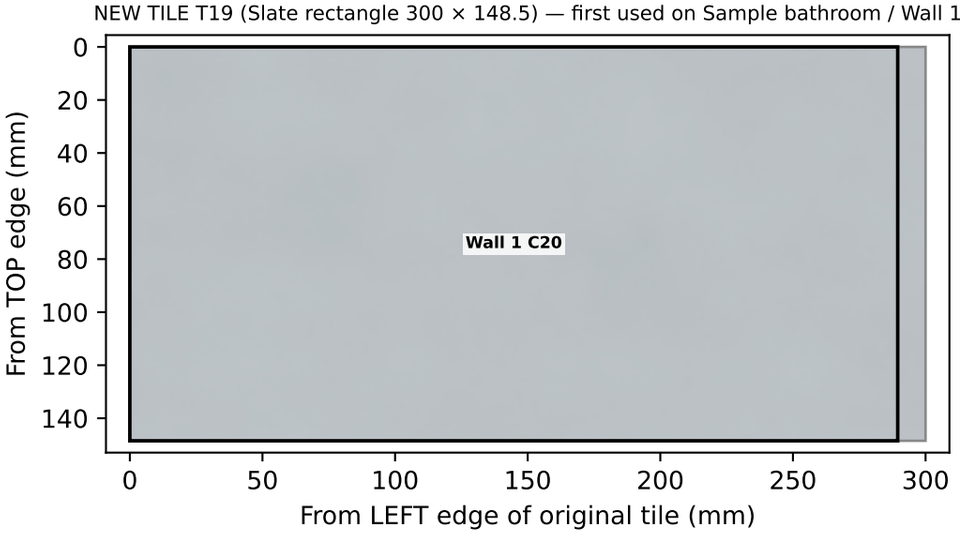
NEW TILE T19 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C20
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

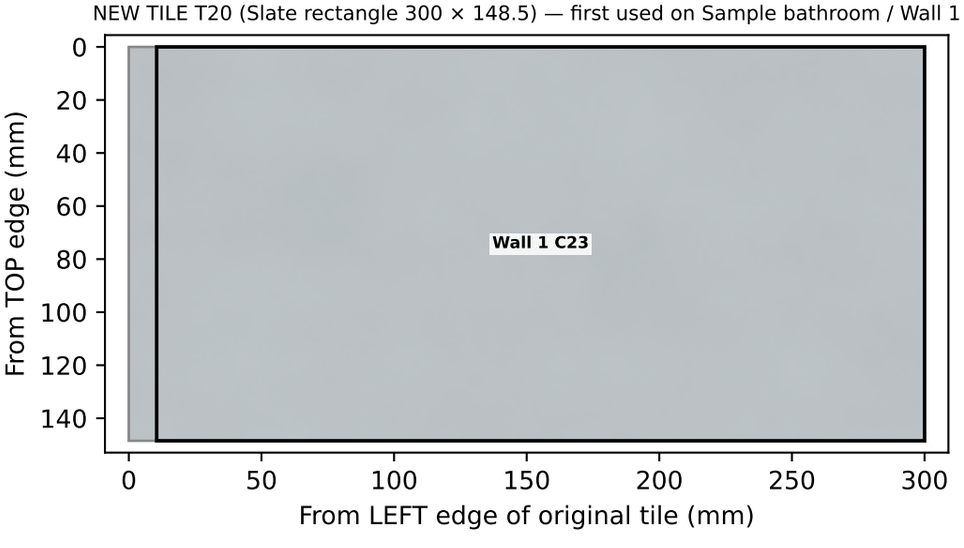
NEW TILE T20 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C23
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

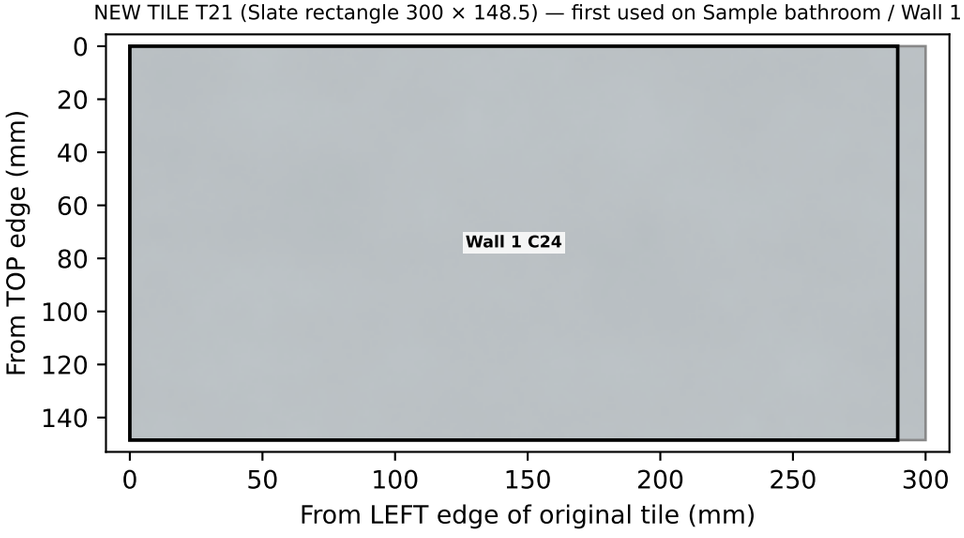
NEW TILE T21 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C24
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

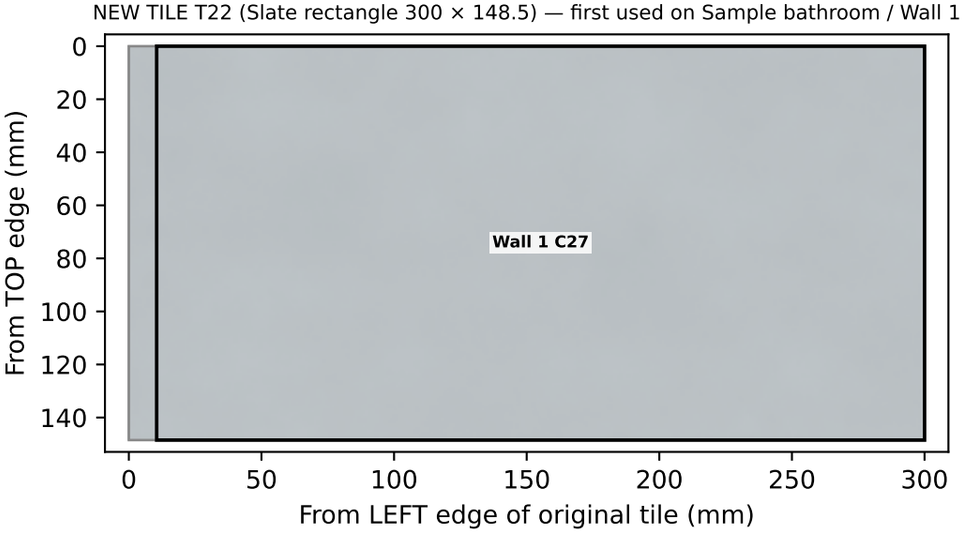
NEW TILE T22 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C27
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

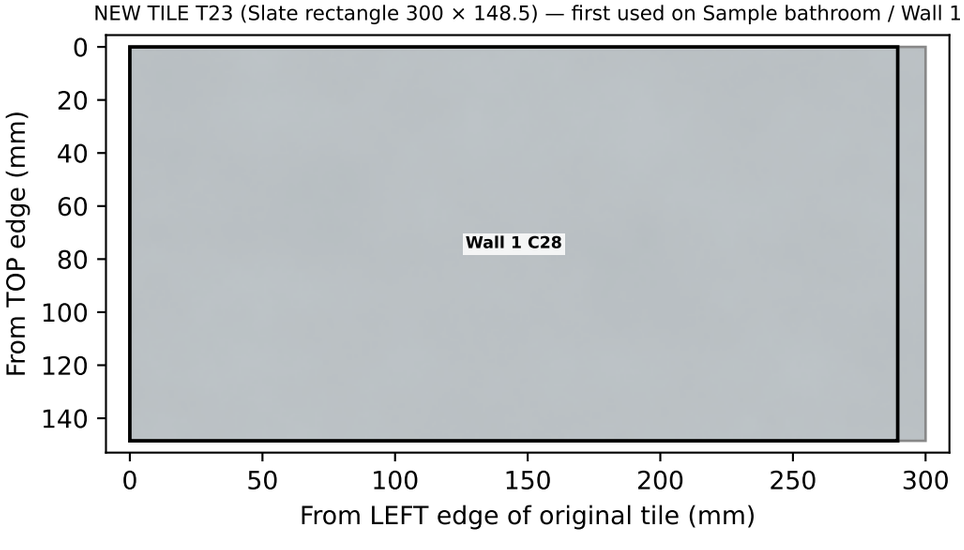
NEW TILE T23 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C28
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

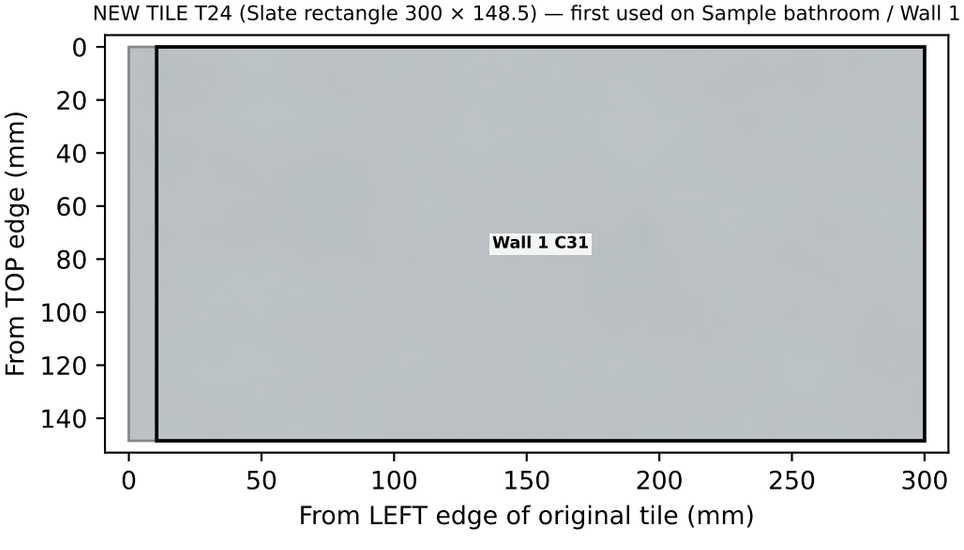
NEW TILE T24 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C31
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

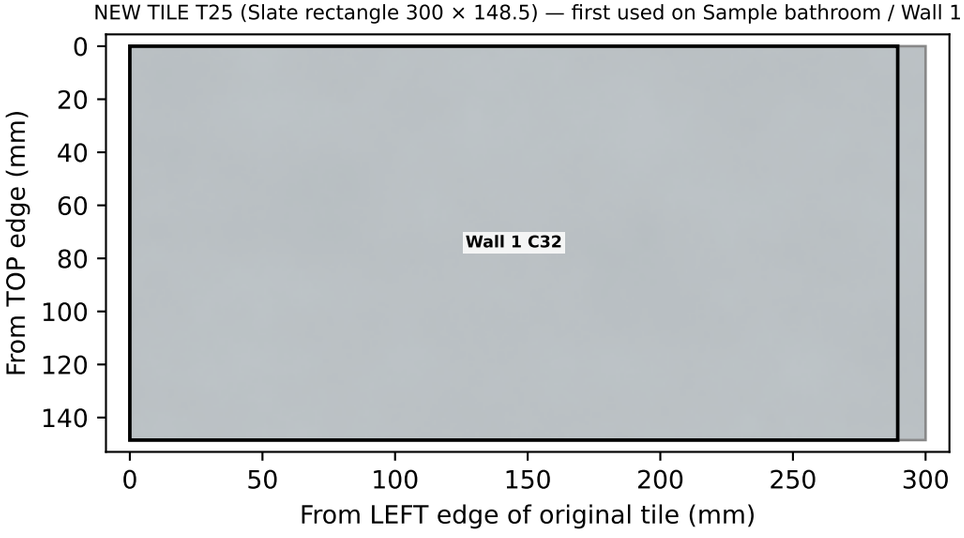
NEW TILE T25 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C32
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

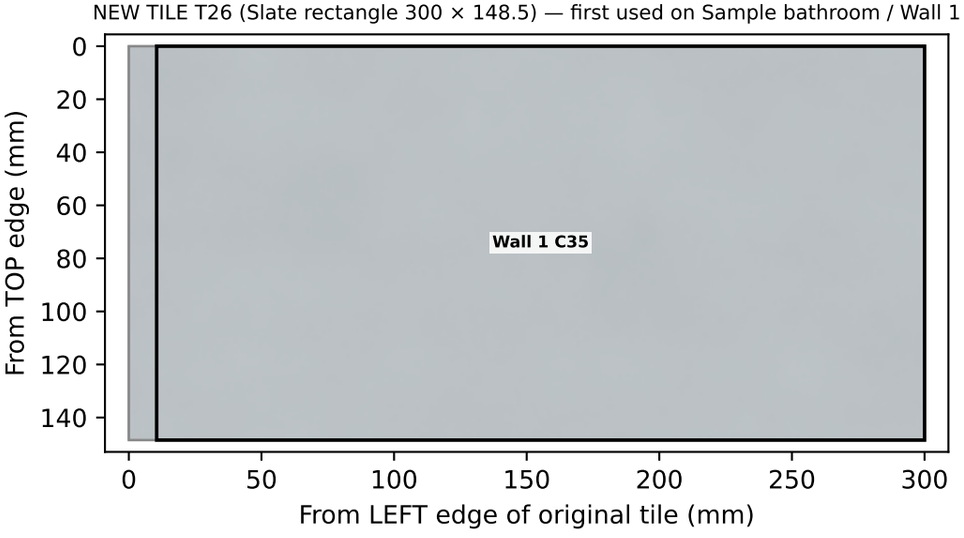
NEW TILE T26 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C35
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

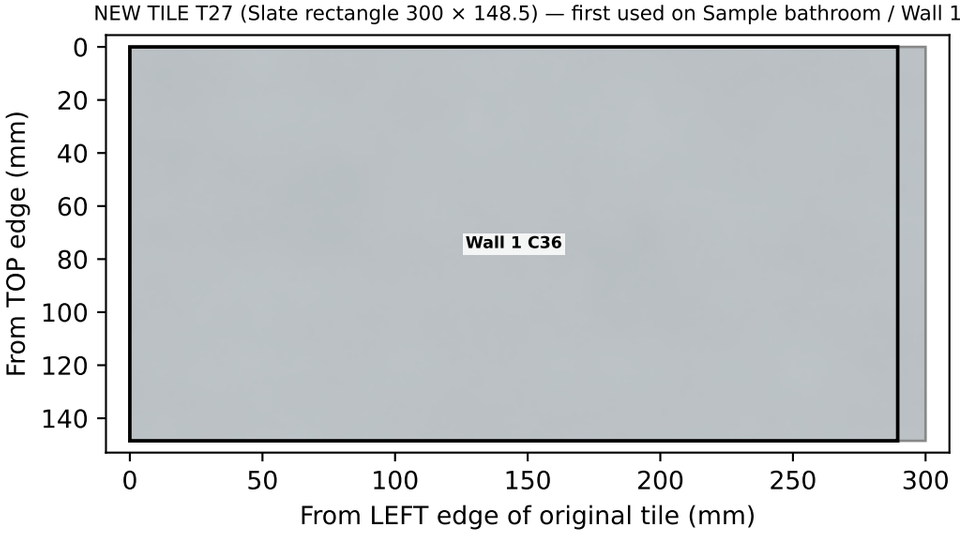
NEW TILE T27 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C36
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

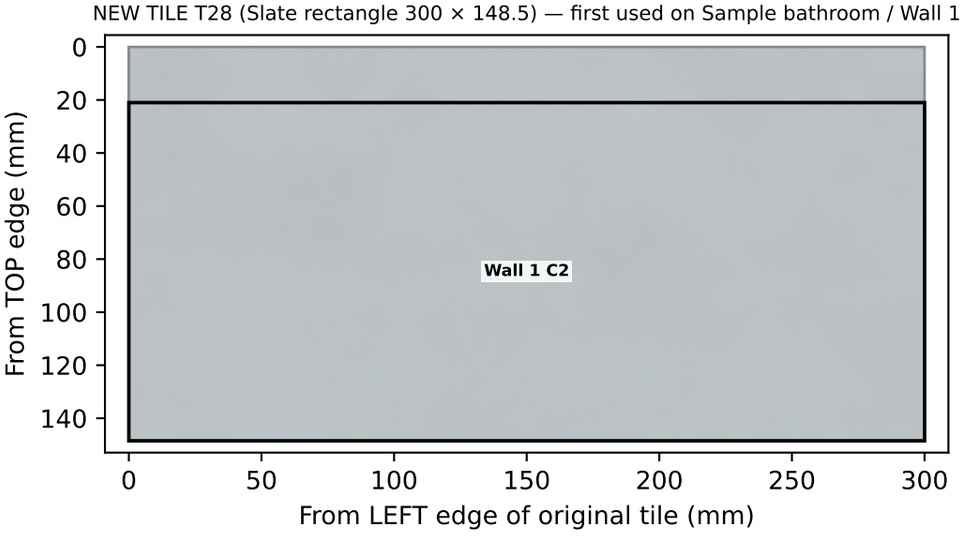
NEW TILE T28 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C2
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

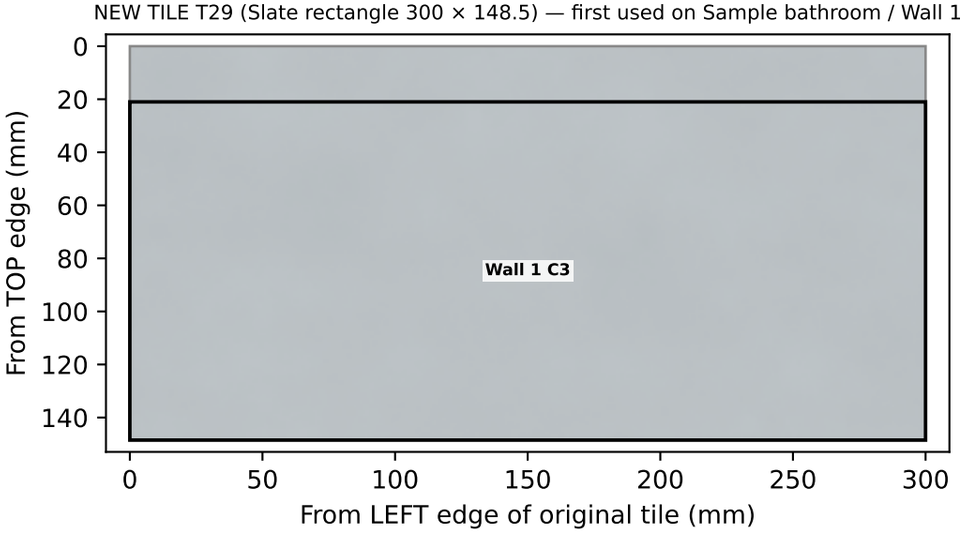
NEW TILE T29 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C3
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

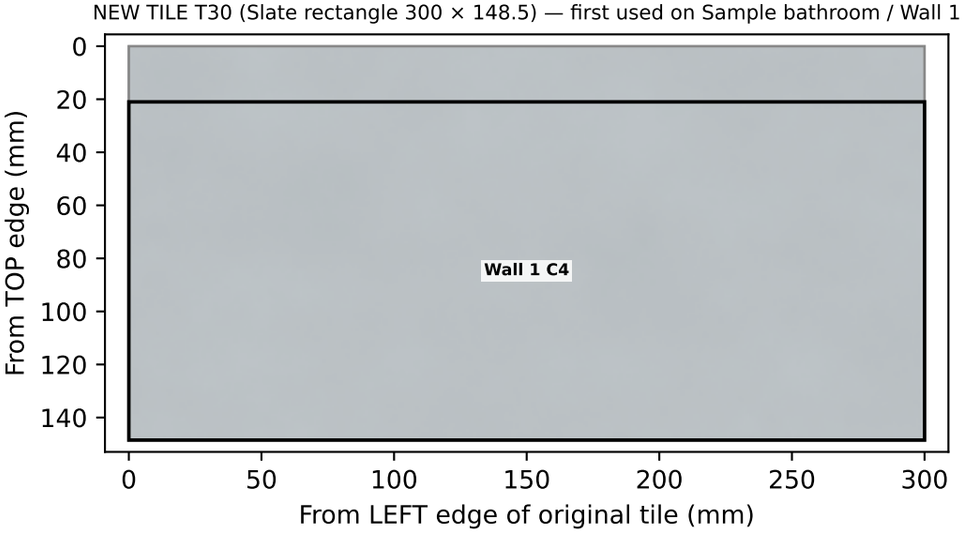
NEW TILE T30 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C4
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

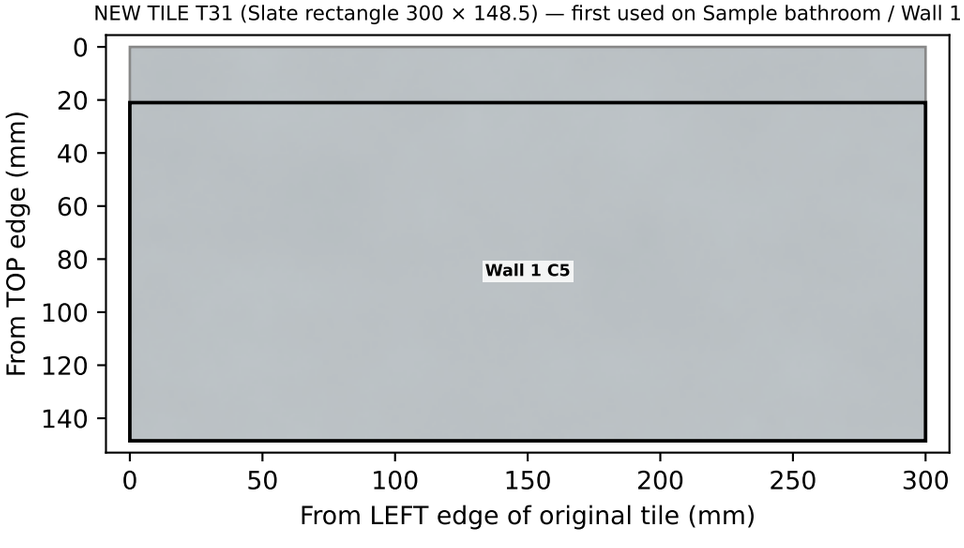
NEW TILE T31 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C5
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

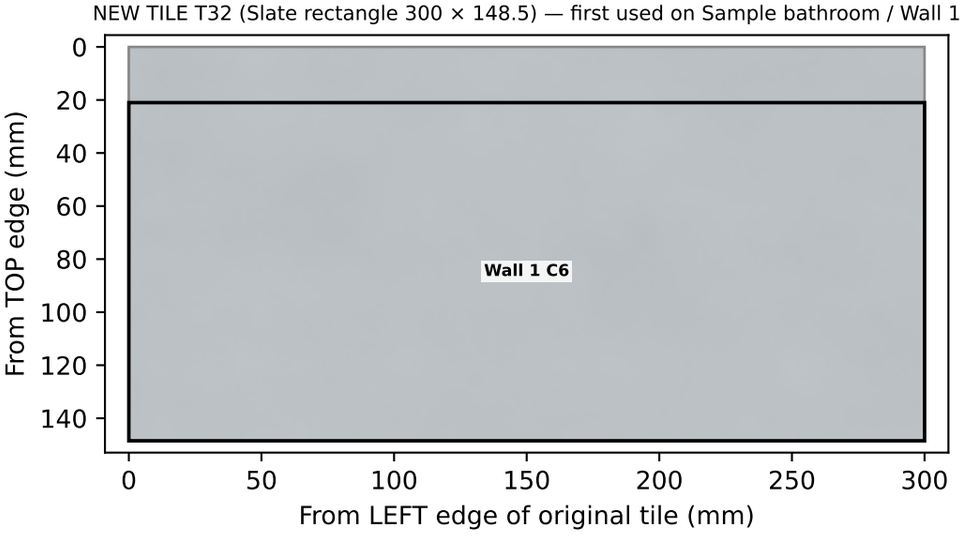
NEW TILE T32 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C6
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

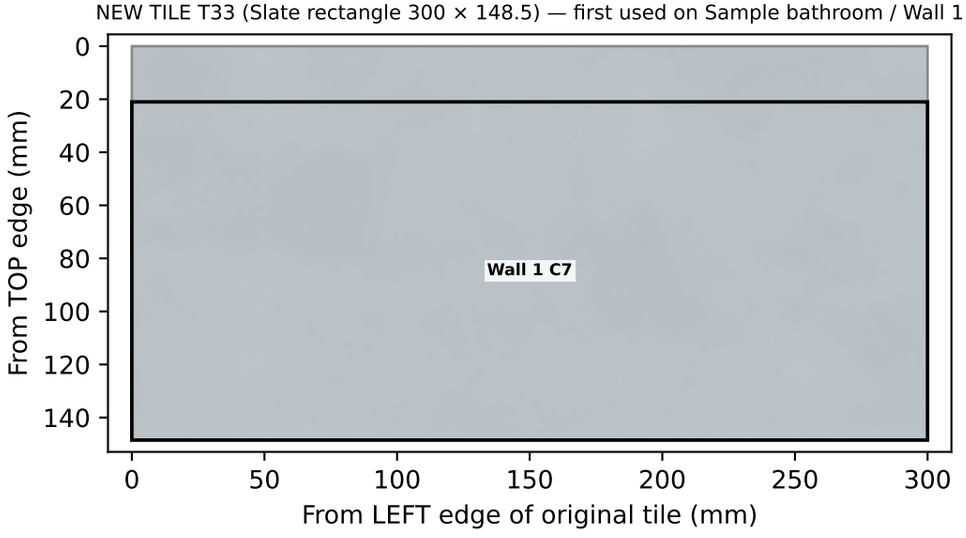
NEW TILE T33 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
From TOP edge (mm)
From LEFT edge of original tile (mm)
Wall 1 C7
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

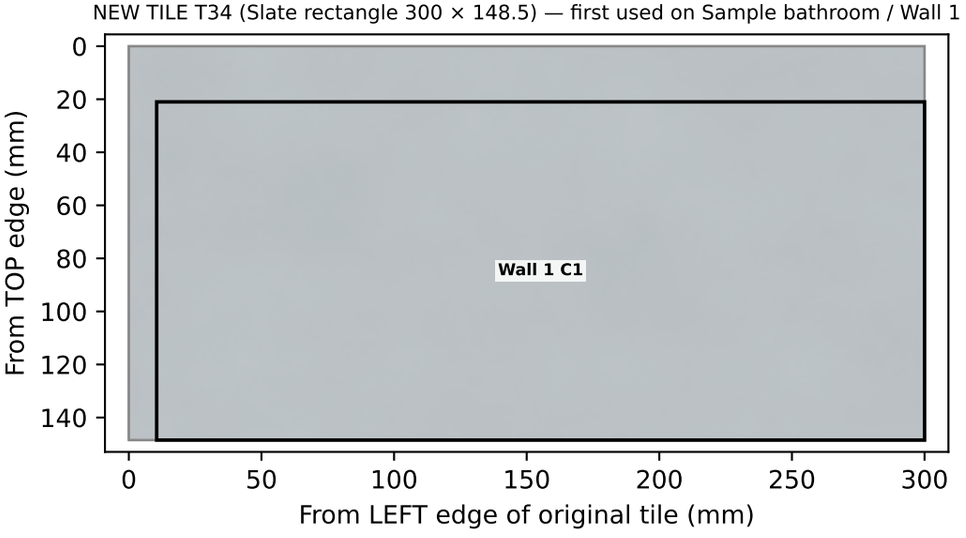
NEW TILE T34 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
From TOP edge (mm)
From LEFT edge of original tile (mm)
Wall 1 C1
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

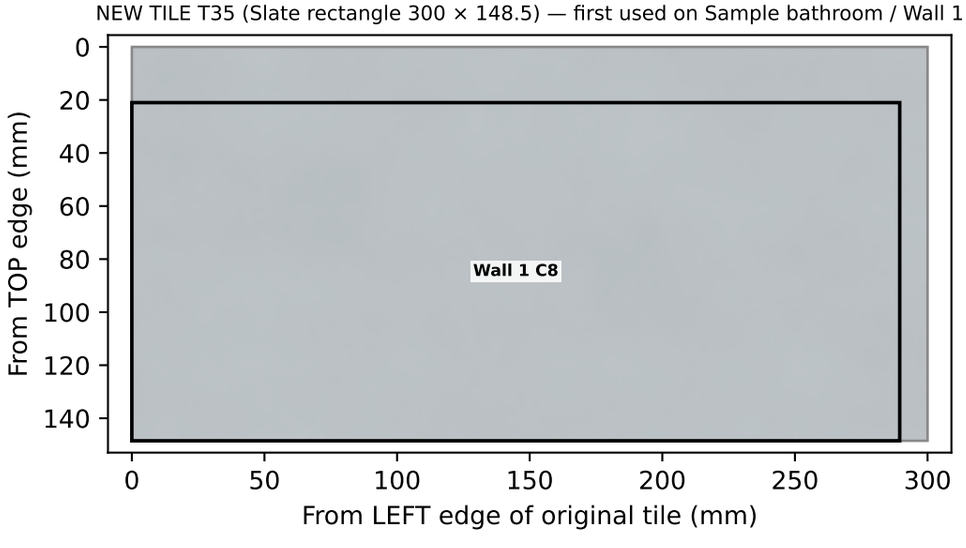
NEW TILE T35 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
From TOP edge (mm)
From LEFT edge of original tile (mm)
Wall 1 C8
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

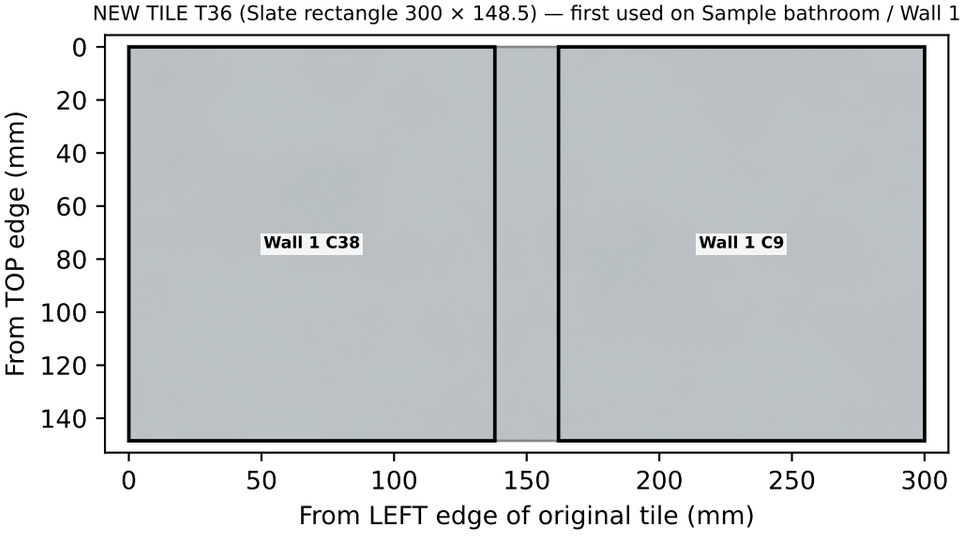
NEW TILE T36 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
From TOP edge (mm)
From LEFT edge of original tile (mm)
Wall 1 C38
Wall 1 C9
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

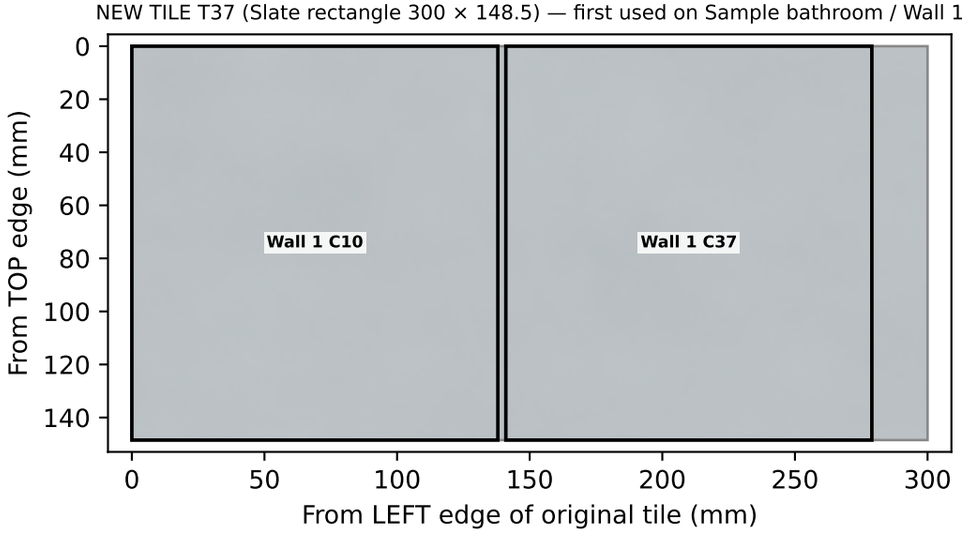
NEW TILE T37 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C10
Wall 1 C37
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

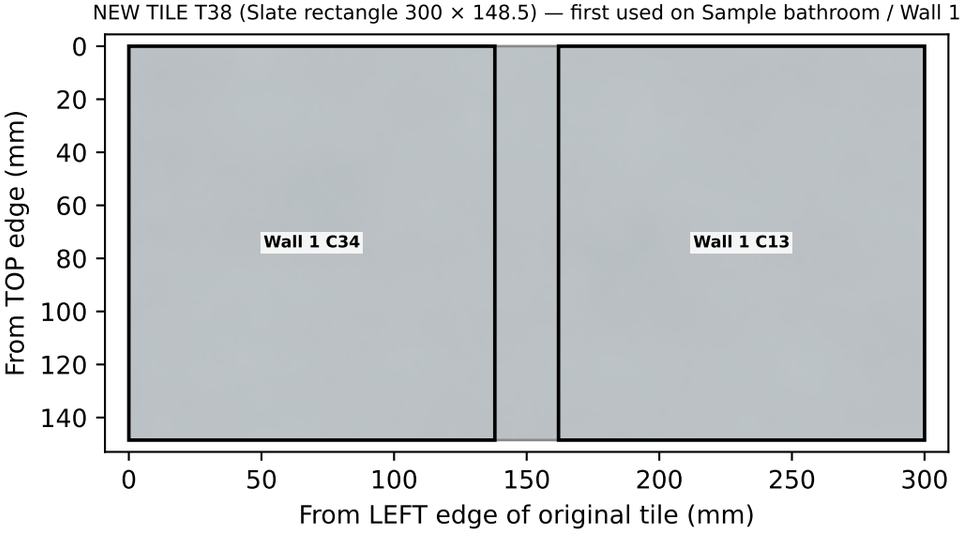
NEW TILE T38 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C34
Wall 1 C13
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

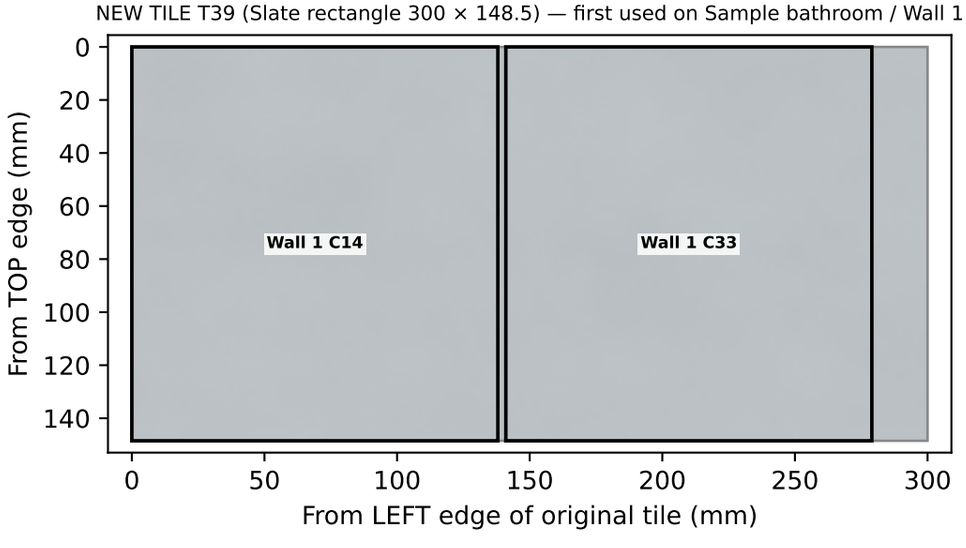
NEW TILE T39 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C14
Wall 1 C33
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

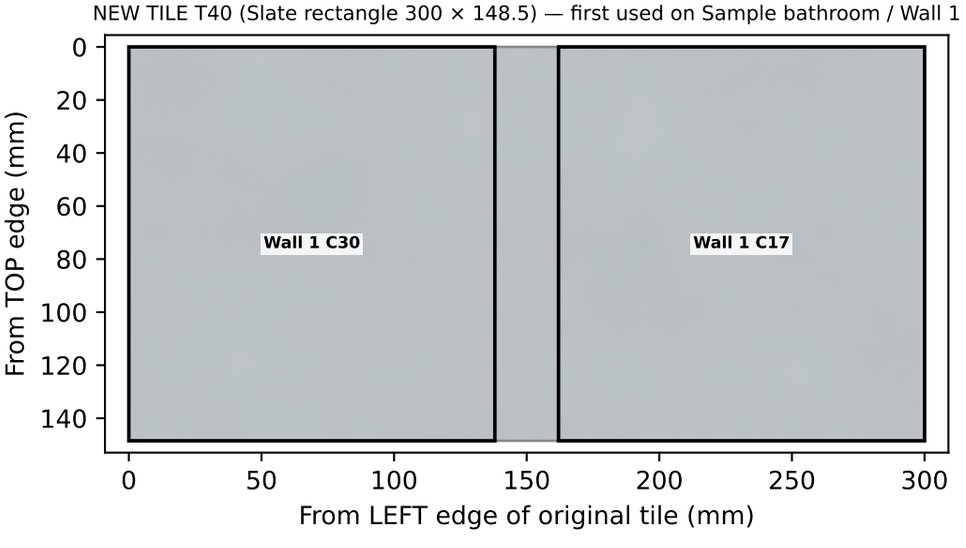
NEW TILE T40 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C30
Wall 1 C17
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

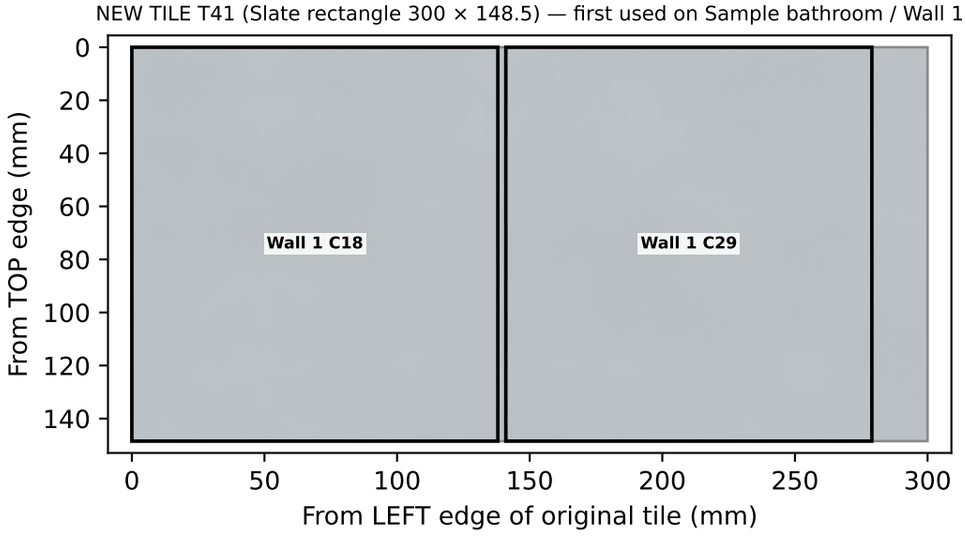
NEW TILE T41 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C18
Wall 1 C29
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

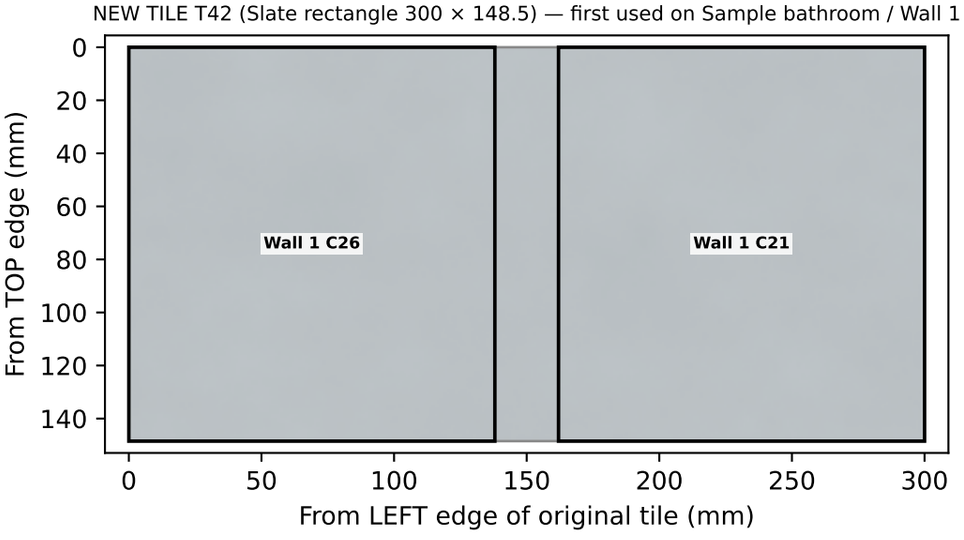
NEW TILE T42 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C26
Wall 1 C21
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

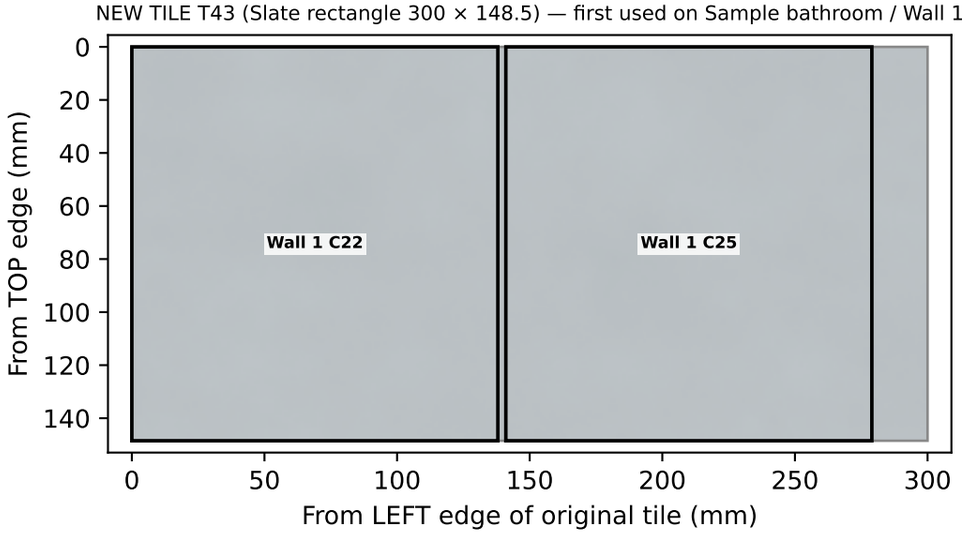
NEW TILE T43 (Slate rectangle 300 × 148.5) — first used on Sample bathroom / Wall 1
Wall 1 C22
Wall 1 C25
From TOP edge (mm)
From LEFT edge of original tile (mm)
0
20
40
60
80
100
120
140
0
50
100
150
200
250
300

# CUTTING CARDS — how to mark and cut each piece

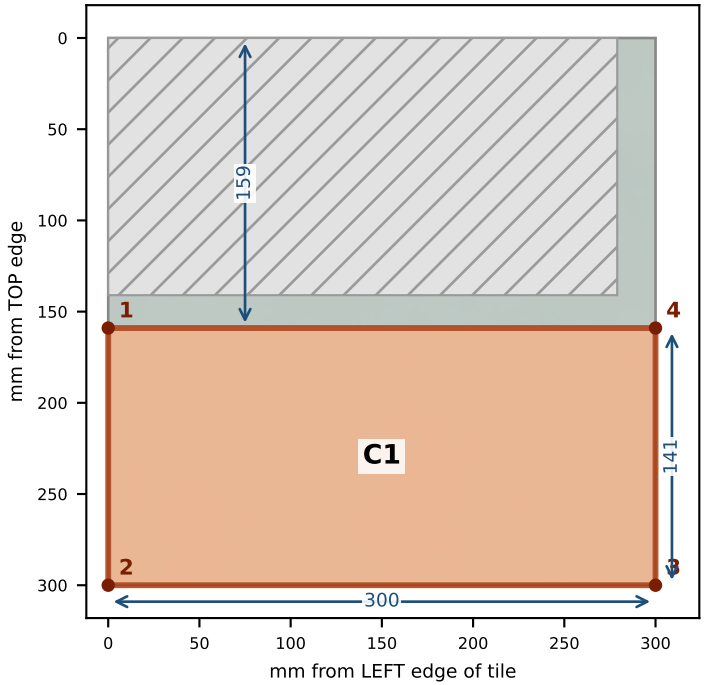


■ this piece ▨ other cuts ↔ mm

```
PIECE C1 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T6
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 159)  2=(0, 300)  3=(300, 300)  4=(300, 159)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 0) mm on the floor.
```

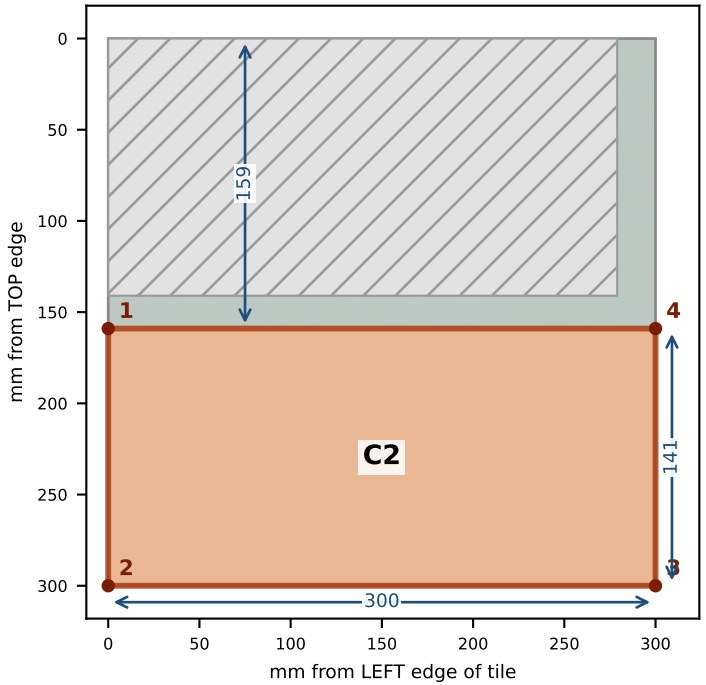


■ this piece ▨ other cuts ↔ mm

```
PIECE C2 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T7
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 159)  2=(0, 300)  3=(300, 300)  4=(300, 159)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (303, 0) mm on the floor.
```

# CUTTING CARDS — how to mark and cut each piece

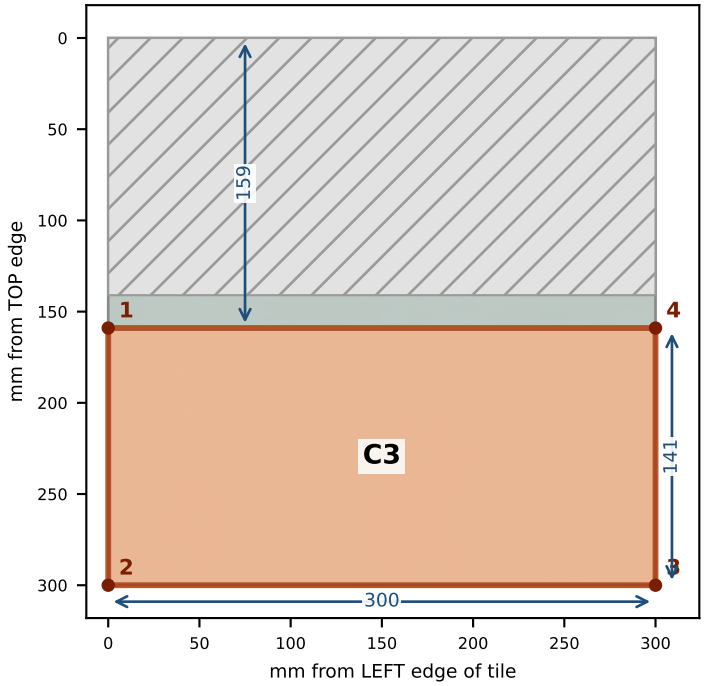


```
PIECE C3 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T8
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 159)  2=(0, 300)  3=(300, 300)  4=(300, 159)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (606, 0) mm on the floor.
```

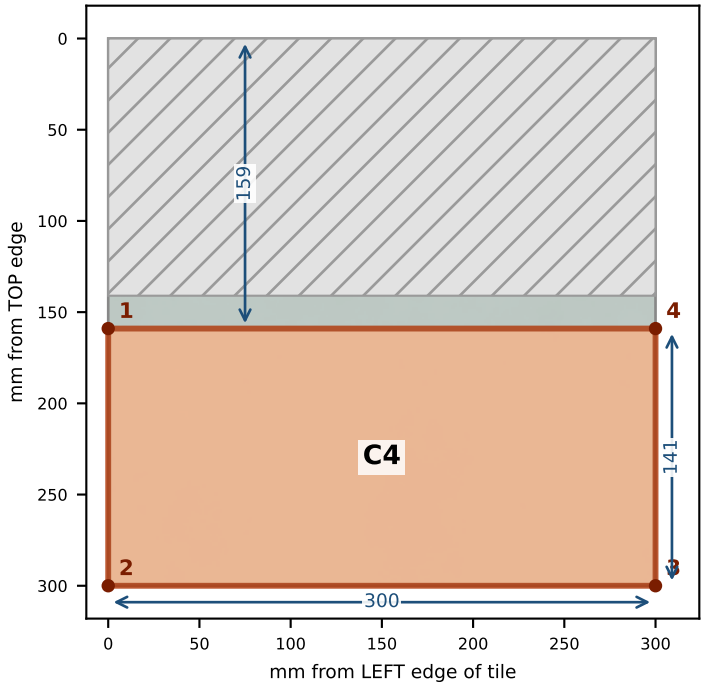


```
PIECE C4 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T9
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 159)  2=(0, 300)  3=(300, 300)  4=(300, 159)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (909, 0) mm on the floor.
```

# CUTTING CARDS — how to mark and cut each piece

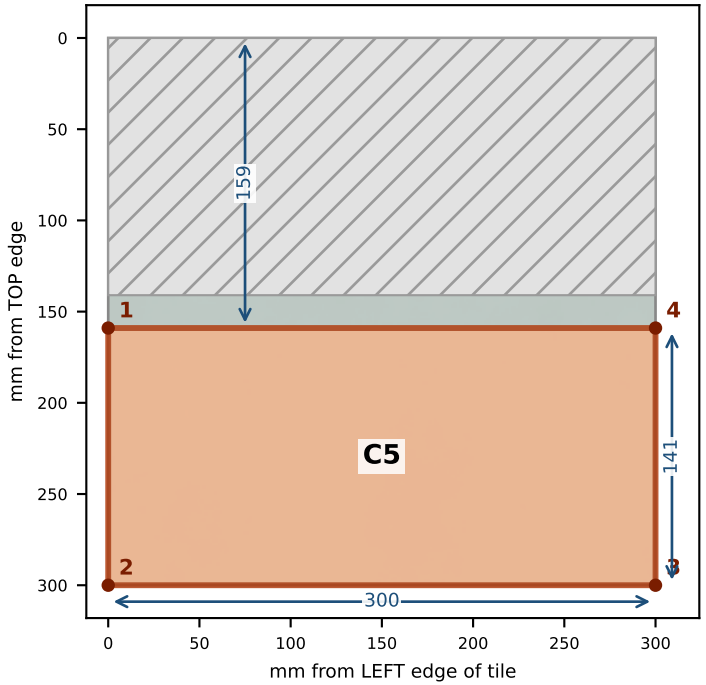


PIECE C5 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T10
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 159)  2=(0, 300)  3=(300, 300)  4=(300, 159)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1212, 0) mm on the floor.

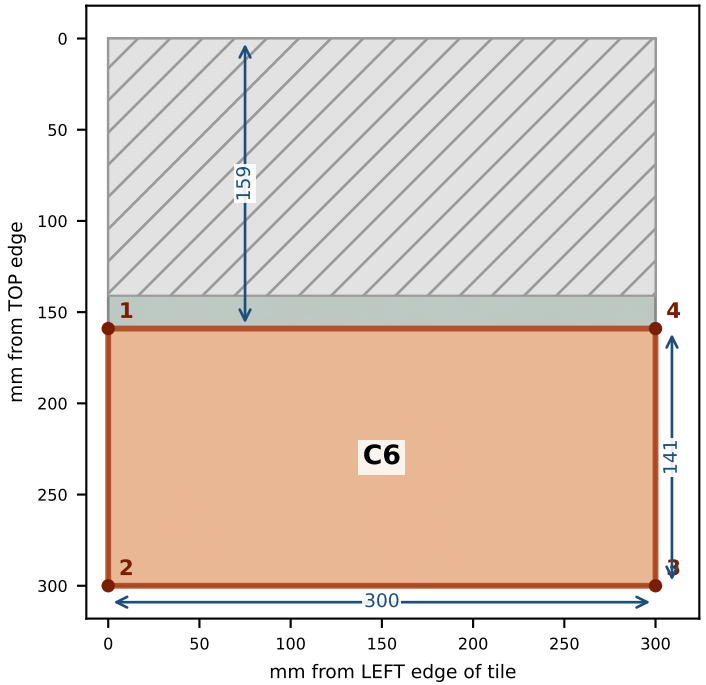


PIECE C6 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T11
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 159)  2=(0, 300)  3=(300, 300)  4=(300, 159)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1515, 0) mm on the floor.

# CUTTING CARDS — how to mark and cut each piece

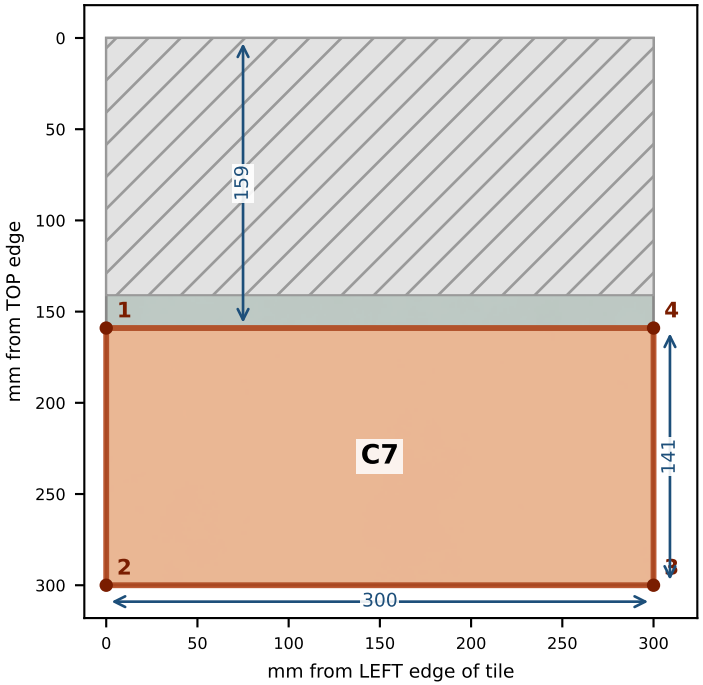


■ this piece ▨ other cuts ↔ mm

PIECE C7 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T12
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 159)  2=(0, 300)  3=(300, 300)  4=(300, 159)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1818, 0) mm on the floor.

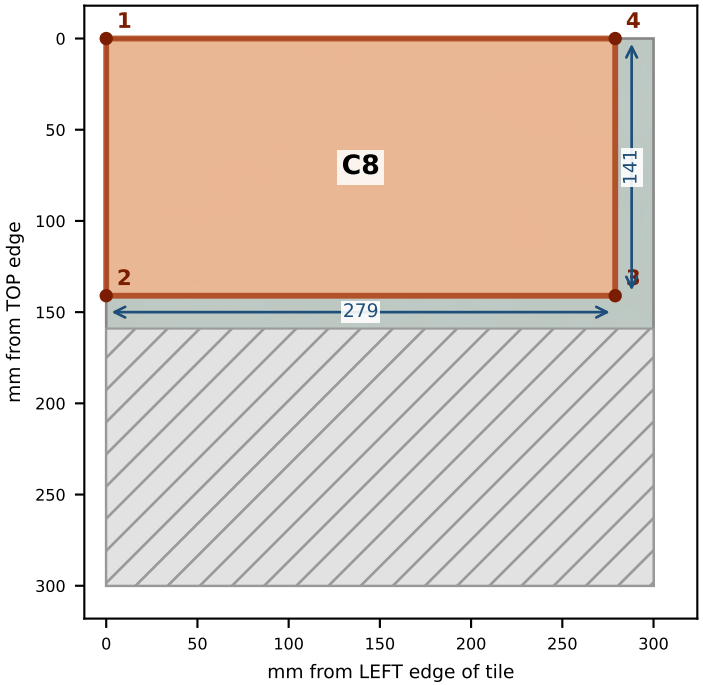


■ this piece ▨ other cuts ↔ mm

PIECE C8 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T7
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 141)  3=(279, 141)  4=(279, 0)
Outer size 279 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2121, 0) mm on the floor.

# CUTTING CARDS — how to mark and cut each piece

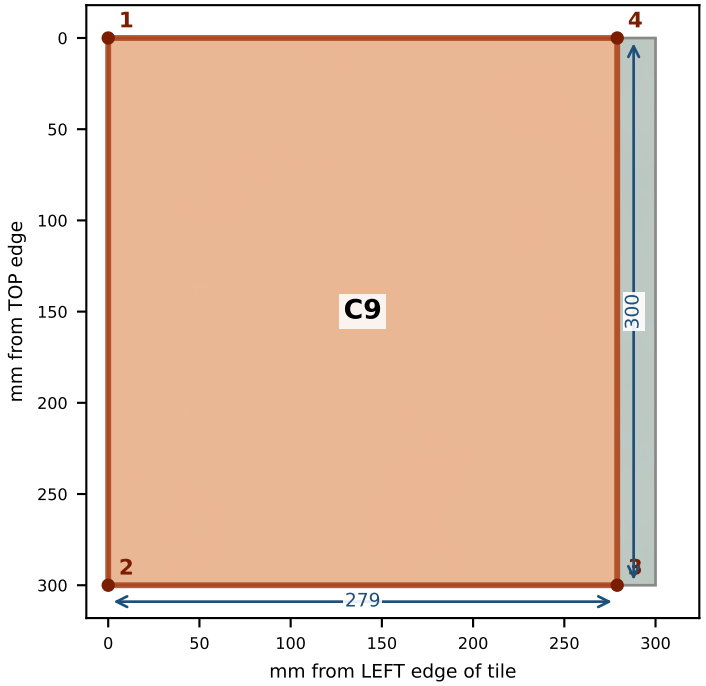


■ this piece ↔ mm

PIECE C9 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T1
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 300)  3=(279, 300)  4=(279, 0)
Outer size 279 × 300 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2121, 144) mm on the floor.

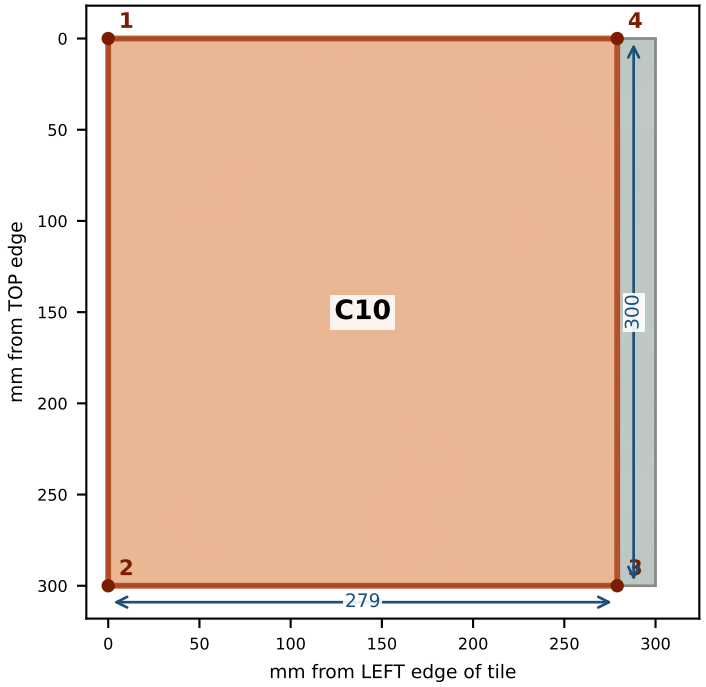


■ this piece ↔ mm

PIECE C10 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T2
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 300)  3=(279, 300)  4=(279, 0)
Outer size 279 × 300 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2121, 447) mm on the floor.

# CUTTING CARDS — how to mark and cut each piece

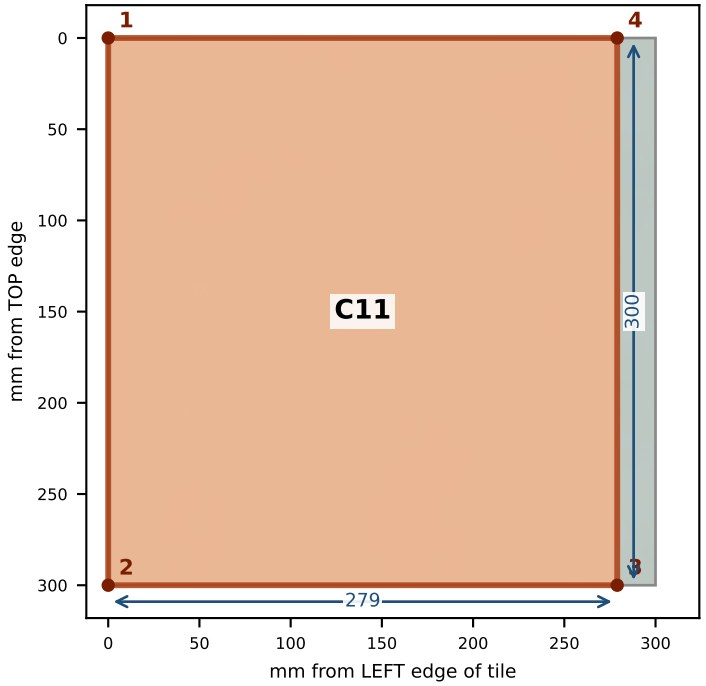


■ this piece ↔ mm

```
PIECE C11 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T3
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 300)  3=(279, 300)  4=(279, 0)
Outer size 279 × 300 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2121, 750) mm on the floor.
```

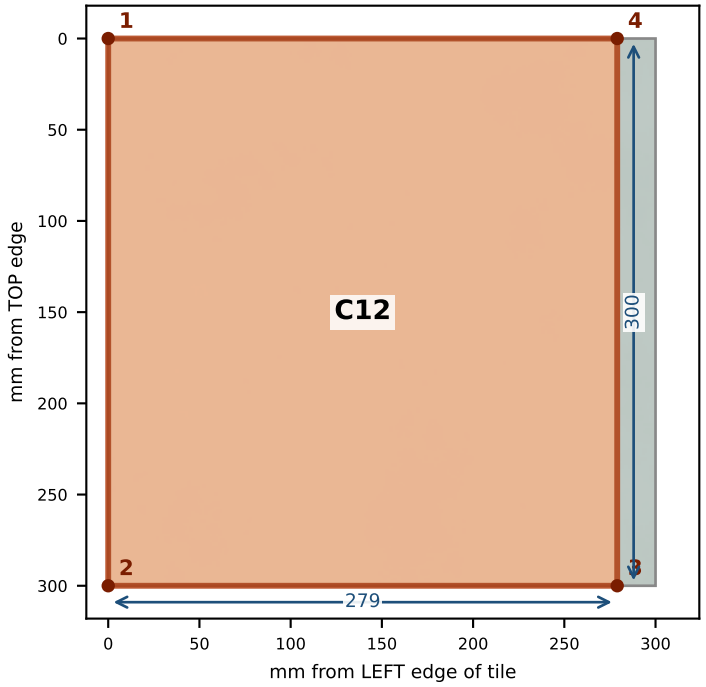


■ this piece ↔ mm

```
PIECE C12 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T4
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 300)  3=(279, 300)  4=(279, 0)
Outer size 279 × 300 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2121, 1053) mm on the floor.
```

# CUTTING CARDS — how to mark and cut each piece

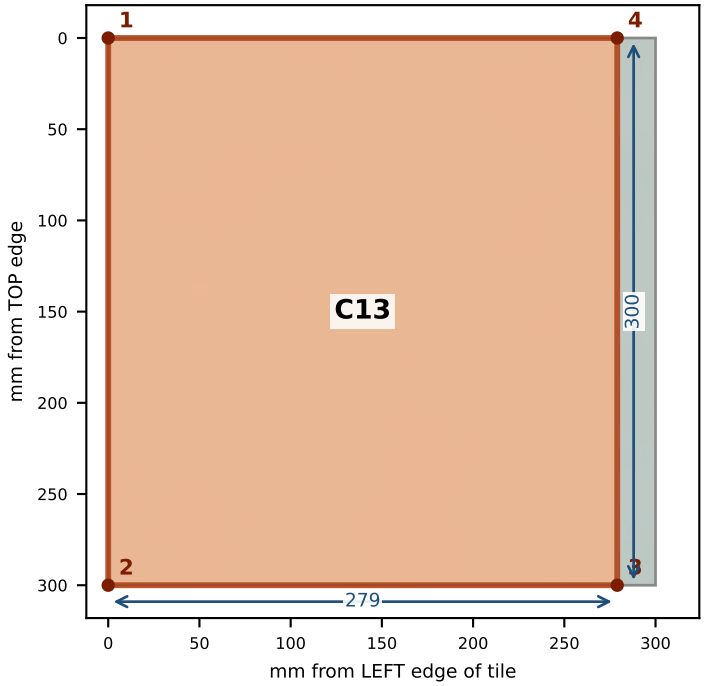


PIECE C13 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T5
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 300)  3=(279, 300)  4=(279, 0)
Outer size 279 × 300 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2121, 1356) mm on the floor.

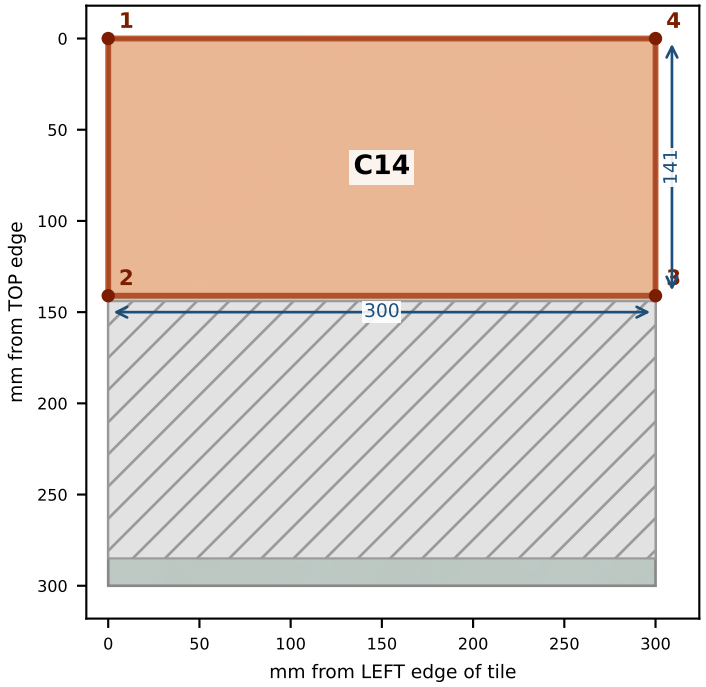


PIECE C14 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T13
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 141)  3=(300, 141)  4=(300, 0)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 1659) mm on the floor.

# CUTTING CARDS — how to mark and cut each piece

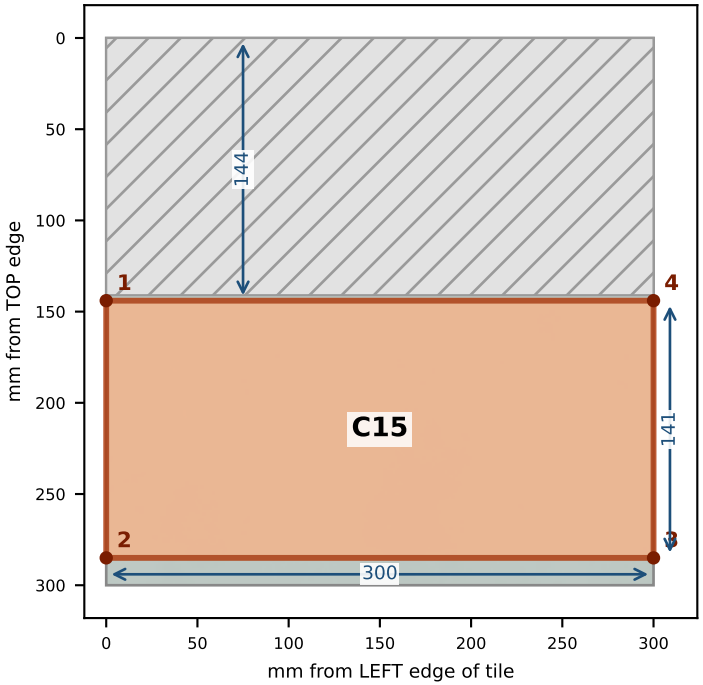


■ this piece ▨ other cuts ↔ mm

PIECE C15 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T13
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 144)  2=(0, 285)  3=(300, 285)  4=(300, 144)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (303, 1659) mm on the floor.

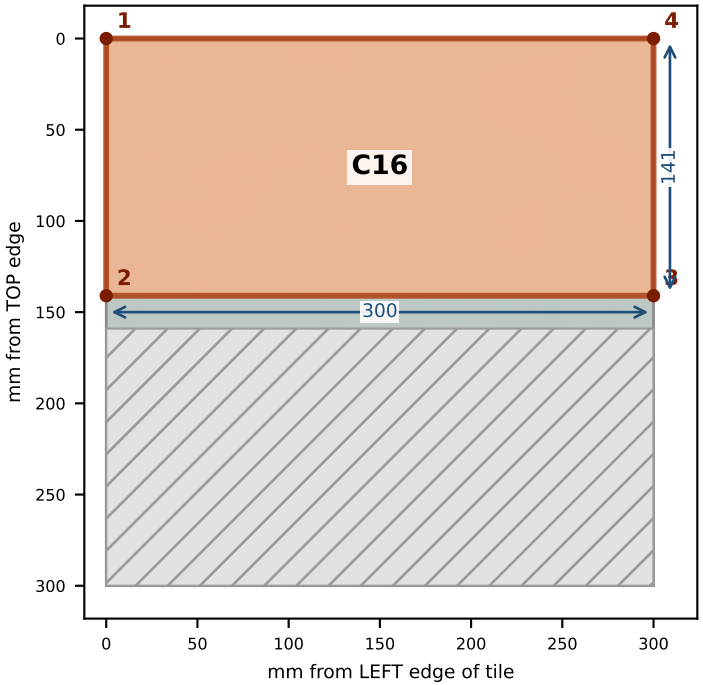


■ this piece ▨ other cuts ↔ mm

PIECE C16 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T12
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 141)  3=(300, 141)  4=(300, 0)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (606, 1659) mm on the floor.

# CUTTING CARDS — how to mark and cut each piece

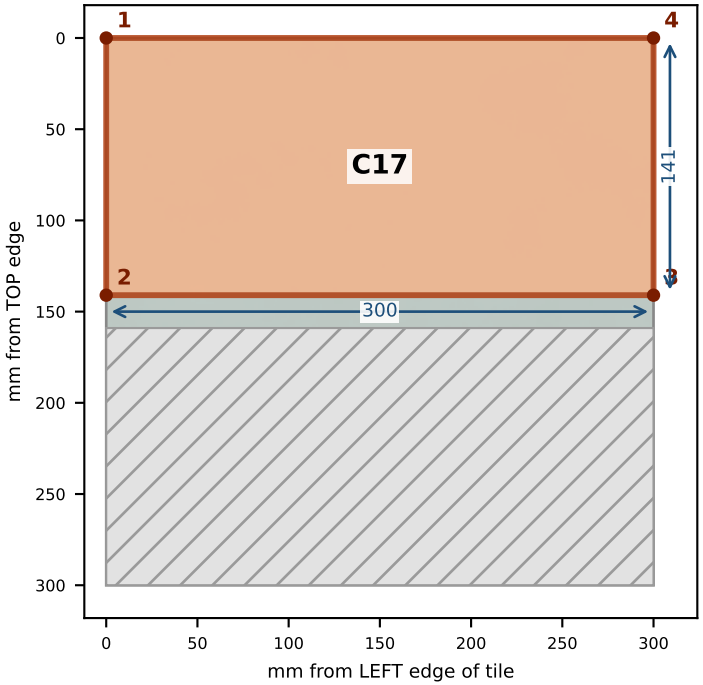


■ this piece ▨ other cuts ↔ mm

PIECE C17 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T11
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 141)  3=(300, 141)  4=(300, 0)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (909, 1659) mm on the floor.

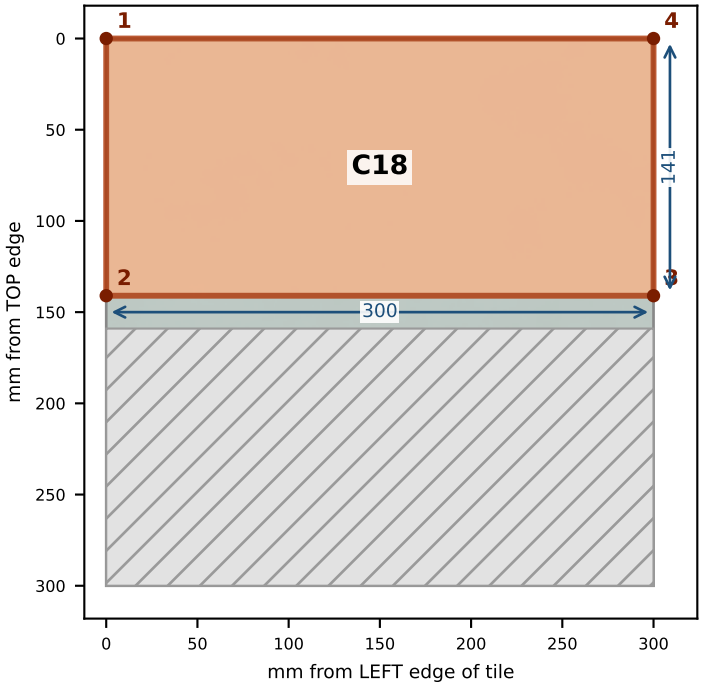


■ this piece ▨ other cuts ↔ mm

PIECE C18 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T10
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 141)  3=(300, 141)  4=(300, 0)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1212, 1659) mm on the floor.

# CUTTING CARDS — how to mark and cut each piece

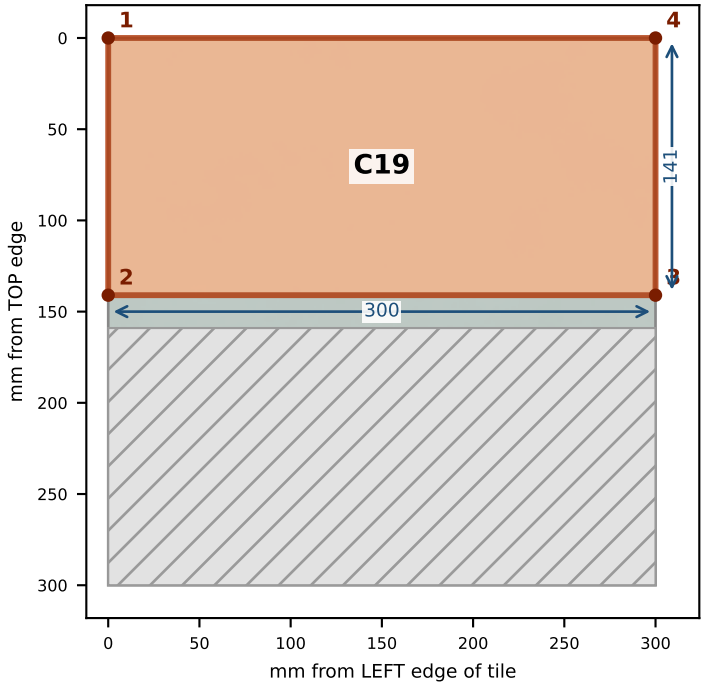


■ this piece ▨ other cuts ↔ mm

PIECE C19 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T9
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 141)  3=(300, 141)  4=(300, 0)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1515, 1659) mm on the floor.

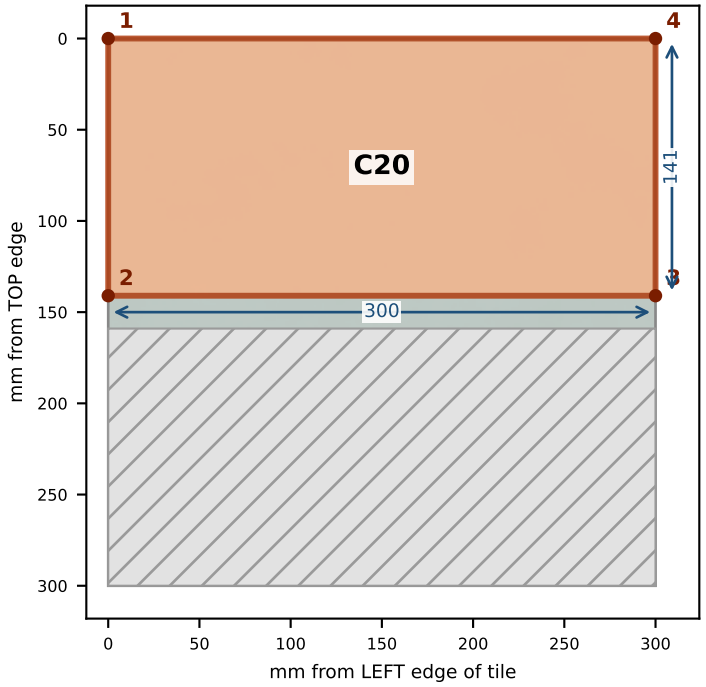


■ this piece ▨ other cuts ↔ mm

PIECE C20 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T8
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 141)  3=(300, 141)  4=(300, 0)
Outer size 300 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1818, 1659) mm on the floor.

# CUTTING CARDS — how to mark and cut each piece

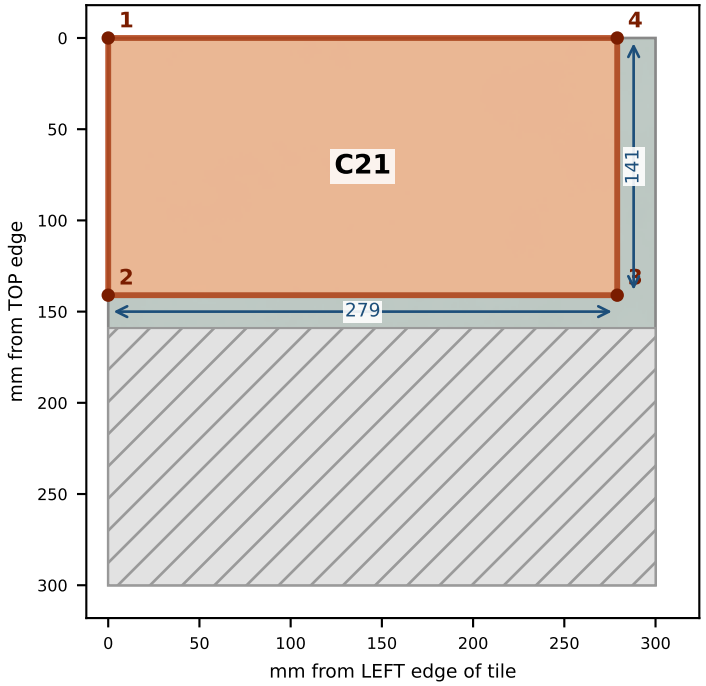


■ this piece ▨ other cuts ↔ mm

PIECE C21 · Sample bathroom / Floor · Forest porcelain 300 × 300
Cut from: new tile T6
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 141)  3=(279, 141)  4=(279, 0)
Outer size 279 × 141 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2121, 1659) mm on the floor.

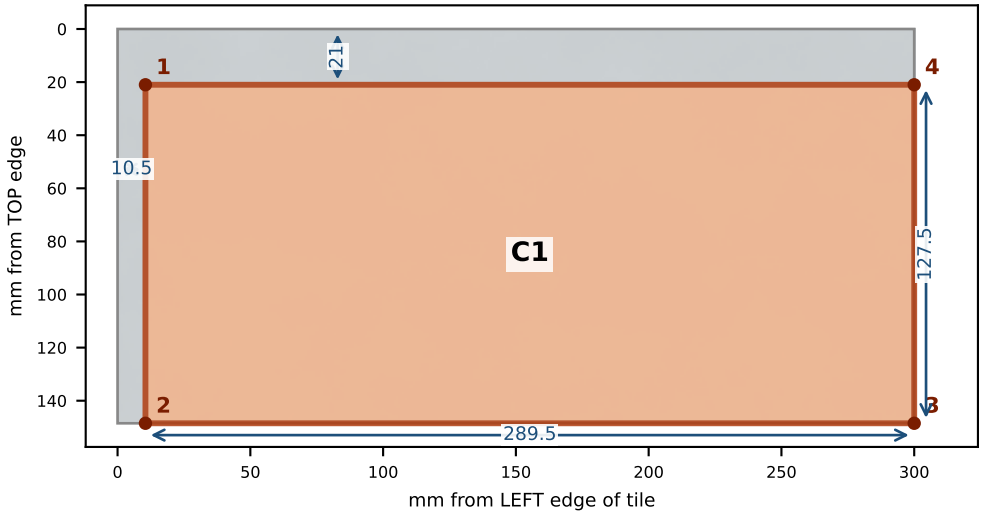


■ this piece ↔ mm

PIECE C1 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T34
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(10.5, 21)  2=(10.5, 148.5)  3=(300, 148.5)  4=(300, 21)
Outer size 289.5 × 127.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 0) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

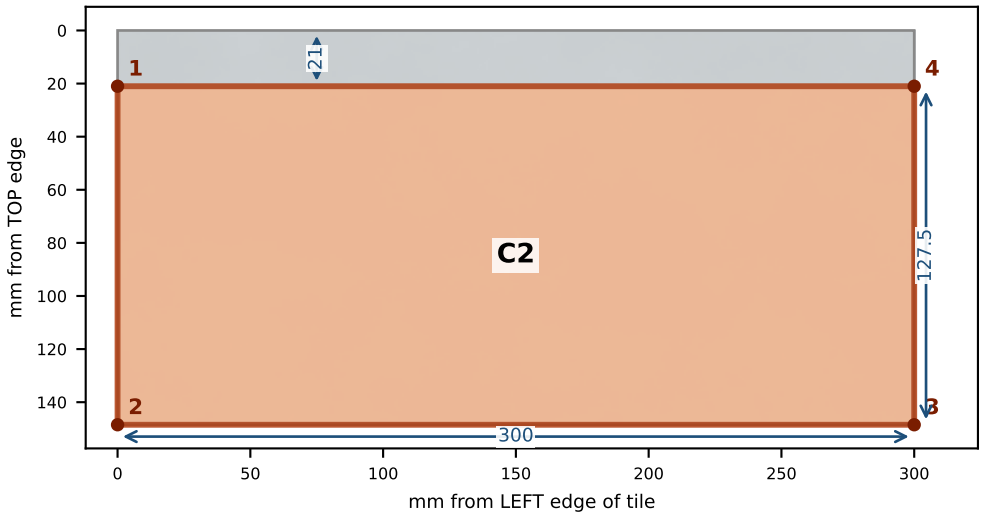


■ this piece ↔ mm

PIECE C2 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T28
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 21)  2=(0, 148.5)  3=(300, 148.5)  4=(300, 21)
Outer size 300 × 127.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (292.5, 0) mm on the wall.

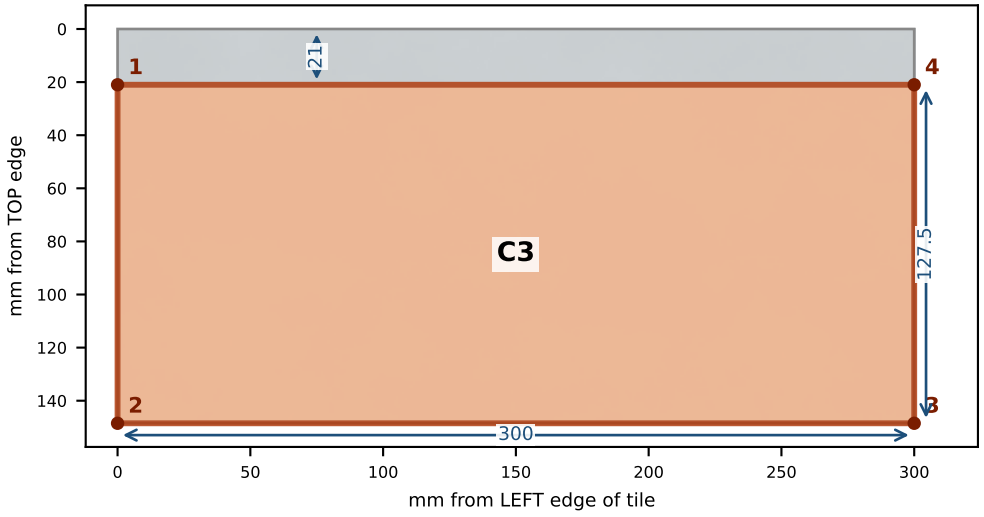


■ this piece ↔ mm

PIECE C3 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T29
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 21)  2=(0, 148.5)  3=(300, 148.5)  4=(300, 21)
Outer size 300 × 127.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (595.5, 0) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

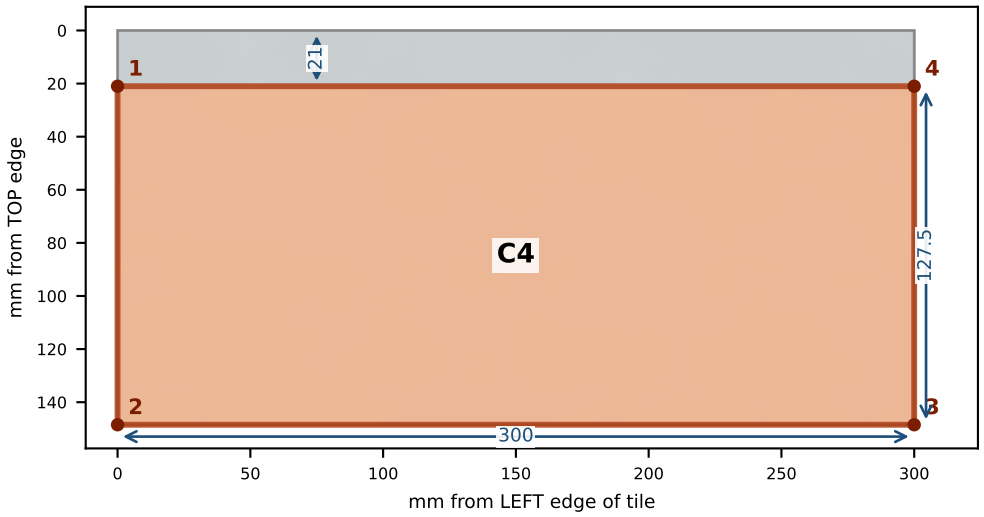


■ this piece ↔ mm

PIECE C4 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T30
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 21)  2=(0, 148.5)  3=(300, 148.5)  4=(300, 21)
Outer size 300 × 127.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (898.5, 0) mm on the wall.

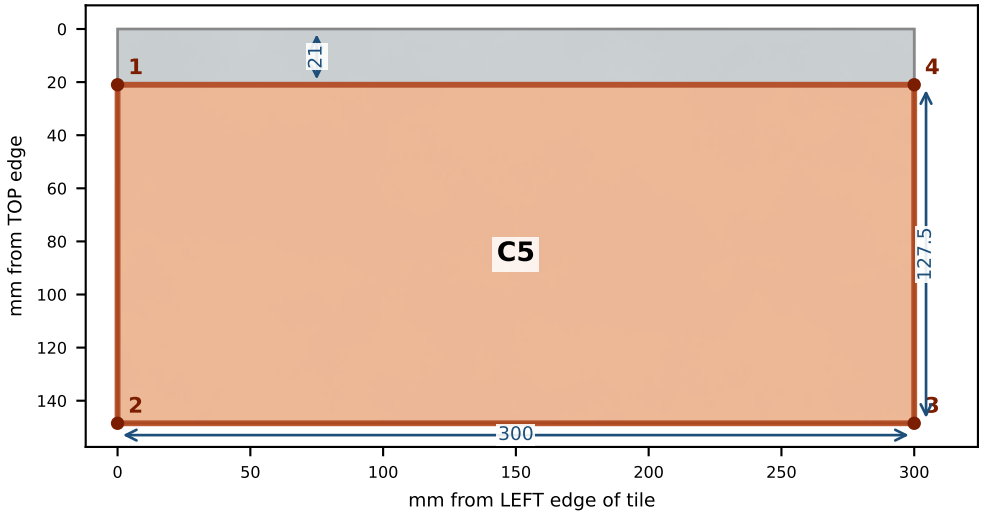


■ this piece ↔ mm

PIECE C5 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T31
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 21)  2=(0, 148.5)  3=(300, 148.5)  4=(300, 21)
Outer size 300 × 127.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1201.5, 0) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

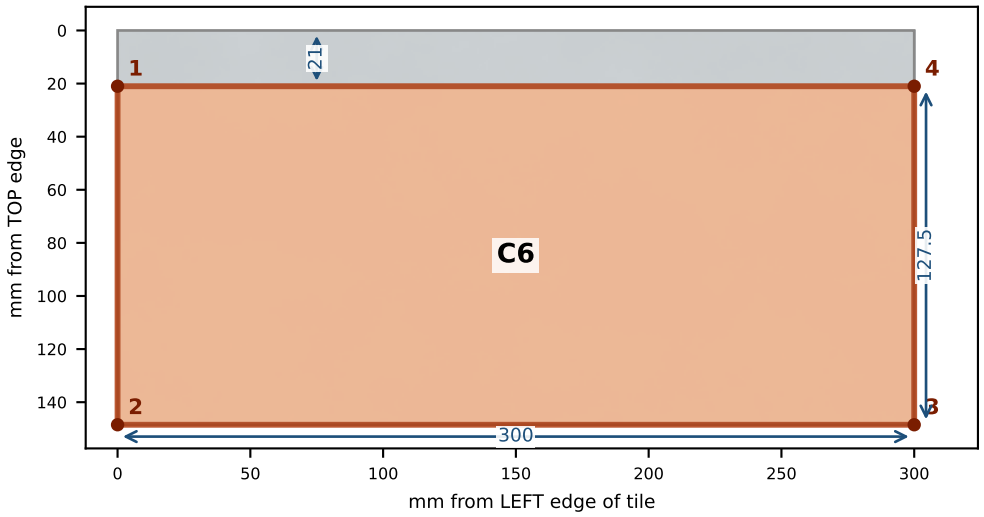


■ this piece ↔ mm

PIECE C6 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T32
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 21)  2=(0, 148.5)  3=(300, 148.5)  4=(300, 21)
Outer size 300 × 127.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1504.5, 0) mm on the wall.

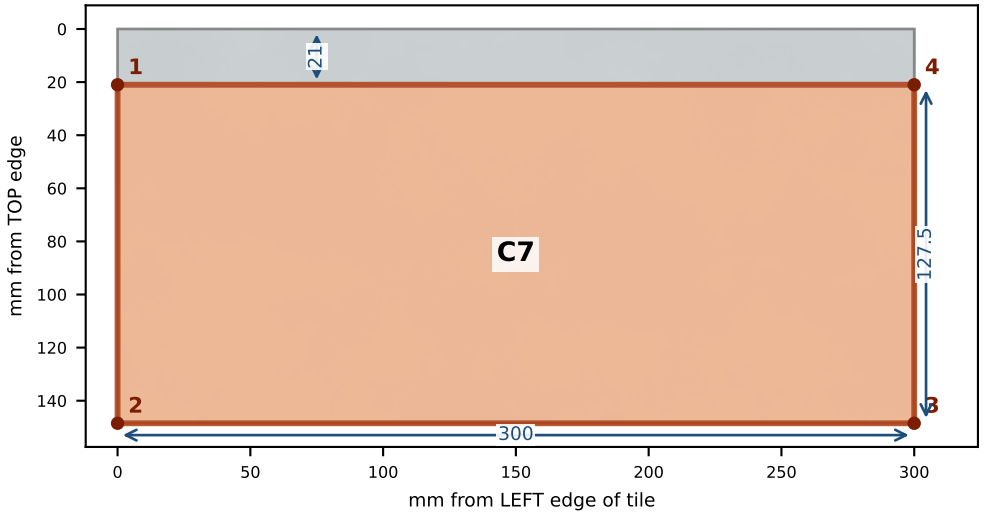


■ this piece ↔ mm

PIECE C7 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T33
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 21)  2=(0, 148.5)  3=(300, 148.5)  4=(300, 21)
Outer size 300 × 127.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (1807.5, 0) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

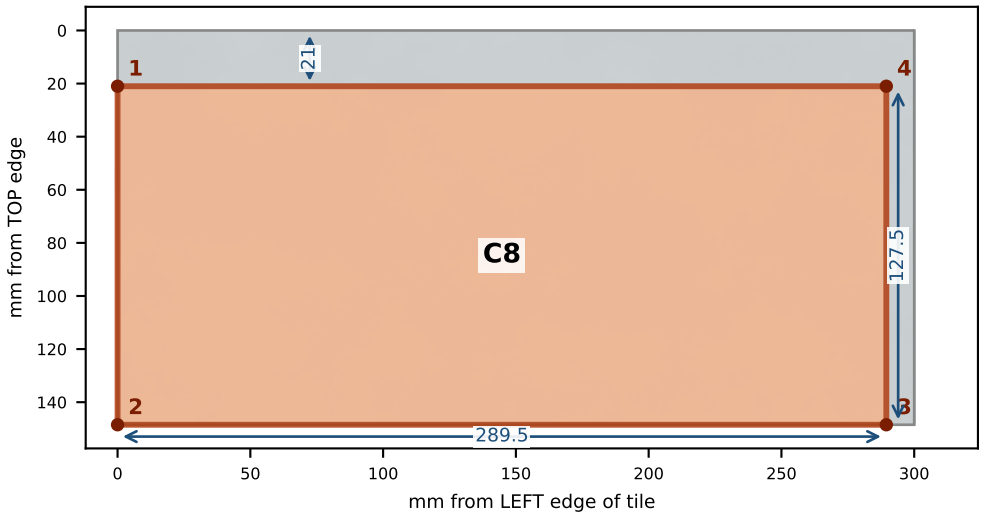


PIECE C8 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T35
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 21)  2=(0, 148.5)  3=(289.5, 148.5)  4=(289.5, 21)
Outer size 289.5 × 127.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2110.5, 0) mm on the wall.

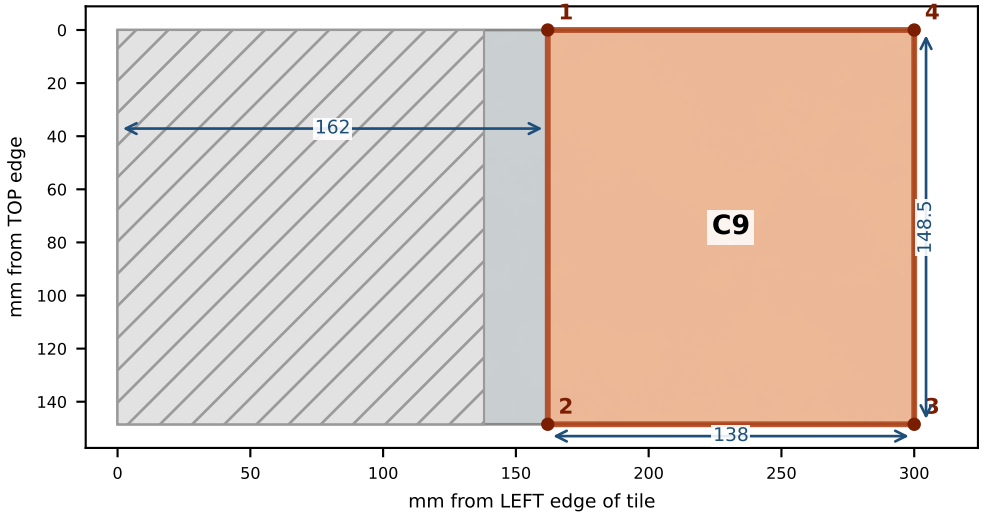


PIECE C9 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T36
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(162, 0)  2=(162, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 130.5) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

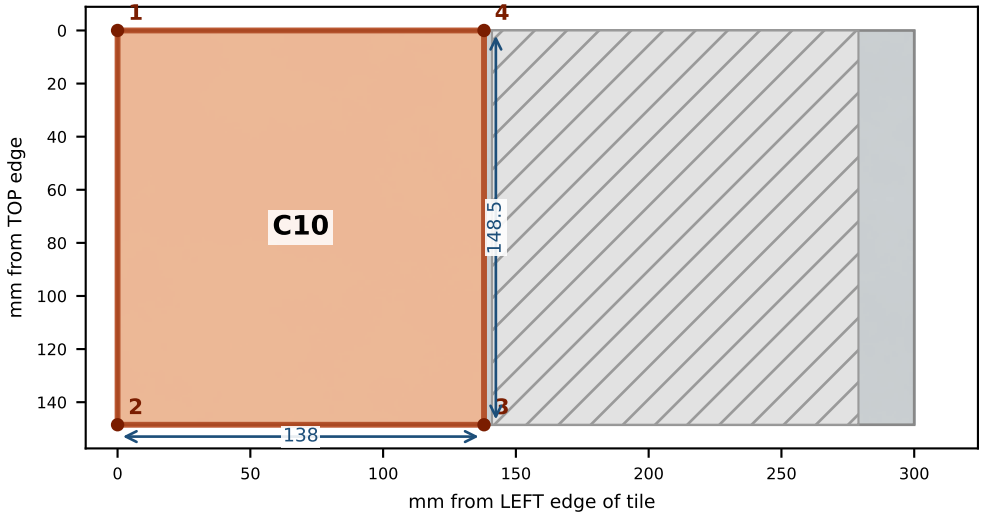


■ this piece ▨ other cuts ↔ mm

PIECE C10 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T37
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(138, 148.5)  4=(138, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2262, 130.5) mm on the wall.

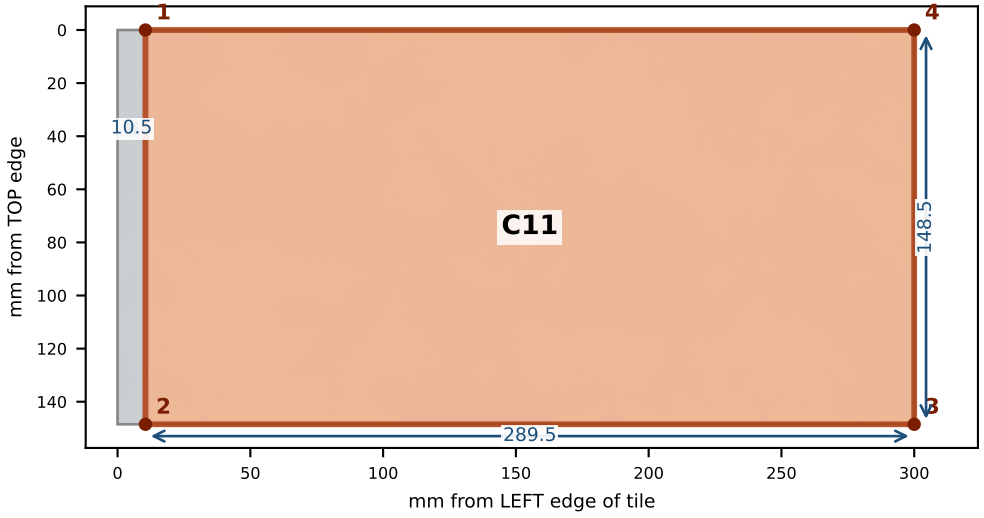


■ this piece ↔ mm

PIECE C11 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T14
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(10.5, 0)  2=(10.5, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 282) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

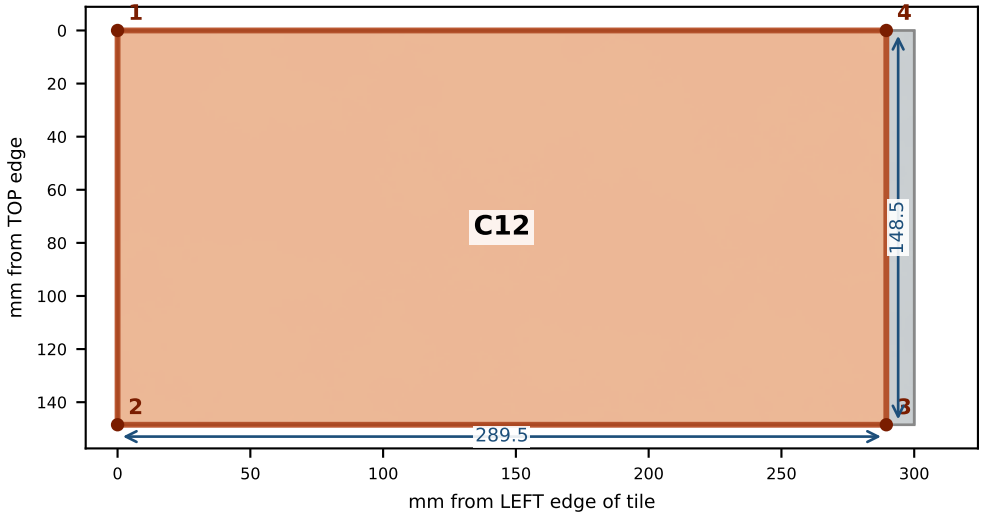


■ this piece ↔ mm

PIECE C12 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T15
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(289.5, 148.5)  4=(289.5, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2110.5, 282) mm on the wall.

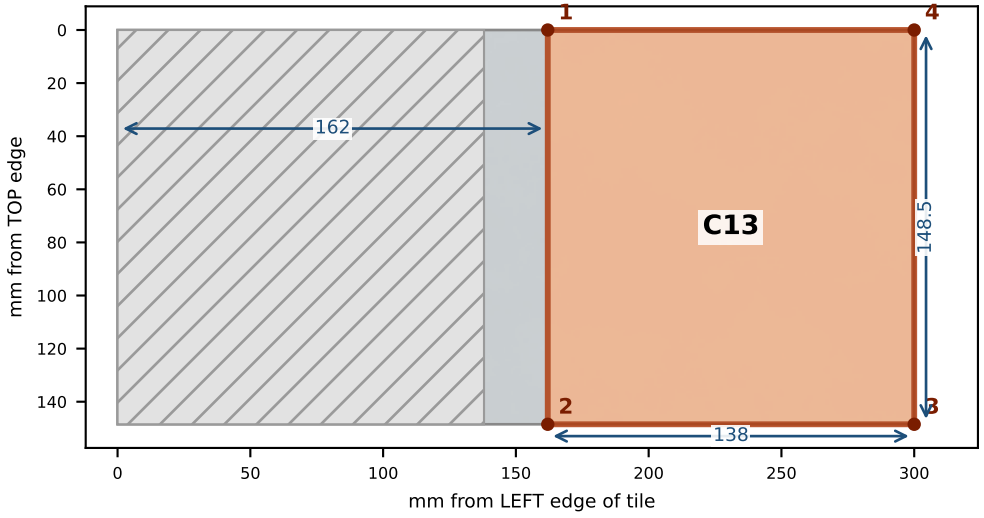


■ this piece ▨ other cuts ↔ mm

PIECE C13 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T38
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(162, 0)  2=(162, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 433.5) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

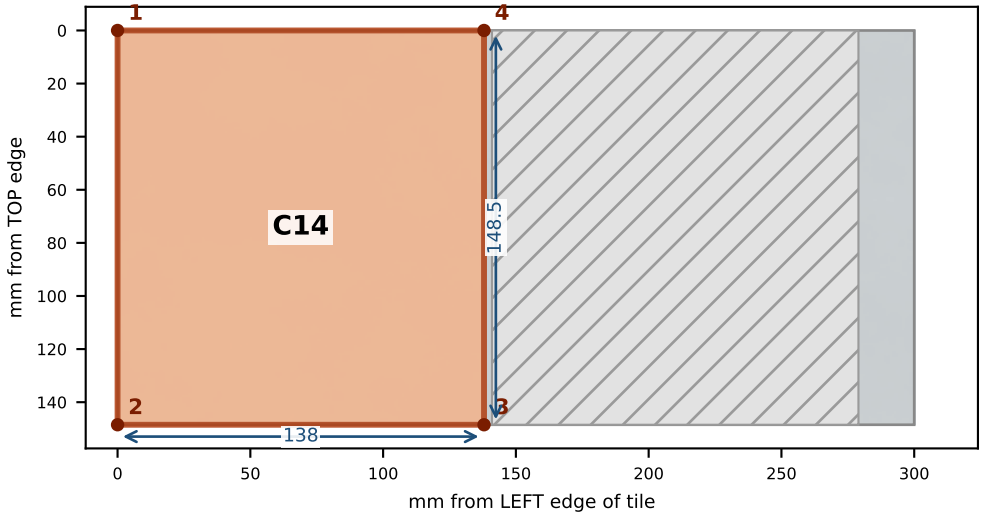


■ this piece ▨ other cuts ↔ mm

PIECE C14 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T39
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(138, 148.5)  4=(138, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2262, 433.5) mm on the wall.

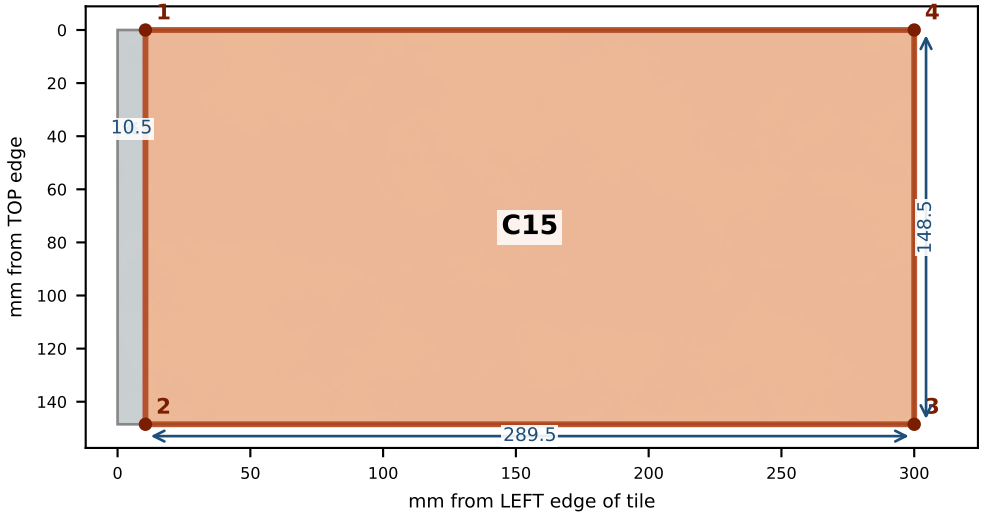


■ this piece ↔ mm

PIECE C15 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T16
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(10.5, 0)  2=(10.5, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 585) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

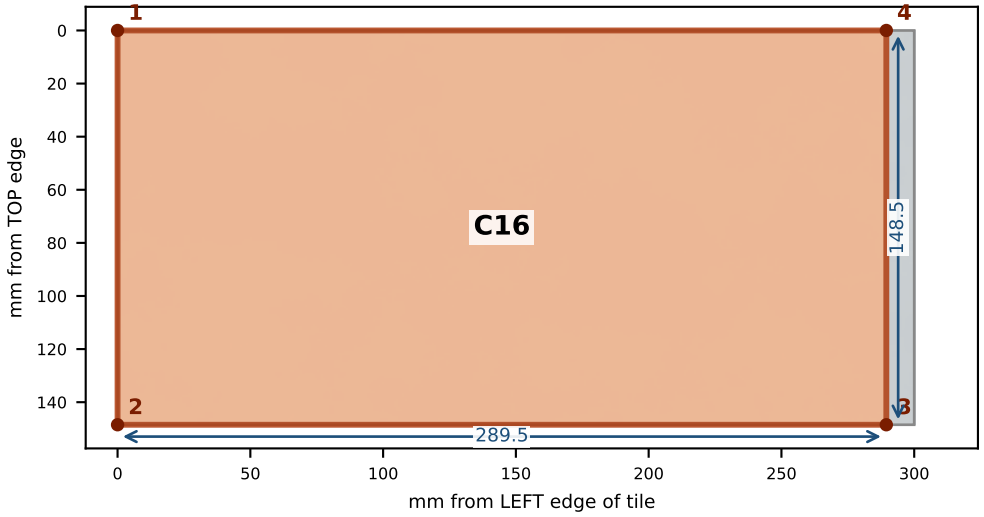


■ this piece ↔ mm

PIECE C16 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T17
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(289.5, 148.5)  4=(289.5, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2110.5, 585) mm on the wall.

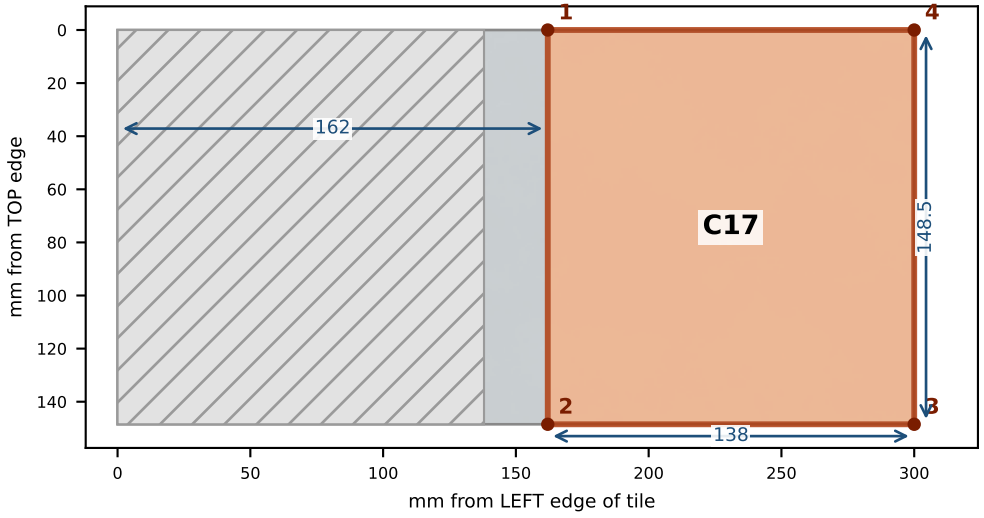


■ this piece ▨ other cuts ↔ mm

PIECE C17 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T40
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(162, 0)  2=(162, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 736.5) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

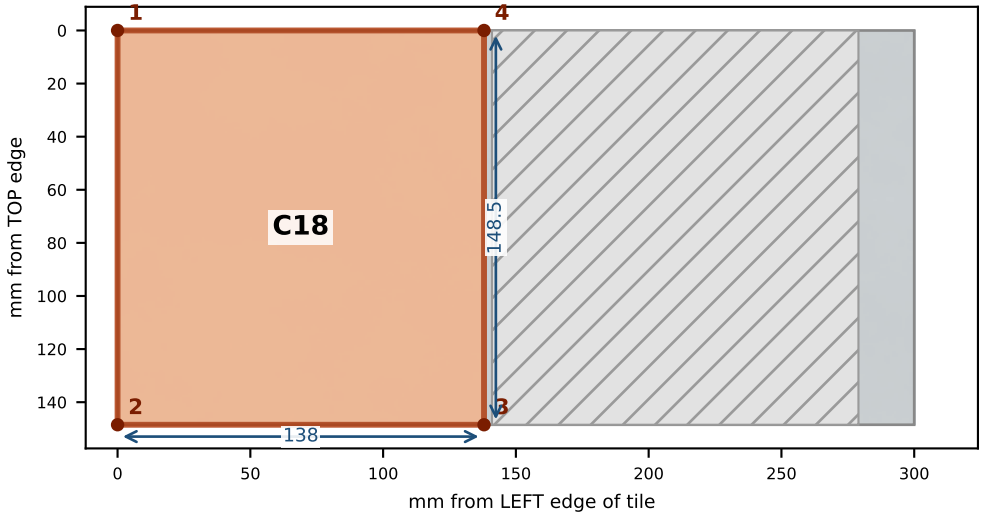


■ this piece ▨ other cuts ↔ mm

PIECE C18 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T41
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(138, 148.5)  4=(138, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2262, 736.5) mm on the wall.

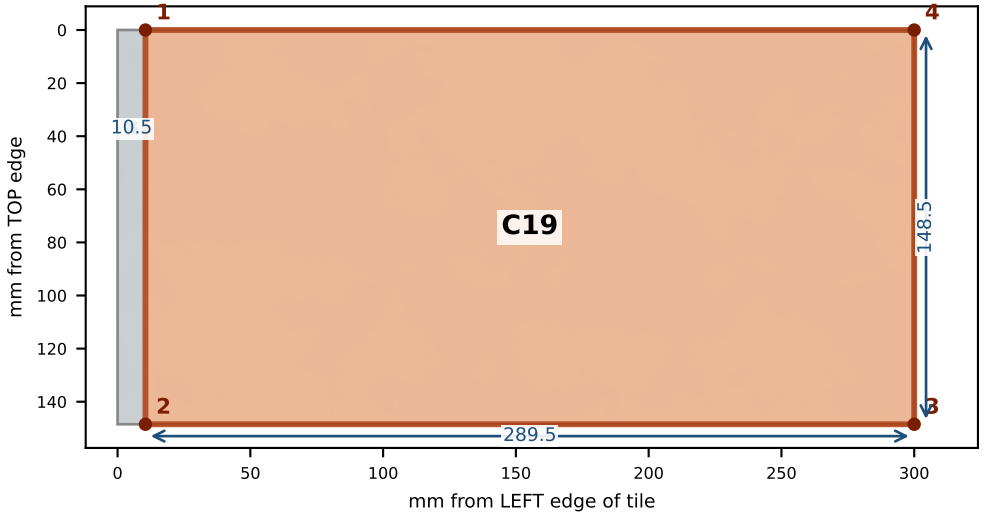


■ this piece ↔ mm

PIECE C19 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T18
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(10.5, 0)  2=(10.5, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 888) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

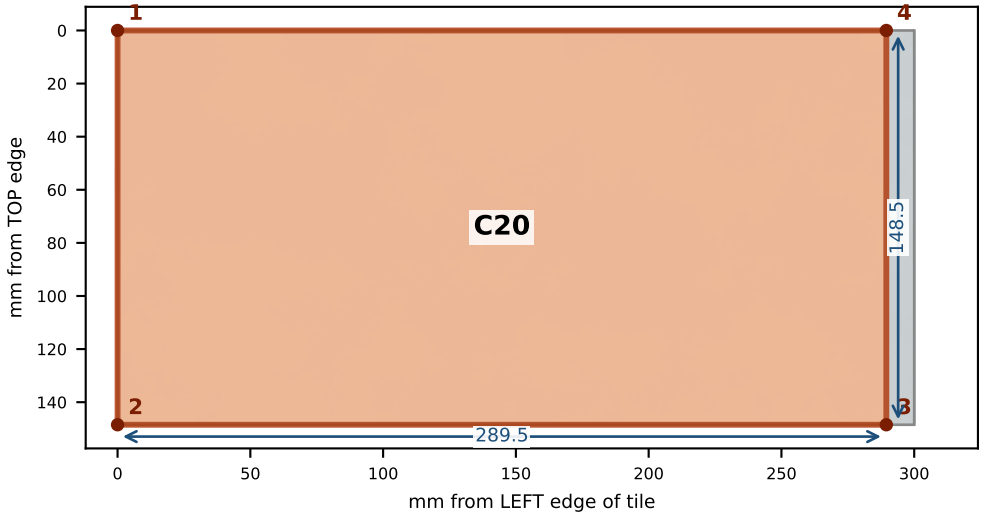


■ this piece ↔ mm

PIECE C20 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T19
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(289.5, 148.5)  4=(289.5, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2110.5, 888) mm on the wall.

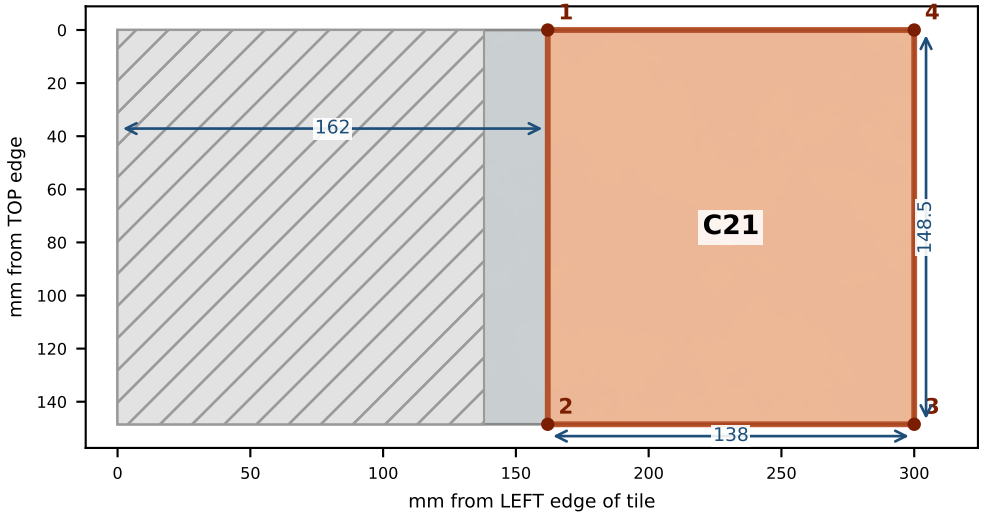


■ this piece ▨ other cuts ↔ mm

PIECE C21 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T42
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(162, 0)  2=(162, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 1039.5) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

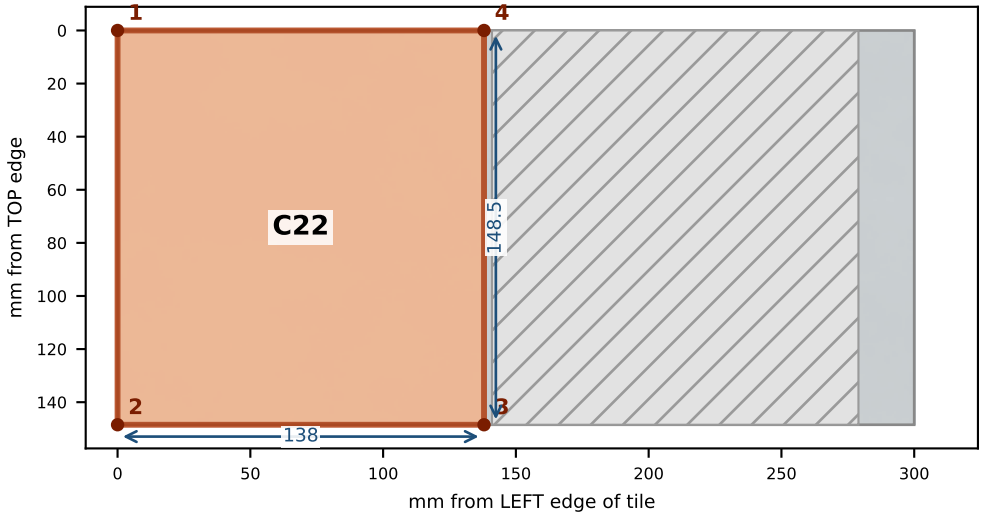


■ this piece ▨ other cuts ↔ mm

PIECE C22 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T43
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(138, 148.5)  4=(138, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2262, 1039.5) mm on the wall.

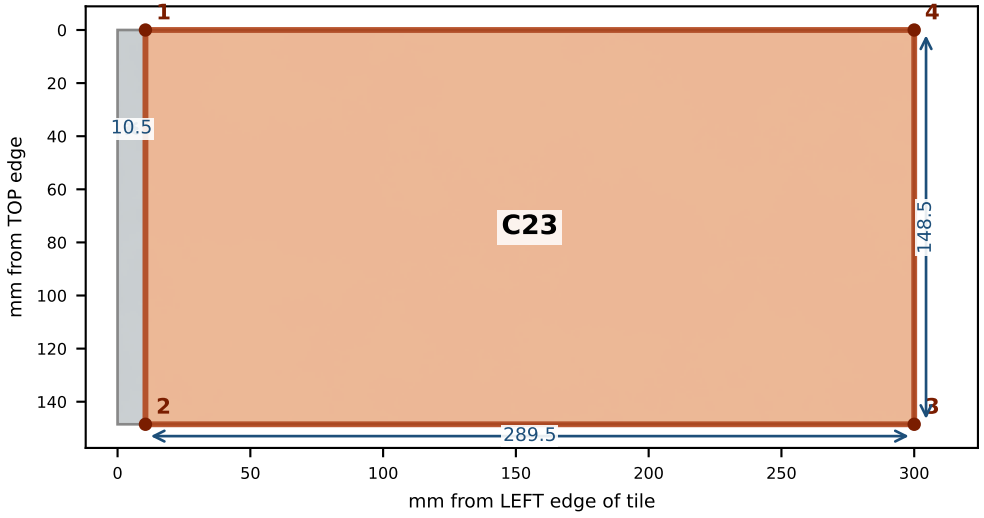


■ this piece ↔ mm

PIECE C23 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T20
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(10.5, 0)  2=(10.5, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 1191) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

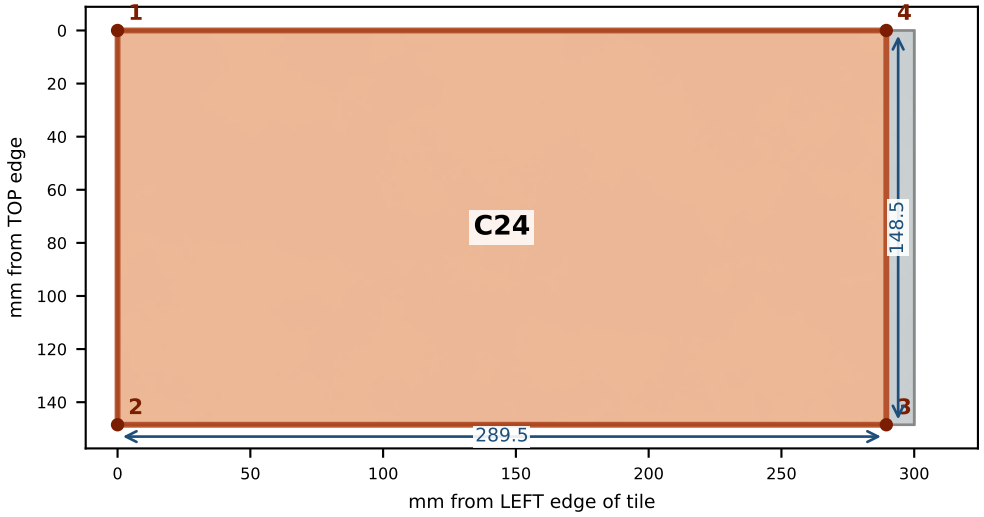


■ this piece ↔ mm

PIECE C24 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T21
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(289.5, 148.5)  4=(289.5, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2110.5, 1191) mm on the wall.

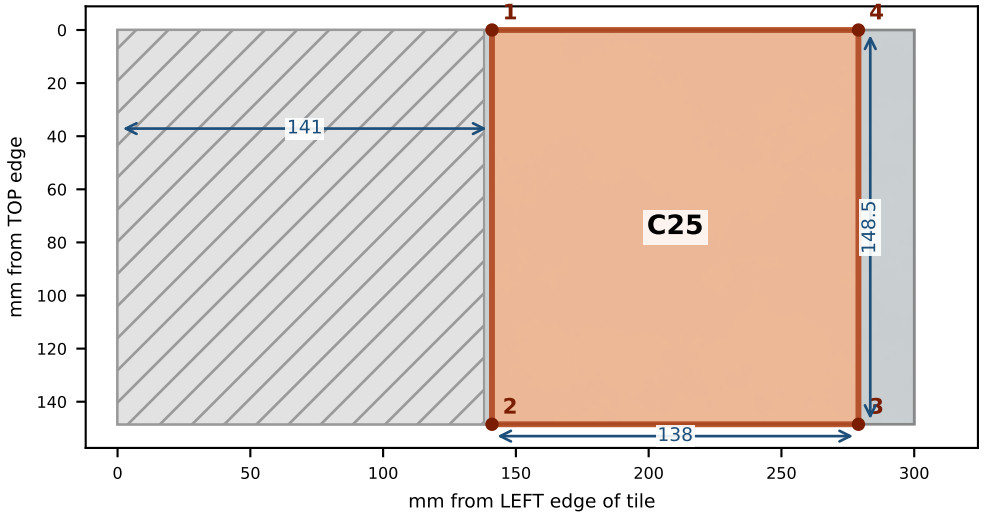


■ this piece ▨ other cuts ↔ mm

PIECE C25 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T43
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(141, 0)  2=(141, 148.5)  3=(279, 148.5)  4=(279, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 1342.5) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

■ this piece  ▨ other cuts  ↔ mm

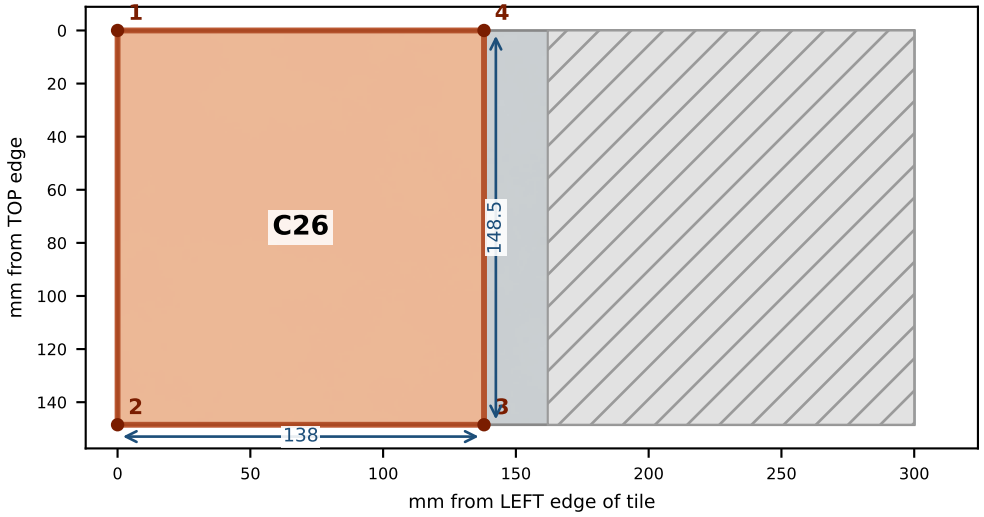


PIECE C26 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T42
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(138, 148.5)  4=(138, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2262, 1342.5) mm on the wall.

■ this piece  ↔ mm

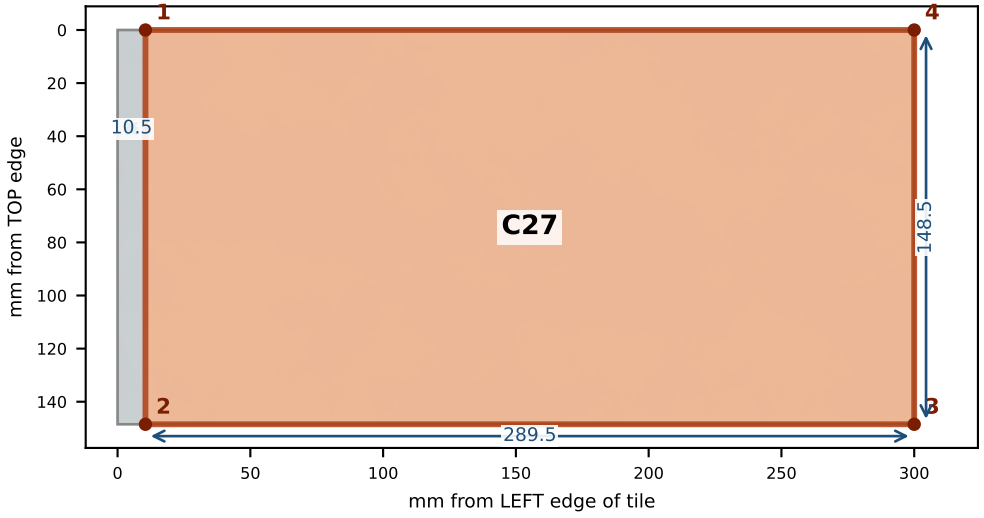


PIECE C27 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T22
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(10.5, 0)  2=(10.5, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 1494) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

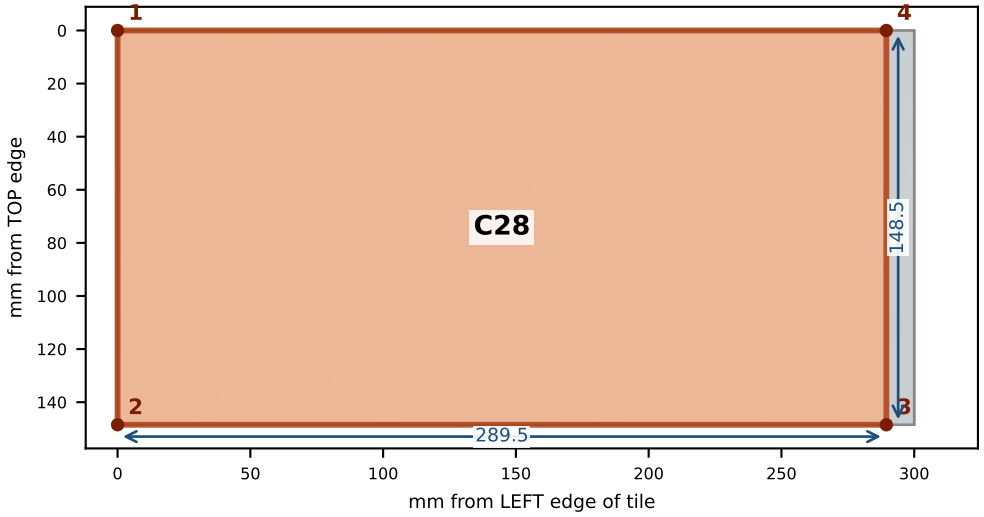


■ this piece ↔ mm

PIECE C28 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T23
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(289.5, 148.5)  4=(289.5, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2110.5, 1494) mm on the wall.

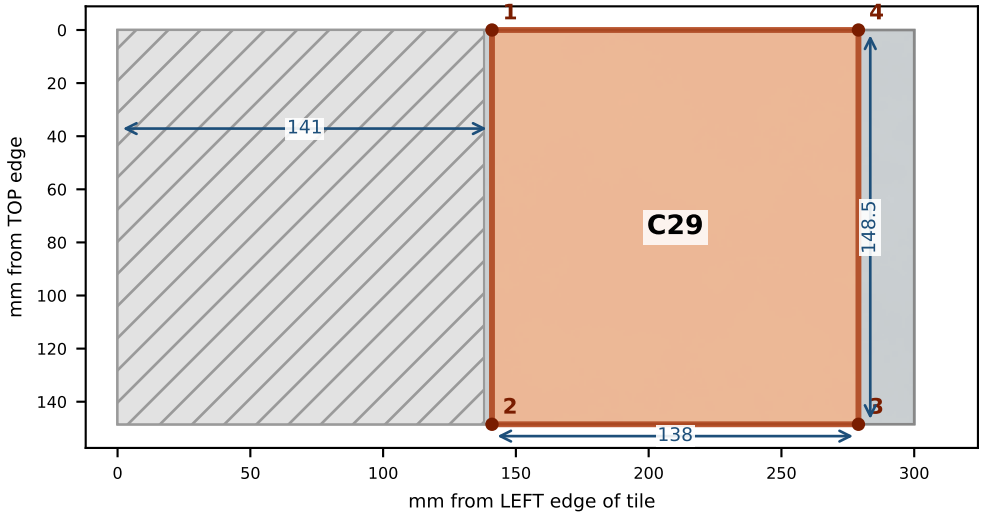


■ this piece ▨ other cuts ↔ mm

PIECE C29 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T41
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(141, 0)  2=(141, 148.5)  3=(279, 148.5)  4=(279, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 1645.5) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

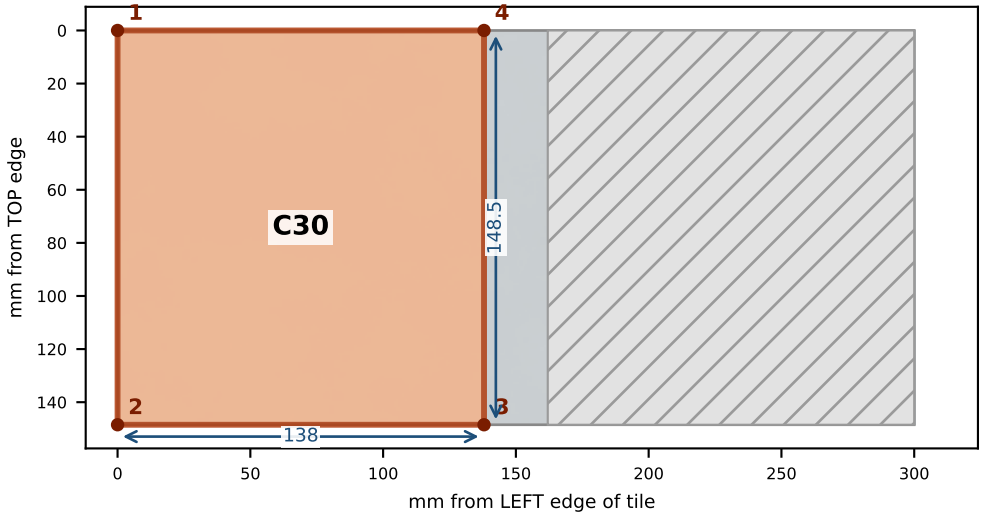


■ this piece ▨ other cuts ↔ mm

PIECE C30 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T40
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(138, 148.5)  4=(138, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2262, 1645.5) mm on the wall.

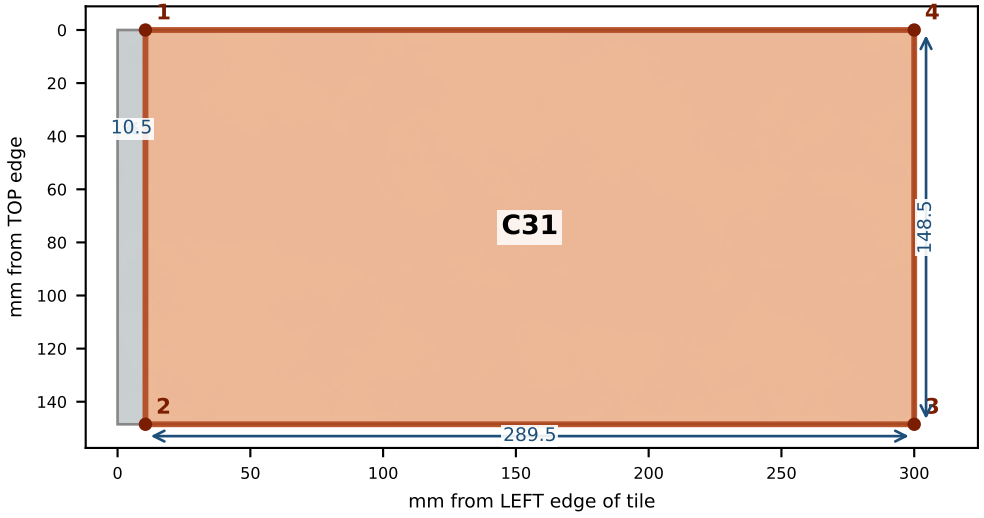


■ this piece ↔ mm

PIECE C31 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T24
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(10.5, 0)  2=(10.5, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 1797) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

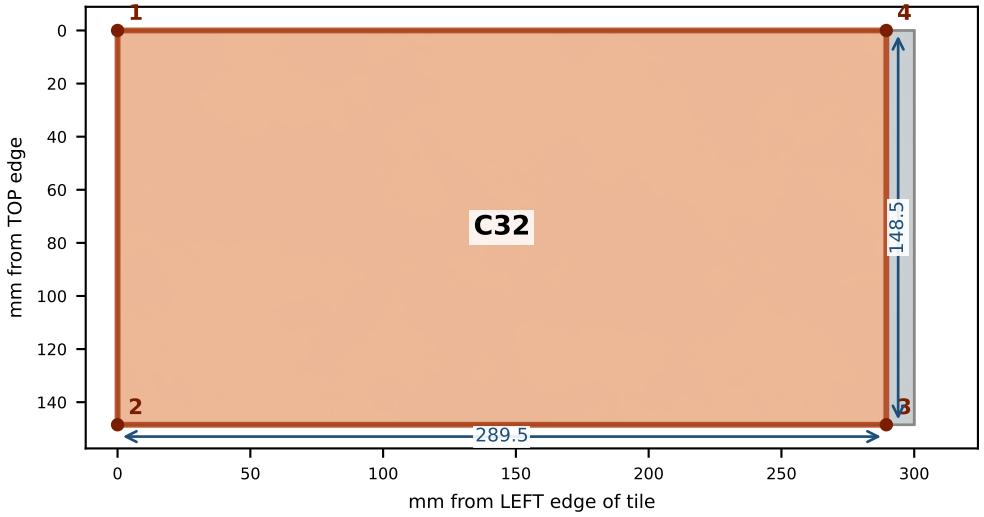


■ this piece ↔ mm

PIECE C32 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T25
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(289.5, 148.5)  4=(289.5, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2110.5, 1797) mm on the wall.

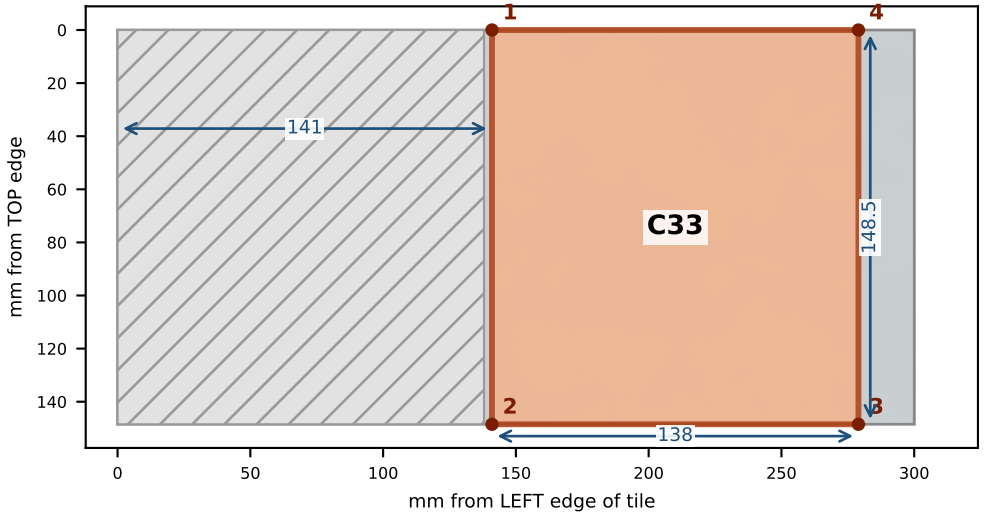


■ this piece ▨ other cuts ↔ mm

PIECE C33 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T39
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(141, 0)  2=(141, 148.5)  3=(279, 148.5)  4=(279, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 1948.5) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

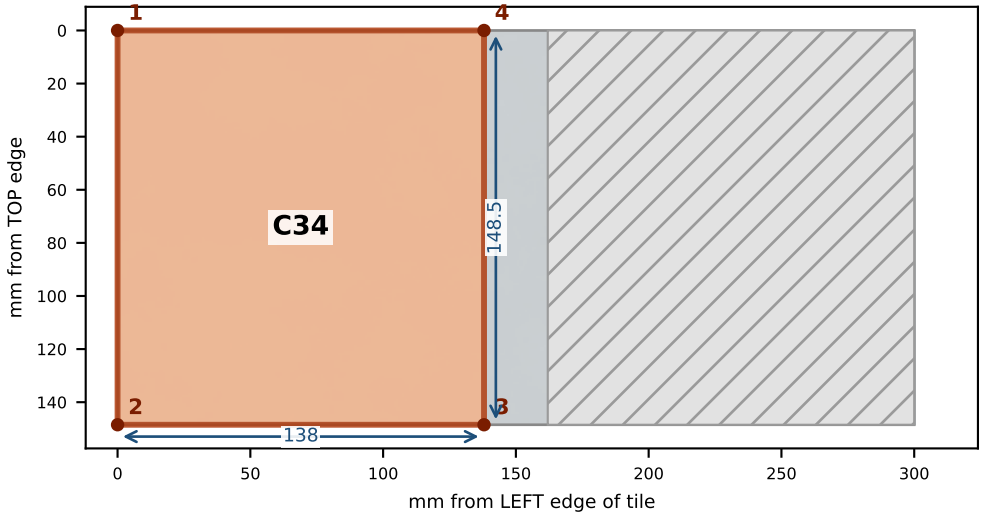


■ this piece ▨ other cuts ↔ mm

PIECE C34 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T38
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(138, 148.5)  4=(138, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2262, 1948.5) mm on the wall.

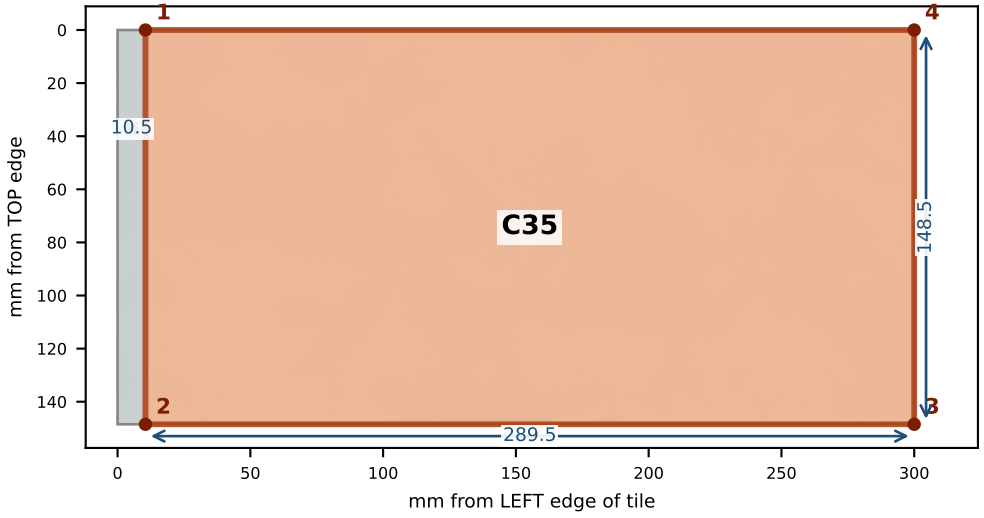


■ this piece ↔ mm

PIECE C35 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T26
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(10.5, 0)  2=(10.5, 148.5)  3=(300, 148.5)  4=(300, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 2100) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

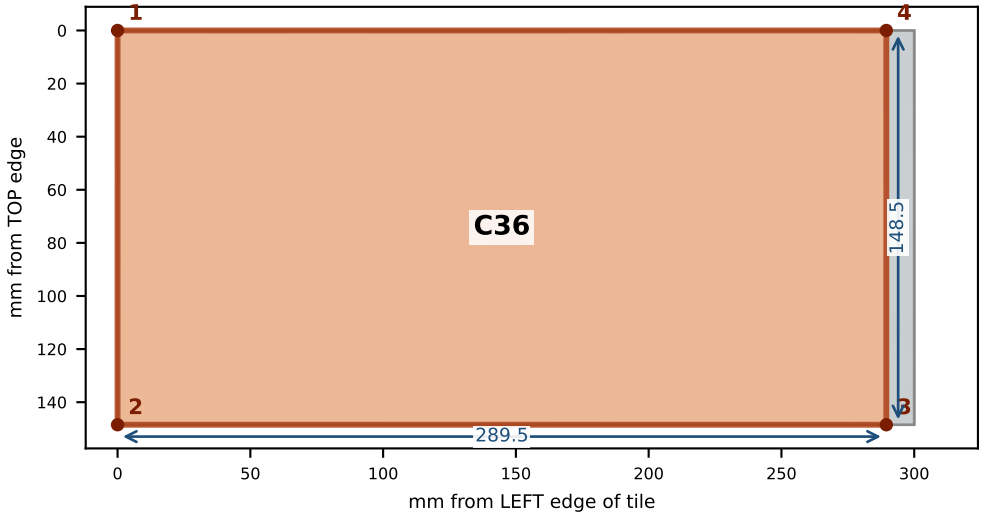


■ this piece ↔ mm

PIECE C36 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T27
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(289.5, 148.5)  4=(289.5, 0)
Outer size 289.5 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2110.5, 2100) mm on the wall.

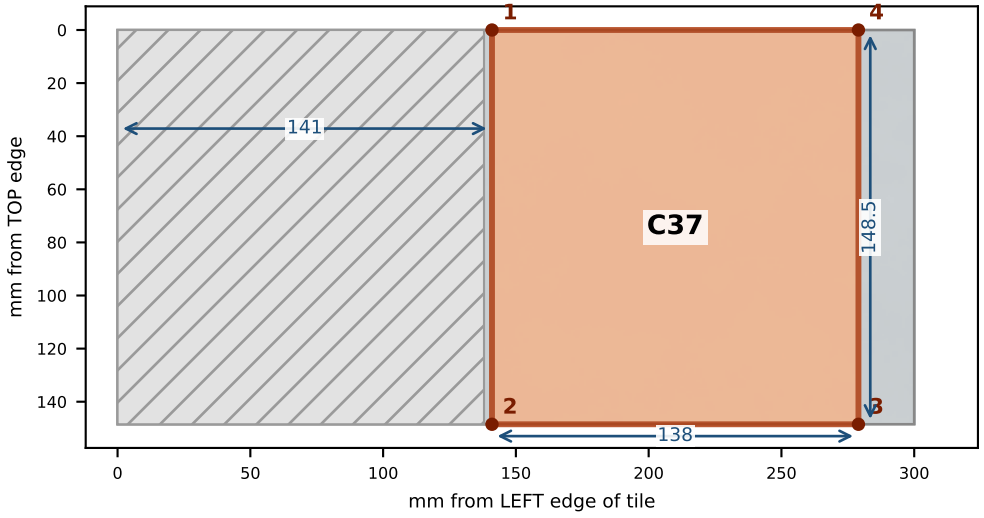


■ this piece ▨ other cuts ↔ mm

PIECE C37 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T37
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(141, 0)  2=(141, 148.5)  3=(279, 148.5)  4=(279, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (0, 2251.5) mm on the wall.

# CUTTING CARDS — how to mark and cut each piece

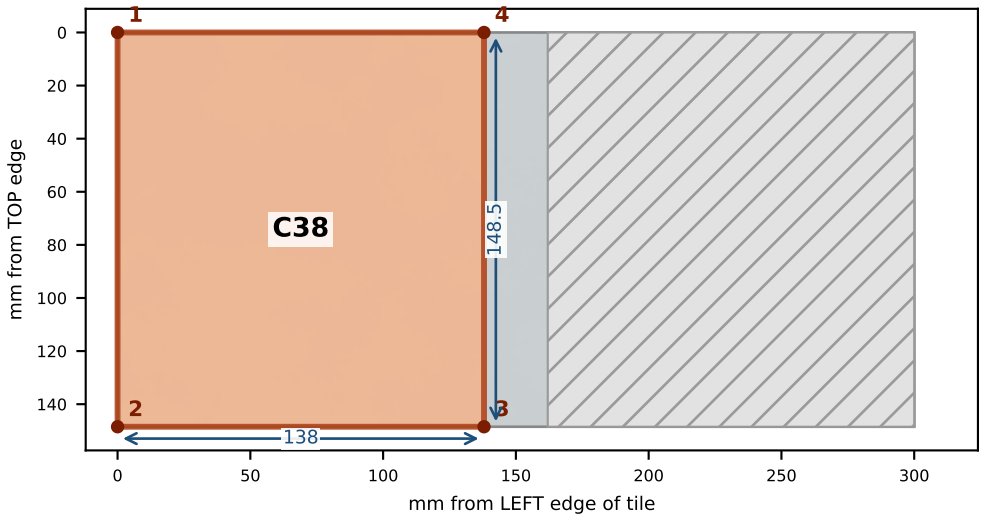


■ this piece ▨ other cuts ↔ mm

PIECE C38 · Sample bathroom / Wall 1 · Slate rectangle 300 × 148.5
Cut from: new tile T36
Mark corners (mm from tile LEFT, TOP edges, image upright):
1=(0, 0)  2=(0, 148.5)  3=(138, 148.5)  4=(138, 0)
Outer size 138 × 148.5 mm. Rotate 0° clockwise, face up.
Install with its top-left at (2262, 2251.5) mm on the wall.